

Philco Set Index

By Ron Ramirez © 2005-2011

The index below lists all known Philco Radio home models produced prior to the company's shutting down civilian production during World War II, and is the most complete listing of prewar Philco home radios ever compiled to date. The models are grouped by year.

Philco normally introduced a new model lineup in June of the previous calendar year, making changes to the lineup in January. Sometimes, though, they didn't wait until January to make changes; these off-season changes are noted within the index.

Philco Furniture History was my main source of information for this set index. Period Philco service information and advertising was also consulted to help fill in the gaps, as *Philco Furniture History* omits some models. If there seemed to be more than a reasonable doubt as to whether a set actually existed, the information was discarded.

It should be noted that between 1928 and early 1930, Philco used different model numbers for sets designed to operate on 25 to 40 cycle AC. These are listed below:

50-60 Cycle Model	25-40 Cycle Model
511	521
512	522
513	523
514	524
515	525
531	541
551	561
571	581
86	82
65	62
87	83
76	73
95	92

From June 1930 on, a set designed to operate on 25 to 40 cycle AC carried an "A" suffix; i.e. 20A, 77A, 96A, 111A, etc.

While comments are always welcome, the author assumes no responsibility for any inaccuracies in this rarity scale.

EXPLANATION OF COLUMNS USED:

Model – The model number of the radio.

Description – A very brief description of the radio.

Cab – Philco cabinet part number.

Notes – Brief notes are given here when deemed helpful.

Model	Description	Cab	Notes
1928			
221	Console Grand	J-1623	Speaker table
511	Table Spanish Brown	J-1618	
512	Table Mandarin Red	J-1618	
513	Table Labrador Grey	J-1618	
514	Table Nile Green	J-1618	
515	Table Impressionistic	J-1618	
531	Lowboy	J-1624	Drop-down front
551	Highboy	J-1625	
571	Radio-Phono Console		Never produced
1929 - January			
591	Highboy	J-1626	
86	Highboy (591)	J-1626	
86	Lowboy	J-1624	Drop-down front
86	Highboy	J-1625	
1929 - June			
65	Table Spanish Brown	J-1908	
65	Console	J-1951	
65	Lowboy	J-1905	
65	Highboy	J-1906	
65	Tudor Highboy	J-1919	
65	Highboy De Luxe	J-1912	
87	Lowboy	J-1905	
87	Highboy	J-1906	
87	Tudor Highboy	J-1919	

87	Highboy De Luxe	J-1912	
1929 - Fall			
40	Console	J-1951	May not have been produced
40	Lowboy	J-1905	
40	Highboy	J-1906	
40	Highboy De Luxe	J-1912	May not have been produced
76	Table Spanish Brown	J-1908	
76	Console	J-1951	
76	Lowboy	J-1905	
76	Highboy	J-1906	
76	Tudor Highboy	J-1919	May not have been produced
76	Highboy De Luxe	J-1912	May not have been produced
95	Table Spanish Brown	J-1908	
95	Lowboy	J-1905	
95	Highboy	J-1906	
95	Tudor Highboy	J-1919	
95	Highboy De Luxe	J-1912	
1930 - June			
30	Lowboy	30000	
30	Highboy	31000	
41	Console	J-1951	
41	Lowboy	30000	
41	Highboy	31000	
77	Table Spanish Brown	J-1908	
77	Console	J-1951	

77	Lowboy	3000	
96	Table Spanish Brown	J-1908	
96	Lowboy	3000	
96	Highboy	31000	
296	Lowboy Radio-Phono	32000	
1930 - August			
20	Baby Grand	34000	
Concert Grand	Radio-Phono Lowboy	33000	
1930 - October			
20	Lowboy Consolette	36000	
1931 - January			
20	Baby Grand Revised	34000A	
20	Lowboy Revised	40000	
111	Lowboy	30000	
111	Highboy w/doors	37000	
211	Lowboy Radio-Phono	38000	
220	Lowboy Radio-Phono	39000	
1931 - March			
21	Baby Grand	42000	
21	Lowboy	40000	
46	Baby Grand	42000	
46	Lowboy	40000	
	Baby Grand Table	34600	
1931 - June			
35	Baby Grand	42000A	
35	Highboy	33600	
46	Highboy	33600	
70	Baby Grand	42000A	Walnut
70	Baby Grand		Mahogany
70	Lowboy	45000	
70	Highboy	33600	
90	Baby Grand	46000	
90	Lowboy	47000	
90	Highboy w/doors	48000	
112	Lowboy Bel Geddes	49000	
112	Highboy	31600	Sliding doors
212	Lowboy Radio-Phono	32600	
270	Lowboy Radio-Phono	30600	
370	Lazyboy	44000	
	Baby Grand Table	43000	
1931 - Fall			
50	Baby Grand	42000A	Similar to 70 Baby Grand
50	Baby Grand	36600	
50	Lowboy	38600	
570	Grandfather Clock Bookcase	39600	
A	Clock Timer	37600	
1932 - January			
4	Table SW Converter	40600	
51	Baby Grand	36600	In Model 50 Baby Grand cabinet
51	Baby Grand	41600	
51	Lowboy	38600	
90X	Lowboy	45600	
112X	Lowboy	42600	
470	Lowboy AM/SW	43600	Dual chassis
490	Lowboy AM/SW	43600	Dual chassis
551	Colonial Clock	44600	
	Hanging Shelf for 551 Clock	49600	No photo available
	Speaker Switch Box	46600	No photo available
1932 - June			

15X	Lowboy	32300	
15DX	Lowboy	32400	
22L	Lowboy Radio-Phono	31200	
23X	Lowboy Radio-Phono	32500	
24L	Radio-Phono		52 chassis
25L	Radio-Phono		43 chassis
36B	Baby Grand	30300	
36D	Highboy w/doors	31500	
36L	Lowboy, early prod.	34300	
43B	Baby Grand		
43H	Highboy	33800	
43X	Lowboy	33900	
47B	Baby Grand	30300	
47D	Highboy w/doors	31500	
47H	Highboy	30900	
47X	Lowboy	34200	
52B	Baby Grand	30200	
52C	Table	31300	
52L	Lowboy	34900	
52	Colonial Clock		Uncertain if produced
52	Grandfather Clock		Same as 570 cabinet
71B	Baby Grand	30300	
71D	Highboy w/doors	31500	
71L	Lowboy	31400	Same as 70 Highboy
71LZ	Chairside	31500	Same as 370 cabinet
71H	Highboy	30900	
71	Grandfather Clock		Same as 570 cabinet
91B	Baby Grand	30400	
91D	Highboy w/doors	31900	
91L	Lowboy	31800	
91H	Highboy	34500	
91X	Lowboy	32200	
91X	Lowboy	35100	Canadian version
247B	Baby Grand	30300	For export?
248B	Baby Grand	34800	For export?
252L	Lowboy	34900	For export?
271B	Baby Grand	30300	For export?
R-3	Extension Speaker	32800	
1932 - Fall			
36L	Lowboy, later prod.	36300	
37C	Table		
37L	Lowboy		
43X	Lowboy	35300	
48B	Baby Grand	30200	
48C	Table	31300	
48L	Lowboy	34900	
71X	Lowboy 32200	38500	
80B	Baby Grand	36200	
80C	Table		
80P	Portable	36200	
80	Colonial Clock		
271X	Lowboy	35400	For export?
1933 - January			
14LZX-SU	Speaker for Lazyboy	39200	
14LZX-TU	Lazyboy	39300	
19B	Baby Grand AM only		
19LZ	Lazyboy	40500	
19LZX-SU	Speaker for Lazyboy		
19LZX-TU	Lazyboy		
26L	Radio-Phono		19 chassis
27L	Radio-Phono		89 chassis
53C	Table	41800	
81B	Baby Grand	36200	
89B	Baby Grand AM only	39500	
89B	Baby Grand		

	AM/flat face		
89L	Lowboy AM only		
91RX-TU	Speaker for Lazyboy		
91RX-SU	Lazyboy		
1933 - June			
14L	Lowboy	10033	
14X	Console	10030	
16B	Baby Grand	10040	
16L	Lowboy	10038	
16X	Lowboy	10034	
17B	Baby Grand	10041	
17L	Lowboy	10037	
17XS	Console	10063-C	
19B	Baby Grand AM/SW	10009	
19D	Highboy w/doors		May not have been produced
19H	Highboy		
19TX-SU	Speaker cabinet	40900	
19TX-TU	Table w/separate speaker	10022	
19X	Lowboy	10024	
43H	Highboy	10015	
43X	Lowboy		
47D	Highboy w/doors		
47H	Highboy		
47X	Console	10025	
54C	Compact		
57C	Compact		
89B	Baby Grand AM/SW		
89L	Lowboy AM/SW		
91D	Highboy w/doors		
91L	Lowboy		
91H	Highboy		
91X	Console	10025	Same as Canada model
1933 - July-August			
14B	Baby Grand	10070	
14D	Highboy w/doors		
14HS	Highboy	10066-D	
14L	Lowboy	10033	
14RX-SU	Separate speaker	10045	
14RX-TU	Lazyboy w/separate speaker	10042-C	
14X	Console	10069-B	
16PX-SU	Century of Progress speaker	10052	Very rare. None known to exist
16PX-TU	Century of Progress chairside	10051	Very rare. None known to exist
16RX-SU	Separate speaker	10045	
16RX-TU	Lazyboy w/separate speaker	10042	
16RX-TU	Lazyboy w/separate speaker	10042-B	
17D	Highboy w/doors	10071-C	
17RX-SU	Separate speaker	10045	
17RX-TU	Lazyboy w/separate speaker	10042-A	
18B	Baby Grand	10070	
18D	Highboy w/doors	10071-A	10019
18H	Highboy		
18LS	Lowboy	10054-C	
18RX-SU	Separate speaker	10045-A	
18RX-SU	Separate speaker	10045-B	
18RX-	Lazyboy w/separate	10042-D	

TU	speaker		
18XS	Console	10063-A	
19X	Console	10063-B	
38B	Baby Grand	10059	
38H	Highboy	10066-C	
38L	Lowboy	10060	
60B	Baby Grand	10059	
60L	Lowboy	10060	
1933 - Fall?			
14X	Console		
17LS	Lowboy	10076-B	
18H	Highboy	10066-A	
18L	Lowboy	10076	
18X	Console	10069-C	
19L	Lowboy		
44B	Baby Grand		
44HS	Highboy	10066-B	
1934 - January			
14MX	Console	10098-B	
18MX	Console	10098-A	
19X	Console	10094-A	
32B	Baby Grand		
32L	Lowboy		
34B	Baby Grand		
34L	Lowboy		
38B	Baby Grand	10100	
44B	Baby Grand	10103	
44X	Console	10094-B	
54C	Compact Table	10106	
58C	Compact Table	10106	
60B	Baby Grand	10100	
60MB	Baby Grand Moderne	10099	
84B	Baby Grand	10102	
314MX	Console - Canada	10098-E	
318MX	Console - Canada	10098-D	
500L	Lowboy Radio-Phono	10085-C	16 chassis
503L	Lowboy Radio-Phono		18 chassis
504L	Lowboy Radio-Phono		44 chassis
505L	Lowboy Radio-Phono	10085	60 chassis
1934 - June (1935)			
16B	Baby Grand 5-band		
16L	Lowboy		
16X	Console		
16RX-SU	Speaker cabinet		
16RX-TU	Chairside w/separate speaker		
18B	Baby Grand	10118-A	
18H	Highboy	10117	
18MX	Console		
18X	Console		
28C	Compact Table	10111	
28L	Lowboy	10110	
29D	Highboy w/doors	10120A	
29X	Console	10094	
29TX-SU	Separate speaker	10146	
29TX-TU	Table w/sep. spkr.	10145	Straight sides
29TX-TU	Table w/sep. spkr.		Slanted sides
32B	Baby Grand	10116	
32L	Lowboy	10110	
34B	Baby Grand	10116	
34L	Lowboy	10126-A	
38B	Baby Grand	10112-A	
38L	Lowboy	10110	
39B	Baby Grand	10119	
45C	Compact Table	10111	
45L	Lowboy	10110	

49B	Baby Grand	10118-A
49D	Highboy w/doors	10120-A
49H	Highboy	10117
49X	Console	10069
49X	Console	10094
54S	Compact Table	10134
59C	Compact Table	10106
59S	Compact Table	10134
60B	Baby Grand	10112-A
66B	Baby Grand Moderne	10099-A
89B	Baby Grand	
89L	Lowboy	
118B	Baby Grand	10118-A
118D	Highboy w/doors	10120-A
118H	Highboy	10117
118MX	Console	10098
118RX-SU	Separate speaker	10122-A
118RX-TU	Lazyboy w/separate speaker	10121-A
118X	Console	10069
144B	Baby Grand	10116
144D	Highboy w/doors	10120-A
144H	Highboy	10117
144X	Console	10069
200X	Console	10128-A
500X	Console Radio-Phono	10132
501X	Console Radio-Phono	10132
503L	Lowboy Radio-Phono	10123-A
506L	Lowboy Radio-Phono	10123-A
507L	Lowboy Radio-Phono	10123-A
1934 - August? (1935)		
49X	Console	10144-A
118X	Console	10144-A
144X	Console	10144-A
201X	Console	10140-A
509X	Console Radio-Phono	10147-A
1934 - Fall (1935)		
16B	Baby Grand	Semi-pointed top
29X	Console	10137-A
66B	Baby Grand	10119
1935 - January (1935)		
16B	Baby Grand	10157-A
18B	Baby Grand	10161
28CSX	Chairside	10163-A
28D	Highboy w/doors	10159-B
28F	Console	10158
29CSX	Chairside	10163-A
32B	Baby Grand	10160
34B	Baby Grand	10160
39F	Console	10158
45F	Console	10158-A
49B	Baby Grand	10161
49D	Highboy w/doors	10159-A
54C	Compact Table	10155
59C	Compact Table	10155
66L	Lowboy	10110
66S	Baby Grand	10162-A
84B	Baby Grand	10156-A
97B	Baby Grand	10160
97X	Console	10144
118B	Baby Grand	10161-A
118D	Highboy w/doors	10159-A
144B	Baby Grand	10160
1935 - June (1936)		

32B	Baby Grand	10183
32F	Console	10175
38B	Baby Grand, larger escutcheon	10112 Same cabinet as June 1934 38B
38F	Console	10174-C
54C	Compact Table	10155-B
54S	Compact Table - ram-head face	10168
59C	Compact Table	10155-B
59S	Compact Table - ram-head face	10168
60B	Baby Grand, larger escutcheon	10112 Same cabinet as June 1934 60B
60F	Console	10174-B
89B	Baby Grand	Same cabinet as June 1934 89B
89F	Console	10175
116B	Baby Grand	10185-A
116PX	Console Radio- Phono	10200-A
116X	Console	10177-A
610B	Baby Grand	10178-A
610F	Console	10174-A
610PF	Console Radio- Phono	10199-A
611B	Baby Grand	10178-A
611F	Console	10175
620B	Baby Grand	10179-A
620F	Console	10175
623B	Baby Grand	10179-A
623F	Console	10175
630B	Baby Grand	10182-B
630CSX	Chairside	10186-A
630PF	Console Radio- Phono	10199-A
630X	Console	10172-A
640B	Baby Grand	10183
640PF	Console Radio- Phono	10199-A
640X	Console	10172-B
641B	Baby Grand	10183
641X	Console	10173-C
642B	Baby Grand	10179-A
642F	Console	10175
643B	Baby Grand	10183
643X	Console	10173-B
650B	Baby Grand	10183-A
650H	Lowboy, controls on top	10170-A
650MX	Console, controls on top	10187-A
650PX	Console Radio- Phono	10190-A
650RX	Chairside w/separate speaker	10189-A
650X	Console	10173-A
660L	Console, controls on top	10171-A
660X	Console	10176-A
680X	Console, controls on top	10184-A
1936 - January (1936)		
38B	Baby Grand	10207-A
60B	Baby Grand	10207-A
84B	Baby Grand	10206-A
89B	Baby Grand	10208-A
116B	Baby Grand	10211-A
600C	Compact Table	10214-A
602C	Compact Table	10214-A
604C	Compact Table	Controls on top
610T	Table	10210-A
611J	Console	10218-A
611T	Table	10210-A

623B	Baby Grand	10209-A	
623K	Console	10216-A	
624B	Baby Grand	10209-A	
624F	Console		
624K	Console	10216-B	
625B	Baby Grand	10209-A	
625J	Console	10218-A	
625S	Console		
635B	Baby Grand (630B)	10182-A	
635CSX	Chairside (630CSX)	10186-A	
635PF	Console Radio-Phono (610PF)	10199	
635X	Console	10195-B	
641B	Baby Grand	10215-A	
642B	Baby Grand	10209-A	
643B	Baby Grand	10215-A	
645B	Baby Grand	10215-A	
645K	Console	10216-A	
651B	Baby Grand	10215-A	
651X	Console (650X)	10173-A	
655B	Baby Grand	10215-A	
655H	Lowboy, controls on top (650H)	10170-A	
655MX	Console, controls on top (650MX)	10187-A	
655PX	Console Radio-Phono (650PX)		
655RX-TU	Chairside w/separate speaker (650RX)	10188	
655RX-SU	Speaker (650RX)	10189-A	
655X	Console (650X)	10173-A	
665L	Lowboy, controls on top (660L)	10171-A	
665X	Console	10212	
680X	Console	10213-A	Exposed controls on front panel
1936 - June (1937)			
37-33B	Baby Grand	10227-B	
37-33F	Console	10250-D	
37-34B	Baby Grand	10226-A	
37-34F	Console	10250-E	
37-38B	Baby Grand	10229-B	
37-38F	Console		
37-38J	Console	10230-B	
37-60B	Baby Grand	10226-A	
37-60F	Console	10250-A	
37-61B	Baby Grand	10226-C	
37-61F	Console	10250-F	
37-84B	Baby Grand	10227-B	
37-89B	Baby Grand	10226-B	
37-89F	Console	10250-B	
37-116X	Console, standard		
37-116X	Console, De Luxe, auto. tuning	10242-A	
37-600C	Table Model	10224	
37-602C	Table Model	10224	
37-604C	Table Model	10220	
37-610B	Baby Grand	10229-A	
37-610J	Console	10230-A	
37-610PF	Console Radio-Phono	10259-A	
37-610T	Table Model	10235-A	Walnut
37-610T	Table Model	10235-A	Maple
37-611B	Baby Grand	10229-A	
37-611F	Console	10250-C	
37-611J	Console	10231-A	
37-611T	Table Model	10235-A	
37-620B	Baby Grand	10232-A	
37-620CS	Chairside	10247-A	
37-620J	Console	10231-A	

37-623B	Baby Grand	10232-A	
37-623J	Console	10231-B	
37-624B	Baby Grand	10232-A	
37-624J	Console	10231-B	
37-630T	Table Model	10236-A	
37-630X	Console	10237-A	
37-640B	Baby Grand	10233-A	
37-640MX	Console	10256-A	
37-640X	Console	10234-A	
37-641B	Baby Grand	10233-A	
37-641MX	Console	10256-A	
37-641X	Console	10234-A	
37-643B	Baby Grand	10246-B	
37-643X	Console	10239-A	
37-650B	Baby Grand	10246-B	
37-650PX	Console Radio-Phono	10261-A	
37-650X	Console	10238-A	
37-660B	Baby Grand	10246-A	
37-660X	Console	10239-A	
37-665B	Baby Grand	10246-A	
37-665X	Console	10239-A	
37-670B	Baby Grand	10244-A	
37-670X	Console	10240-A	
37-675X	Console, standard		
37-675X	Console, De Luxe, auto. tuning	10241-A	
37-690X	Console	10243-A	
37-2620B	Baby Grand (37-620B)	10232-A	
37-2620J	Console (37-620J)		
37-2650B	Baby Grand (37-650B)	10246-E	
37-2650X	Console (37-650X)	10238-A	
37-2670B	Baby Grand (37-670B)	10273-A	
37-2670X	Console (37-670X)		
1936 - Fall (September?)			
37-11X	Console	10240-B	
	Philco Phone control unit	10285	
	Philco Phone remote unit	10284	
1937 - January (1937)			
37-9X	Console	10268-A	
37-10X	Console		
37-11X	Console	10275-A	
37-33F	Console	10271-D	
37-34B	Baby Grand	10274-C	
37-34F	Console	10271-E	
37-38B	Baby Grand	10274-B	
37-38F	Console	10271-H	
37-60B	Baby Grand	10274-B	
37-60F	Console	10271-A	
37-61B	Baby Grand	10274-A	
37-61F	Console	10271-F	
37-62T	Table Model	10277-A	Early version
37-62T	Table Model	10280-A	Later version
37-84B	Baby Grand		Undocumented but known to exist
37-89B	Baby Grand	10274-D	
37-89F	Console	10271-B	
37-93B	Baby Grand	10227-B	
37-610B	Baby Grand	10276-A	
37-610T	Table Model	10235-G	
37-611B	Baby Grand	10276-B	
37-611F	Console	10271-C	
37-611K	Console	10270-B	

37-611T	Table Model	10235-G
37-620K	Console	10270-A
37-630X	Console	10272-A
37-630MX	Console	
37-641X	Console	10272-A
37-643X	Console	
37-665X	Console	
37-2670X	Console	
1937 - June (1938)		
38-1XX	Console	10299-A
38-2XX	Console	10300-A
38-3XX	Console	10290-A
38-4XX	Console	10298-A
38-5B	Baby Grand	10294-A
38-5X	Console	10289-A
38-7CS	Chairside	10305-A
38-7T	Table Model	10297-A
38-7XX	Console	10293-A
38-8X	Console	10288-A
38-9K	Console	10287-A
38-9T	Table Model	10291-A
38-10F	Console	10286-A
38-10T	Table Model	10292-A
38-116XX	Console	10295-A
38-12C	Compact, walnut	10302
38-12CI	Compact, ivory	10302-A
38-12T	Table Model	10307-B
38-14CS	Chairside	10315-A
38-14T	Table Model	10307-A
38-15CS	Chairside	10315-A
38-15T	Table Model	10307-A
38-22CS	Chairside	10305-A
38-22T	Table Model	10297-A
38-22XX	Console	10293-A
38-23K	Console	10287-A
38-23T	Table Model	10292-A
38-23X	Console	10288-A
38-33B	Baby Grand	10308
38-33F	Console	10286-F
38-34B	Baby Grand	10274-F
38-34F	Console	10286-C
38-35B	Baby Grand	10308-A
38-35F	Console	10286-F
38-38K	Console	10287-D
38-38T	Table Model	10292-A
38-38X	Console	10288-B
38-39K	Console	10287-E
38-39T	Table Model	10297-B
38-39X	Console	10288-C
38-40K	Console	10287-E
38-40T	Table Model	10297-B
38-40X	Console	19288-C
38-60B	Baby Grand	10274-D
38-60F	Console	10286-B
38-62F	Console	10271
38-62T	Table Model	10280-A
38-89B	Baby Grand	10274-D
38-89K	Console	10287-B
38-93B	Baby Grand	10306
38-610B	Baby Grand	10276-A
38-610J	Console	10231-A
38-620T	Table Model	10235-G
38-623K	Console	10287-J
38-623T	Table Model	10235-G
38-624K	Console	10287-J
38-624T	Table Model	10235-G
38-630K	Console	10287-F
38-643B	Baby Grand	10294-B
38-643X	Console	10238-C
38-665B	Baby Grand	10294-B

38-665X	Console	10238-B	
38-690XX	Console	10296-A	
38-2620T	Table Model	10235-G	
38-2630K	Console	10287-F	
38-2650B	Baby Grand	10294-C	
38-2650X	Console	10238-A	
38-2670B	Baby Grand (37-2670B)	10273-A	
38-2670X	Console	10275-B	
	Automatic Control Clock	218219	Made by GE for Philco
1938 - January (1938)			
38-8XF	Console	10326-A	
38-10XF	Console	10326-A	
38-12CB	Compact Bakelite	10313-C	
38-12CBI	Compact Bakelite Ivory	10313-A	
38-14CB	Compact Bakelite	10313-B	
38-14CBI	Compact Bakelite Ivory	10313-D	
38-15CB	Compact Bakelite	10313-B	
38-15CBI	Compact Bakelite Ivory	10313-D	
38-17F	Console	10286-H	
38-17T	Table Model	10328-A	
38-33F	Console	10286-F	
38-34F	Console	10286-C	
38-35F	Console	10286-F	
38-38XF	Console	10326-C	
38-39XF	Console	10326-C	
38-40XF	Console	10326-C	
38-60F	Console	10286-B	
38-60XF	Console	10326-E	
38-62F	Console	10286-G	
38-89XF	Console	10326-F	
38-93B	Baby Grand	10308-A	
38-624XF	Console	10326-D	
38-630XF	Console	10326-G	
38-2630XF	Console	10326-G	
1938 - June (1939)			
39-2-40PC	Radio-Phono		No photo available
39-3-31PA	Radio-Phono		No photo available
39-6C	Compact	10357-A	
39-6CI	Compact Ivory	10357-B	
39-7C	Compact	10359-A	
39-7CS	Chairside		
39-7T	Table Model	10358-A	
39-8T	Table Model	10358-B	
39-10RP	Table Phonograph		
39-12CB	See 38-12CB		
39-12CBI	See 38-12CBI		
39-12T	See 38-12T		
39-12TP	Table Radio-Phono		Most used 39-6 chassis
39-14CB	See 38-14CB		
39-14CBI	See 38-14CBI		
39-14T	See 38-14T		
39-15CB	See 38-15CB		
39-15CBI	See 38-15CBI		
39-15T	See 38-15T		

39-17F	Console	10334-A	
39-17T	Table Model	10334-A	
39-18F	Console	10339-A	
39-18T	Table Model	10334-A	
39-19F	Console	10334-B	
39-19PA	Console Radio-Phono		
39-19PCS	Chairside Radio-Phono		
39-19PF	Console Radio-Phono		
39-19T	Table Model	10334-B	
39-19TP	Table Radio-Phono		Also known as 39-19PT
39-25T	Table Model	10335-A	
39-25XF	Console	10338-A	
39-30PCX	Console Radio-Phono		
39-30T	Table Model	10336-A	
39-30XX	Console		Not in Furniture History; mentioned in sales catalog
39-31XF	Console	10363-A	
39-35XX	Console	10329-A	
39-36XX	Console	10344-A	
39-40PCX	Console Radio-Phono		
39-40XX	Console	10345-A	
39-45XX	Console	10343-A	
39-50RX	Console Wired Remote		not produced
39-55RX	Console Mystery Control	10343-B	
39-70B	Baby Grand	10349-A	
39-70F	Console	10339-C	
39-71T	Portable	10355-A	
39-75F	Console	10339-D	
39-75T	Table Model	10334-A	
39-80B	Baby Grand	10340-A	
39-80XF	Console	10338-B	
39-85B	Baby Grand	10340-B	
39-85XF	Console	10338-C	
39-116PCX	Console Radio-Phono		
39-116RX	Console Mystery Control	10357-A	
39-711T	Table Model Tropic	10365-A	Export model
39-720T	Table Model Tropic	10354-A	Export model
39-744T	Table Model Tropic	10352-A	Export model
39-744XX	Console Tropic	10353-A	Export model
39-750T	Table Model Tropic	10352-A	Export model
39-750XX	Console Tropic	10353-A	Export model
39-751T	Table Model Tropic	10352-A	Export model
39-751XX	Console Tropic	10353-A	Export model
39-770T	Table Model Tropic	10351-A	Export model
39-770XX	Console Tropic	10343-C	Export model
39-2770T	Table Model Tropic		Export model
39-2770XX	Console Tropic		Export model
907F	Wireless Phono w/storage		not produced?
907T	Wireless Phono		not produced?
TH-1	Table Model		
TH-3	Table Model		
1939 - January (1939)			
39-31XK	Console	10372-A	
39-72T	Portable	10355-C	
39-117F	Console		
39-117T	Table Model		

39-118F	Console		
39-118T	Table Model		
39-119F	Console		
39-119T	Table Model		
39-175F	Console		
39-175T	Table Model		
101	Table Radio-Phono		
105	Console Radio-Phono		
107	Console Radio-Phono		
108	Console Radio-Phono		
RP-1	Wireless Phono	10370-A	
RP-2	Wireless Phono	10377-A	
RP-3	Wireless Phono	10380-A	
RP-4	Wireless Phono	10381-A	
TH-4	Table Model	10364-A	
TH-5	Table Model	10366-A	
TH-14	Table Model	10375-A	
TH-15	Table Model	10376-A	
TP-4-I	Table Model Ivory	10364-B	
TP-5-I	Table Model Ivory	10366-B	
TP-10	Table Model	10367-A	
TP-11	Table Model	10368-A	
TP-12	Table Model	10374-A	
1939 - June (1940)			
40-74T	Portable	10399-A	
40-81T	Portable	10413-A	
40-88T	Portable	10414-A	
40-90CB	Table Model	10313-J	
40-95F	Console	10415-A	
40-95T	Table Model	10387-A	
40-100F	Console	10415-B	
40-100T	Table Model	10388-A	
40-105B	Baby Grand	10393-A	
40-105K	Console	10434-A	
40-110B	Baby Grand	10393-B	
40-110K	Console	10434-B	
40-115C	Table Model	10432-A	
40-120C	Table Model	10389-A	
40-120CI	Table Model Ivory	10389-B	
40-124C	Table Model	10433-A	
40-125C	Table Model	10390-A	
40-130T	Table Model	10394-A	
40-135T	Table Model	10394-B	
40-140T	Table Model	10395-A	
40-145T	Table Model	10395-B	
40-150T	Table Model	10396-A	
40-155T	Table Model	10397-A	
40-158F	Console	10398-C	
40-160F	Console	10398-A	
40-165F	Console	10398-B	
40-165K	Console	10434-C	
40-180XF	Console	10372-B	
40-185XX	Console	10400-A	
40-190XF	Console	10391-A	
40-195XX	Console	10401-A	
40-200XX	Console	10337-A	
40-205RX	Console Mystery Control	10402-A	
40-216RX	Console Mystery Control	10403-A	
40-501P	Radio-Phono	10404-A	
40-502P	Radio-Phono	10405-A	
40-503P	Radio-Phono	10406-A	
40-504P	Radio-Phono	10382-A	
40-506P	Radio-Phono	10408-A	

40-507P	Radio-Phono	10409-A	
40-508P	Radio-Phono	10410-A	
40-509P	Radio-Phono	10411-A	
40-510P	Radio-Phono	10412-A	
40-516P	Console Radio-Phono	10412-B	
40-710T	Table Model	10313-B	Tropic, Export
40-715T	Table Model	10365-A	Tropic, Export
40-725PXX	Radio-Phono (see 40-507P)		Tropic, Export
40-725T	Table Model	10417-A	Tropic, Export
40-748T	Table Model		Tropic, Export
40-748XX	Console		Tropic, Export
40-755PDX X	Radio-Phono		Tropic, Export
40-755PXX	Radio-Phono		Tropic, Export
40-755T	Table Model	10418-A	Tropic, Export
40-755XX	Console	10420-A	Tropic, Export
40-756T	Table Model		Tropic, Export
40-756XX	Console		Tropic, Export
40-780PXX	Radio-Phono		Tropic, Export
40-780T	Table Model	10419-A	Tropic, Export
40-780XX	Console	10421-A	Tropic, Export
40-2710T	Table Model		Tropic, Export
40-2725T	Table Model		Tropic, Export
40-2780T	Table Model		Tropic, Export
40-2780XX	Console		Tropic, Export
A52CK	Radio with Clock		
A52CK-1	Radio with Clock		
TH-9	Table Model		
TH-16	Table Model	10378-A	
TH-17	Table Model	10379-A	
TH-18	Table Model AM/SW (TH-4)		
TH-22	Table Model		
TP-4	Table Model		Brown
TP-5	Table Model		Brown
TP-10	Table Model		55 different colors
TP-20	Table Model	10385-A	
TP-21	Table Model	10386-A	
TP-52 (UA-52P)	Table Model		
1939 - August (1940)			
40-170CS	Chairside	10453-A	
40-525P	Console Radio-Phono	10452-A	
40-82T	Portable	10450-A	
PT-25	Table Model	10364-A	
PT-27	Table Model Ivory	10364-B	
PT-29	Table Model	10364-A	
PT-31	Table Model Ivory	10364-B	
PT-33	Table Model	10378-A	
PT-35	Table Model	10367-B	
PT-37	Table Model	10364-A	
PT-39	Table Model	10448-A	
PT-41	Table Model	10448-A	
PT-43	Table Model, five colors	10451-A	
PT-45	Table Model	10366-A	

PT-47	Table Model Ivory	10366-B	
PT-51	Table Model Ivory		
PT-55	Table Model	10385-B	
PT-57	Table Model	10374-A	
PT-59	Table Model	10368-A	
PT-61	Table Model	10449-A	"Jewel Case"
PT-63	Table Model	10413-B	
PT-65	Table Model	10376-A	
PT-67	Table Model	10386-A	
PT-69	Table Model	10454-A	
1940 - January (1940)			
40-84T	Portable	10458-A	
40-88TL	Portable		Leatherette covering
40-140T	Table Model	10464-A	
40-145T	Table Model	10464-B	
40-165K	Console	10434-D	
40-185XF	Console	10400-B	
40-201XX	Console	10463-A	
40-215RX	Console		
40-217RX	Console		
40-502P	Table Radio-Phono	10460-A	
40-515PM	Radio-Phono, mahogany	10471-B	
40-515PW	Radio-Phono, walnut	10471-A	
40-526P	Radio-Phono	10452-B	
40-527P	Radio-Phono	10465-A	
PT-25	Table Model	10455-A	
PT-26	Table Model	10455-A	
PT-27	Table Model	10455-B	
PT-28	Table Model	10455-B	
PT-36	Table Model	10466-A	
PT-46	Table Model	10457-A	
PT-48	Table Model	10457-B	
PT-50	Table Model	10467-A	
PT-66	Table Model	10468-A	
RP-1	Wireless Phono	10459-A	
1940 - June (1941)			
41-81T	Portable	10477-A	
41-83T	Portable	10477-B	
41-84T	Portable	10473-A	
41-85T	Portable	10473-B	
41-90CB	Compact Bakelite	10478-B	
41-95F	Console	10494-B	
41-95T	Table Model	10481-A	
41-100F	Console	10494-C	
41-100T	Table Model	10484-A	
41-105T	Table Model	10485-A	
41-110K	Console	10495-B	
41-220C	Table Model	10487-A	
41-220CI	Table Model, ivory	10487-B	
41-221C	Table Model	10488-A	
41-221CI	Table Model, ivory	10488-B	
41-225C	Table Model	10489-A	
41-226C	Table Model	10490-A	
41-230T	Table Model	10478-D	
41-235T	Table Model	10483-A	
41-240T	Table Model	10491-A	
41-245T	Table Model	10492-A	
41-250T	Table Model	10486-A	
41-255T	Table Model	10493-A	
41-258F	Console	10494-D	
41-260F	Console	10494-A	
41-265K	Console	10495-A	
41-280X	Console	10496-A	
41-285X	Console	10497-A	
41-287X	Console	10515-A	

41-290X	Console	10498-A	
41-295X	Console	10499-A	
41-300X	Console	10500-A	
41-316RX	Console Mystery Control	10501-A	
41-602P	Radio-Phono	10502-A	
41-603P	Radio-Phono	10503-A	
41-604P	Radio-Phono	10504-A	
41-605P	Radio-Phono	10505-A	
41-607P	Radio-Phono	10507-A	
41-608P	Console Radio-Phono	10508-A	
41-609P	Console Radio-Phono	10509-A	
41-610P	Console Radio-Phono	10510-A	
41-611P	Console Radio-Phono	10506-A	
41-616P	Console Radio-Phono	10516-A	Remote control
41-695P	Radio-Phono	10517-A	
41-705T	Table Model		Tropic, Export
41-708T	Table Model		Tropic, Export
41-712T	Table Model	10478-C	Tropic, Export
41-713T	Table Model	10478-E	Tropic, Export
41-714T	Table Model	10470-A	Tropic, Export
41-722T	Table Model	10469-A	Tropic, Export
41-745T	Table Model		Tropic, Export
41-758T	Table Model	10457-A	Tropic, Export
41-759T	Table Model		Tropic, Export
41-788T	Table Model	10479-A	Tropic, Export
41-KR	Kitchen Radio w/clock	10480-A	
PT-30	Table Model	10313-L	
PT-42	Table Model	10520-A	
PT-44	Table Model	10521-A	
PT-49	Table Model	10522-A	
PT-87	Portable	10519-A	
PT-89	Portable	10482-A	
RP-2	Wireless Phono	10513-A	
RP-5	Wireless Phono	10476-A	
RP-15	Wireless Phono	10511-A	
1941 - January (1941)			
41-22CL	Radio with Clock	10539-A	
41-231T	Table Model	10536-A	
41-246T	Table Model	10492-A	
41-256T	Table Model	10493-A	
41-296X	Console	10499-B	
41-315X	Console	10501-B	
41-601P	Table Radio-Phono	10535-A	
41-620P	Table Phonograph	10529-A	
41-623P	Radio-Phono	10528-A	
41-624P	Radio-Phono	10504-B	
41-625P	Radio-Phono	10505-B	
41-629P	Radio-Phono	10532-A	
41-841T	Portable		
41-842T	Portable	10533-A	
41-843T	Portable	10537-A	
41-844T	Portable	10538-A	
41-851T	Portable		
PT-2	Table Model	10524-A	
PT-4	Table Model, ivory	10524-B	
PT-6	Table Model	10525-A	
PT-10	Table Model	10524-C	
PT-12	Table Model	10526-A	
RP-6	Wireless Phono	10534-A	
1941 - June (1942)			
42-121CB	Compact Bakelite	10478-B	
42-122T	Table Model	10544-A	
42-123F	Console	10543-A	
42-124T	Table Model	10547-A	
42-125K	Console	10563-B	

42-126T	Table Model	10548-A	
42-22CL	Radio with Clock	10539-A	Same as 41-22CL
42-321T	Table Model	10568-A	
42-321TI	Table Model, ivory trim	10568-B	
42-322T	Table Model	10552-A	
42-323T	Table Model	10565-A	
42-327T	Table Model	10561-A	
42-335T	Table Model	10546-A	
42-340T	Table Model	10569-A	
42-345T	Table Model	10570-A	
42-350T	Table Model	10562-A	
42-355T	Table Model	10566-A	
42-358F	Console	10543-B	
42-360F	Console	10543-C	
42-365K	Console	10563-A	
42-380X	Console	10571-A	
42-390X	Console	10578-A	
42-395X	Console	10572-A	
42-400X	Console	10588-A	
42-620P	Table Phonograph		Same as 41-620P
42-706C	Compact	10524-E	Tropic, Export
42-716T	Table Model	10478-G	Tropic, Export
42-717T	Table Model	10478-H	Tropic, Export
42-718T	Table Model	10478-G	Tropic, Export
42-724T	Table Model	10557-A	Tropic, Export
42-730T	Table Model	10540-A	Tropic, Export
42-760T	Table Model	10541-A	Tropic, Export
42-761T	Table Model	10541-A	Tropic, Export
42-762T	Table Model	10541-A	Tropic, Export
42-788T	Table Model	10479-B	Tropic, Export
42-842T	Portable	10533-B	
42-843T	Portable	10537-C	
42-844T	Portable	10538-A	
42-853T	Portable	10537-B	
42-854T	Portable	10538-B	
42-1001P	Table Radio-Phono		Same as 41-601P
42-1002P	Table Radio-Phono	10576-A	
42-1003P	Table Radio-Phono	10574-A	
42-1004P	Radio-Phono	10584-A	
42-1005P	Radio-Phono	10584-B	
42-1006P	Radio-Phono	10575-A	
42-1008P	Radio-Phono	10577-A	
42-1009-M	Radio-Phono, mahogany	10555-B	
42-1009-W	Radio-Phono, walnut	10555-A	
42-1010P	Radio-Phono	10580-A	
42-1011-M	Radio-Phono, mahogany	10551-B	
42-1011-W	Radio-Phono, walnut	10551-A	
42-1012P	Radio-Phono	10586-A	
42-1013-M	Radio-Phono, mahogany	10550-B	
42-1013-W	Radio-Phono, walnut	10550-A	
42-1015-M	Radio-Phono, mahogany	10556-B	
42-1015-W	Radio-Phono, walnut	10556-A	
42-1016P	Radio-Phono	10516-C	Remote control
42-KR3	Kitchen Radio	10564-A	
42-KR5	Kitchen Radio	10560-A	

	w/clock		
42-PT2	See PT-2, January 1941		Same as PT-2
42-PT4	See PT-4, January 1941		Same as PT-4
42-PT7	Table Model	10583-A	
42-PT10	See PT-10, January 1941		Same as PT-10
42-PT25	See PT-25, January 1940		Same as PT-25
42-PT26	See PT-26, January 1940		Same as PT-26
42-PT87	Portable	10519-B	
42-PT88	Portable	10545-A	
42-PT91	Table Model	10542-A	
42-PT92	Table Model	10542-C	
42-PT93	Table Model	10585-A	
42-PT94	Table Model	10553-A	

42-PT95	Table Model	10554-A	
42-RP1	Wireless Phono	10581-A	
42-RP2	Wireless Phono	10582-A	
1942 - January - March (1942)			
42-131T	Table Model	10593-A	
42-720T	Table Model	10593-B	Tropic, Export
42-721T	Table Model	10593-C	Tropic, Export
42-722T	Table Model	10593-B	Tropic, Export
42-PT3	Table Model	10592-C	
42-PT96	Table Model	10590-A	
A-361	Console	10614-A	
A-707	Table Model	10592-B	Tropic, Export
A-801	Chairside		
Clock Timer	Clock Timer (Sessions)	10558-A	
Record Cabinet	Record Album Cabinet	10598-A	