


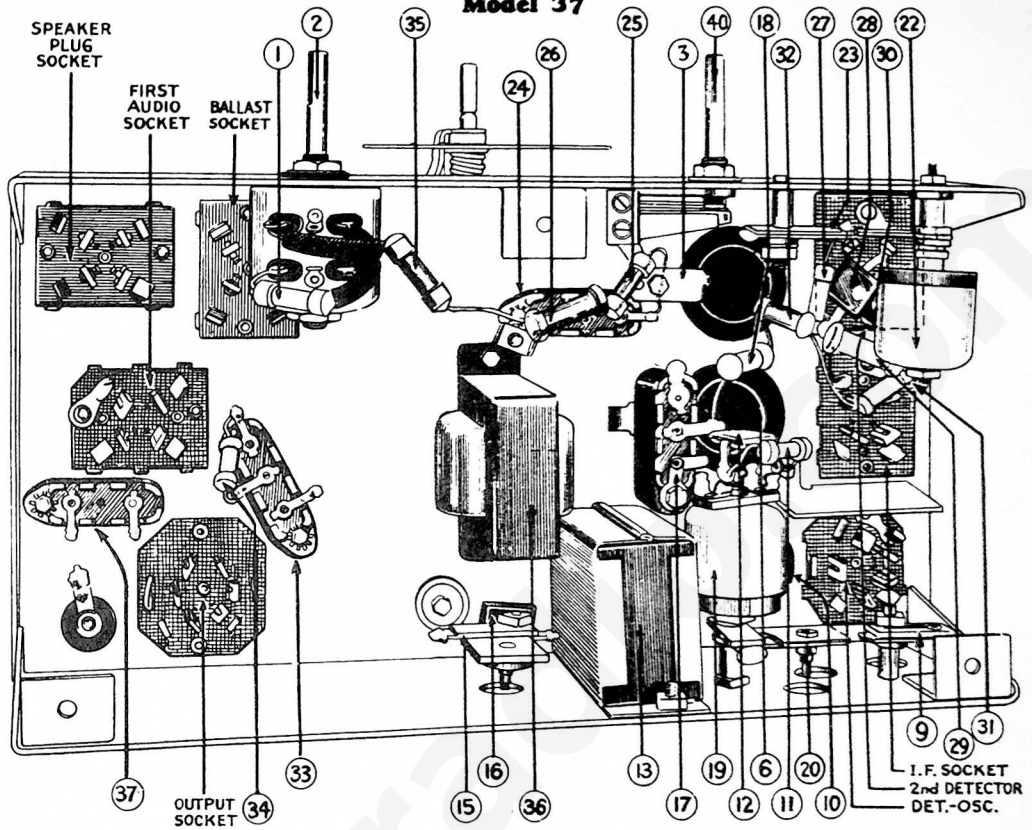

## Model 37



### Replacement Parts for Model 37

	Part No.	
Ⓛ Resistor (2,900 Ohms)	5309	⊕ Second I.F. Transformer
Ⓛ Volume Control	7239	⊕ Comp. Cond. 2nd. I.F. Secondary
Ⓛ Antenna Transformer	05726	⊕ Cond. .05 Mfd.
Ⓛ Tuning Condenser Assembly	05740	⊕ Resistor (51,000 Ohms)
Ⓛ Compensating Cond.—Antenna— Part of Tuning Cond. Assembly		⊕ Resistor (25,000 Ohms)
Ⓛ Detector Transformer	05727	⊕ Resistor (99,000 Ohms)
Ⓛ Compensating Cond. — Detec- tor—Part of Tuning Cond. Assembly		⊕ Condenser 250 Mmf. Yellow
Ⓛ Pilot Light	5316	⊕ Resistor (99,000 Ohms)
Ⓛ Comp. Cond.—1st. I.F. Primary	04000-A	⊕ Condenser 250 Mmf. Yellow
⊕ Oscillator Coil	05728	⊕ Resistor (490,000 Ohms)
⊕ Resistor (6,000 Ohms)	7352	⊕ Resistor (99,000 Ohms)
⊕ Cond. 710 Mmf. White and Yel- low	5863	⊕ Condenser (.01 Mfd.)
⊕ Filter Cond. Bank (1, .15, 25, 2-.5 Mfd.)	03915	⊕ Resistor (490,000 Ohms)
⊕ Comp. Cond.—High Frequency —Part of Tuning Cond. As- sembly		⊕ Resistor (1,000 Ohms)
⊕ Comp. Cond.—Low Frequency	04000-F	⊕ Input Transformer
⊕ Cond. 710 Mmf. White and Yel- low	5863	⊕ Condenser (2,000 Mmf.)
⊕ Condenser (.05 Mfd.)	3615-AC	⊕ Output Transformer
⊕ Resistor (1,000 Ohms)	5837	⊕ Voice Coil and Cone Assembly
⊕ First I.F. Transformer	05897	⊕ Battery Switch
⊕ Comp. Condenser — 1st. I.F. Secondary	04000-A	⊕ Tube Shield
		Knob
		Knob Spring
		Four Prong Socket
		Five Prong Socket
		Six Prong Socket
		Dial Complete
		Bezel