

Model 46 (D. C. Operated)

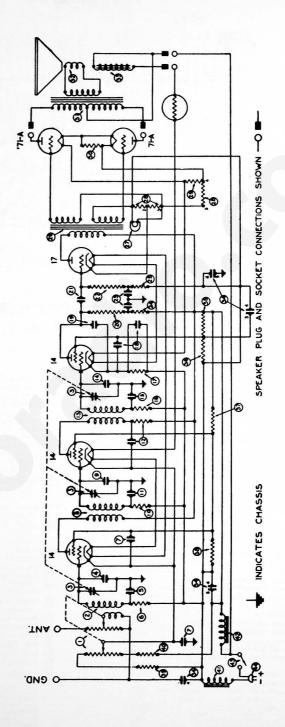

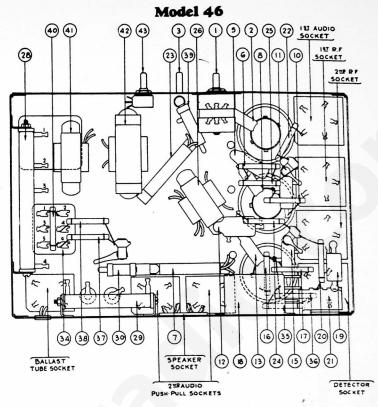

REPLACEMENT PARTS-MODEL 46

①	Volume Control	4141	æ	Field Coil 2694
Õ	First R. F. Transformer		A	Filter Condenser 4860
Õ	Tuning Condenser	4200-D		Resistor 70,000 Ohms 3542
	Comepnsating Condenser	1200 2		
•	(Part of Tuning Condenser		æ	
	Assembly)			
•	By-Pass Condenser .05	3615-I		Resistor 250 Ohms 4142
Õ	Resistor 32,000 Ohms			
0	By-Pass Condenser .25	4864	@	Line Choke (Neg.) 4886
0	Second R. F. Transformer	3884-Y	@	
Õ	Compensating Condenser		<u>a</u>	Set Switch 4095
•	(Part of Tuning Condenser			Line Plug L-543
	Assembly)			Line Cord and Plug . L-943
	Resistor 32,000 Ohms	3525		Tube Shield 4228-A
9	By-Pass Condenser .05	3615- M		Knob (Dial)
9	Condenser and Resistor .05 and			Spring (Dial Knob)
9	250 Ohms	3615-K		Knobs (Switch and Volume
9	Third R. F. Transformer	3884-Y		Control) 4290-A
ã				Spring (Switch and Volume
•	Compensating Condenser (Part of Tuning Condenser			Control Knob) 4147
	Assembly)			Grid Clip 4060
0	By-Pass Condenser .05			Grid Clip Insulator 4061
8	Resistor 5,000 Ohms	3526		Speaker Plug and Cable . L-1124-A
0		3525		R. F. Transformer Shield . 3862
(4)	By-Pass Condenser (2-section,			Grommet for R. F. Transformer
_	.25 each)			Shield
•	By-Pass Condenser .0005	3910		Pilot Lamp Bracket 4871
ĕ	Resistor 490,000 Ohms			Four Prong Socket Assembly 3977-A
ĕ	Blocking Condenser .01			Five Prong Socket Assembly . 3979-A
•	Resistor 490,000 Ohms			Speaker Socket
A	By-Pass Condenser (2-section,			Volume Control Insulators 4092
_	.25 each)			Volume Control Insulators 4286
8	Resistor 99,000 Ohms			Cabinet
•	Resistor 240,000 Ohms	3768		Fahnstock Clip . L-1126
ĕ	Push-Pull Input Transformer	4862		Finishing Rosettes 4201
•	Pilot Bulb	3463		Speaker Mounting Screws
ĕ	Resistor (3-section)	4858-A		(3 used)
6	Resistor 200 Ohms	4859-A		Speaker Mounting Screws
	Resistor 210 Ohms			(1 used) . W-483
(Push-Pull Output Transformer	2766		Tuning Condenser Dial Scale 4261
54	Voice Coil and Cone	2769-B		Mica for Compensating Cor-
3050				densers