

MODEL 47 (D. C. Operated)

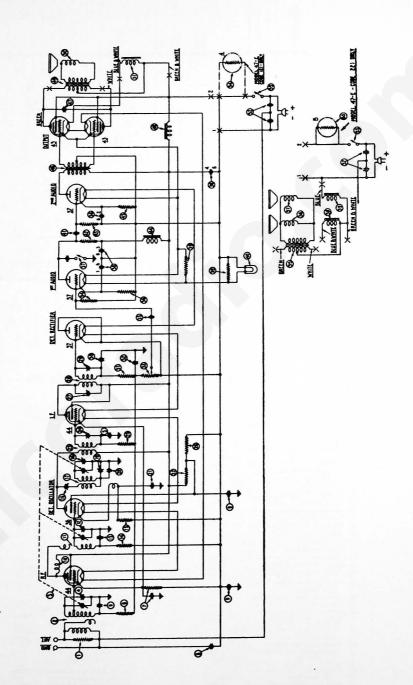

MODEL 47

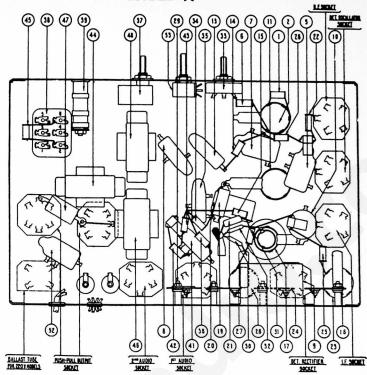

REPLACEMENT PARTS MODEL 47

0	Resistor (10,000 ohms) 4412	Resistor (10,000 ohms) 4412	
0	R. F. Transformer 04339	⊕ Tone Control	
0	Tuning Condenser Assembly . 05098	Filter Condenser Bank 05003	
	Compensating Condenser—R. F.	Resistor-Wire wound (70 ohms	
_	-Part of Tuning Condenser	and 16 ohms) 6716	
	Assembly	⊕ Pilot Light 6608	
0	Condenser (.05 Mfd. Double) . 3615-AF	@ Condenser (.01 Mfd.) 3093	
ŏ	Resistor (1,000,000 ohms) 4409	@ Resistor (25,000 ohms) 4516	
ŏ		@ Resistor (1,000,000) 4409	
U	register) 1000 0	C Files Chala (Fin) Paristones 1	
_	resistor)	Filter Choke (High Resistance) . 5314	
0	Condenser (.05 Mid.)	Resistor (5,000 ohms) 5310	
0	Condenser (.25 Mfd, Double) . 05109	□ Input Transformer 6064	
•	R. F. Choke	Condenser (.002 Mfd.) Blue . 4059	
0	Detector Transformer 05093		1
•		© Output Transformer — Single Speaker (K-13)	
	tector—Part of Tuning Con-	Speaker (K-13)	
	denser Assembly		
9	Condenser (.05 Mfd.) 3615-L	Speaker Field Assembled with	
0	Resistor (1,000,000 ohms) 4409	Pot (K-13)	5
	Resistor (8,000 ohms) 5838	Condenser (.015 Mfd. Double). 3793	-M
	Compensating Condenser — 1st	@ On-off Switch 6496	
•	I. F. Primary 04000-M	Condenser (.015 Mfd. Double). 3783 On-off Switch	•
€	Oscillator Coil 04186	Speaker 6730	
ä	Compensating Condenser—High		
•	Frequency—Part of Tuning		
	Condenser Assembly	Speaker (K-14, K-15) 254	5
	Compensating Condenser—Low	Woice Coll and Cone Assembly . 0282	
•	Frequency 04000-F	⊗ Voice Coil and Cone Assembly . 0282	3
	Condenses (410 Mms) Valley	Speaker Field Assembled with	
•	Condenser (410 Mmf.) Yellow	Pot (K-14) 0274	5
_	and Orange	Speaker Field Assembled with	
•	Condenser (700 Mmf.) White	Pot (K-15) 0274	
-	and Yellow 5863		•
•	Resistor (25,000 ohms) 4516	Ballast Lamp No. 5 — Twin	
•	First I. F. Transformer 05094	Speaker 674	
•	Compensating Condenser—1st I.	Tube Shield 0506	
	F. secondary 04000-A	Knob (large) 0306	3
•	Resistor (1,000,000 ohms) 4409	Knob (medium) 0306	4
	Resistor (70,000 ohms) 5385	Knob (medium) 0306 Knob (email) 0343	7
•	Compensating Condenser—2nd	Knob Spring (large) 526	2
	I. F. Primary 04000_A	Knob Spring (large) 526 Knob Spring (small) 414 Grid Clip 489	7
	Second I. F. Transformer 05095	Grid Clip 486 Four Prong Socket Assembly 502	7
	Compensating Condenser—2nd		16
•	I. F. Secondary 04000-A	Five Prong Socket Assembly . 494	
	Condenser (110 Mmf.) Blue and	Six Prong Socket Assembly . 64	
•	Golden Yellow 4519	Dial Complete 0483	
	Resistor (99,000 ohms) 4411		
2	Condenses (110 Mmf.) Blue and	Chassis Mounting Serew . W-1	
	Condenser (110 Mmf.) Blue and	Manualine Washes W. W.	
	Golden Yellow 4519	Mounting Washer W-	
ě	Volume Control 6499	Rubber Washer 51	
	Resistor (1,000,000 ohms) 4409	Mounting Clamp 64	
	Condenser (.01 Mfd.) 3903-G	Cone Retaining Ring 20	30