



MODEL 76

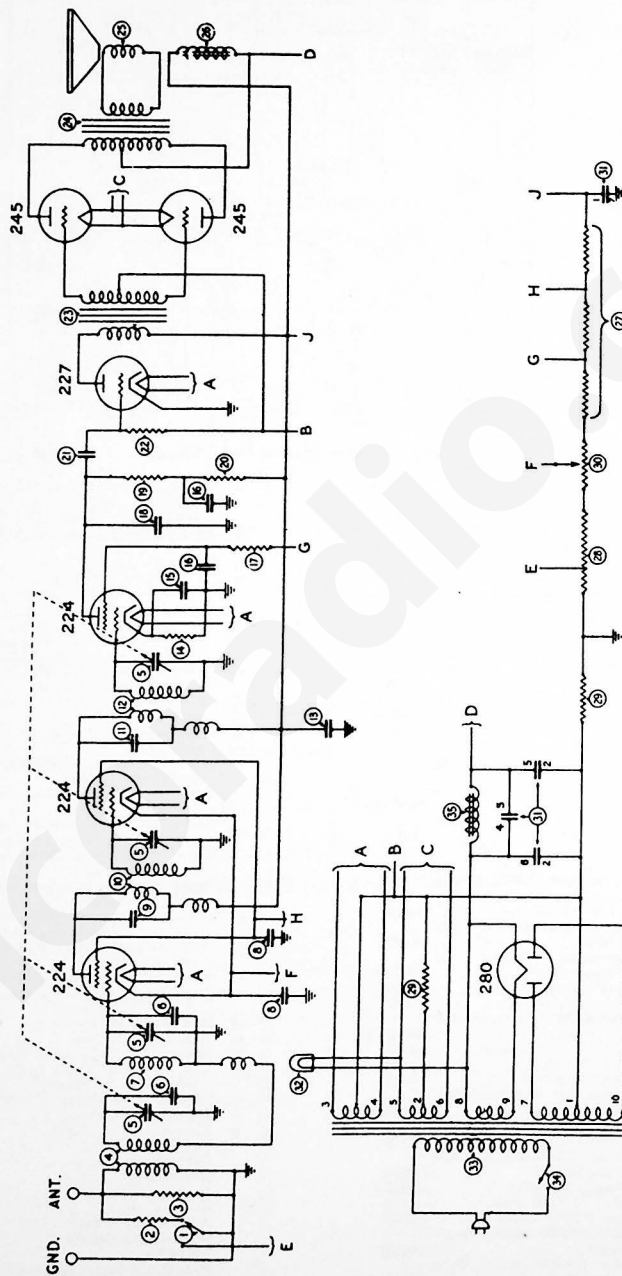

MODEL 76

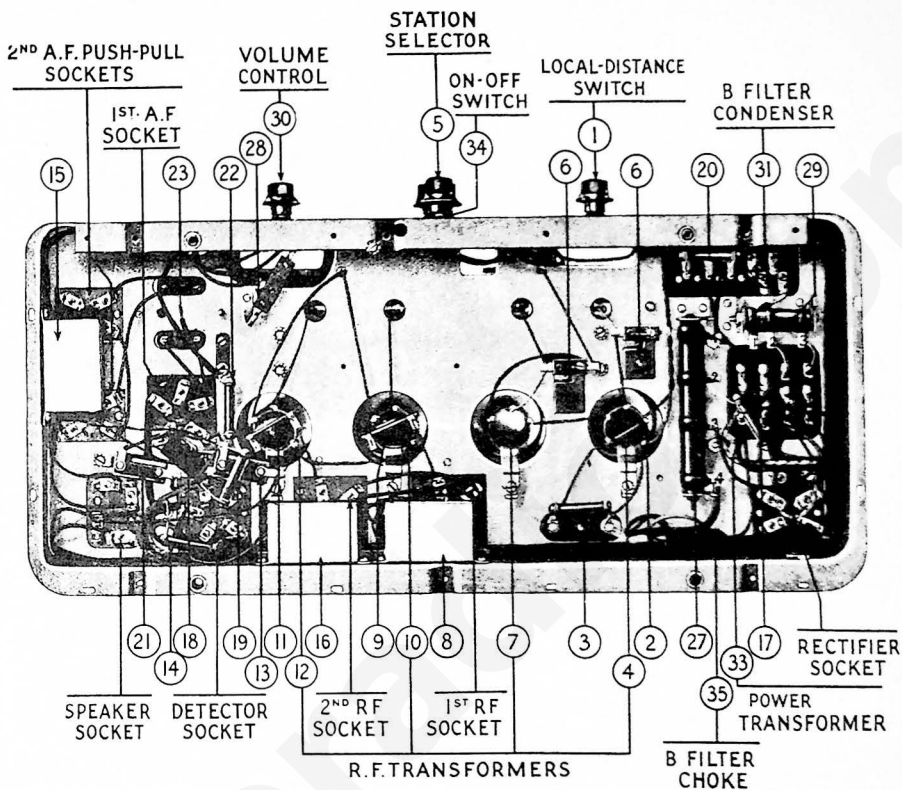

Replacement Parts for Model 76

		PART No.			PART No.
①	Local-Distance Switch	3675	③①	Resistor	3767
②	Resistor	3777	③②	Condenser	3897-A
③	Resistor	3526	③③	Resistor	3769
④	1st R. F. Transformer	3884-A	③④	Push-Pull Input Transformer	3872
⑤	Tuning Condenser	3376-E	③⑤	Push-Pull Output Transformer	2848
⑥	Compensating Condenser	3772-A	③⑥	Speaker Cone and Voice Coil	2814-B
⑦	2d R. F. Transformer	3884-B	③⑦	Speaker Field Coil	2850
⑧	Condenser	3557	③⑧	Resistor	3865
⑨	Condenser	3892-A	③⑨	Resistor	3867
⑩	3d R. F. Transformer	3884-C	④①	Resistor	3864
⑪	Condenser	3892-A	④②	Volume Control	3879
⑫	4th R. F. Transformer	3884-C	④③	B Filter Condenser	3870
⑬	Condenser	3584-B	④④	Pilot Lamp	3463
⑭	Resistor	3767	④⑤	Power Transformer	3868
⑮	Condenser	3583	④⑥	On-Off Switch	3517
⑯	Condenser	3557	④⑦	B Filter Choke	3422
⑰	Resistor	3768	④⑧	Oscillator Kit	3540
⑱	Condenser	3082		Cabinet Touch-up Kit	3809
⑲	Resistor	3769			