



MODEL 77

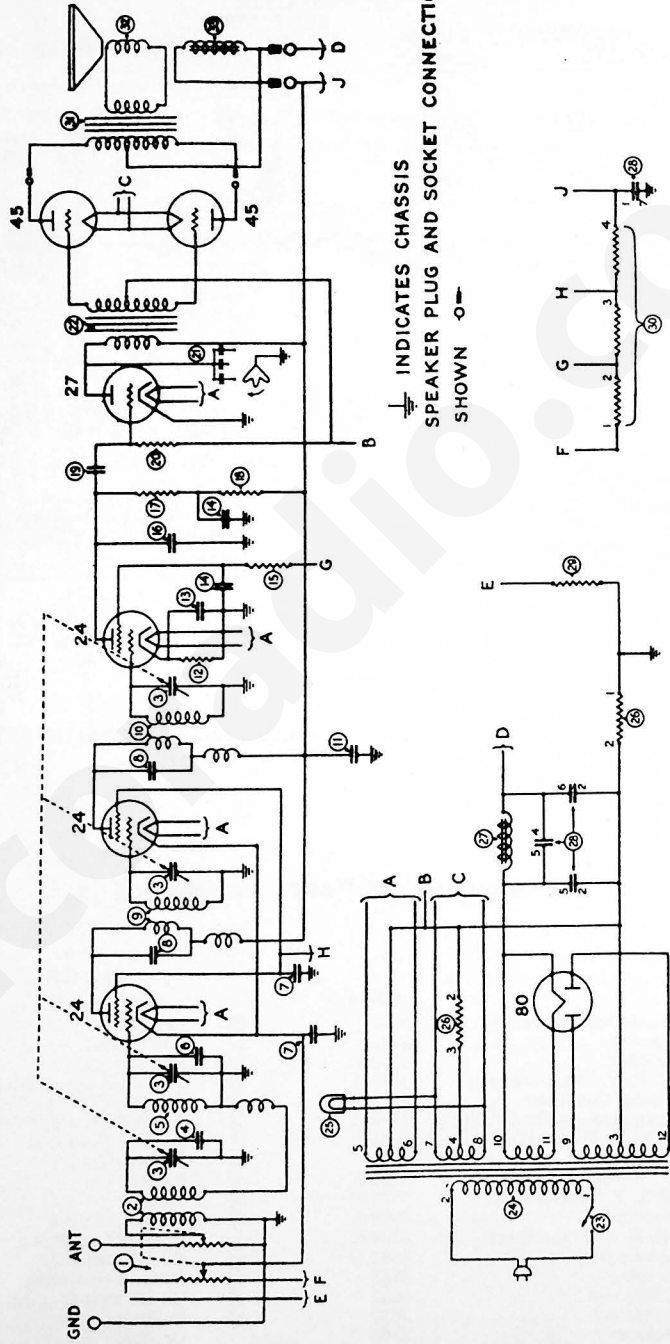

MODEL 77

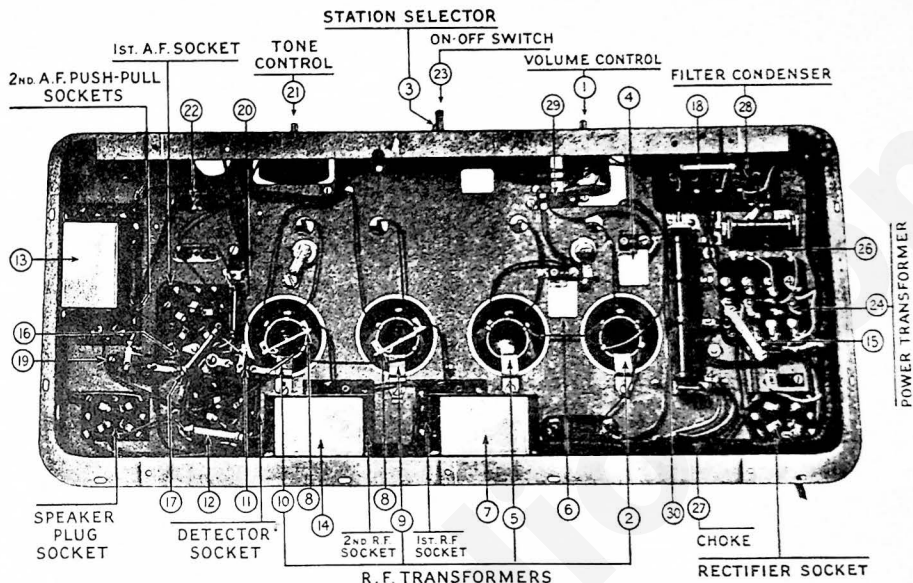

Replacement Parts for Model 77

No.	Description	Part No.
①	Volume Control	4094
②	First RF Transformer	3884-A
③	Tuning Condenser	4000-B
④	First Compensating Condenser	3968-A
⑤	Second RF Transformer	3884-B
⑥	Second Compensating Condenser	3772-A
⑦	By-Pass Condenser	3557
⑧	Coupling Condenser	3892-A
⑨	Third RF Transformer	3884-C
⑩	Fourth RF Transformer	3884-C
⑪	By-Pass Condenser	3615-D
⑫	Resistor	3767
⑬	By-Pass Condenser	3583
⑭	By-Pass Condenser	3557
⑮	Resistor	3768
⑯	By-Pass Condenser	3082
⑰	Resistor	3769
⑱	Resistor	3767
⑲	Condenser	3903-F
⑳	Resistor	3769
㉑	Tone Control	4037-A

No.	Description	Part No.
㉒	Input Transformer	3872
㉓	On-Off Switch	4095
㉔	Power Transformer (60 Cycles)	3868
	Power Transformer (25 Cycles)	3869
㉕	Pilot Lamp	3463
㉖	BC Resistor	3864
㉗	Choke	3422
㉘	Filter Condenser (60 Cycles)	3870
㉙	Filter Condenser (25 Cycles)	3871
㉚	C Resistor	4121
㉛	BC Resistor	3865
㉜	Output Transformer	2848
㉝	Voice Coil and Cone	2794-B
㉞	Field Coil	2850
	Knob (Volume Control)	3579-A
	Knob (Tuning Condenser)	3580-A
	Knob (On-Off Switch)	3676-A
	Dial Indicator	4006
	Scale	4118
	Speaker Plug and Cable (Short)	L-1101-A
	Speaker Plug and Cable (Long)	L-1102-A