



MODEL 96

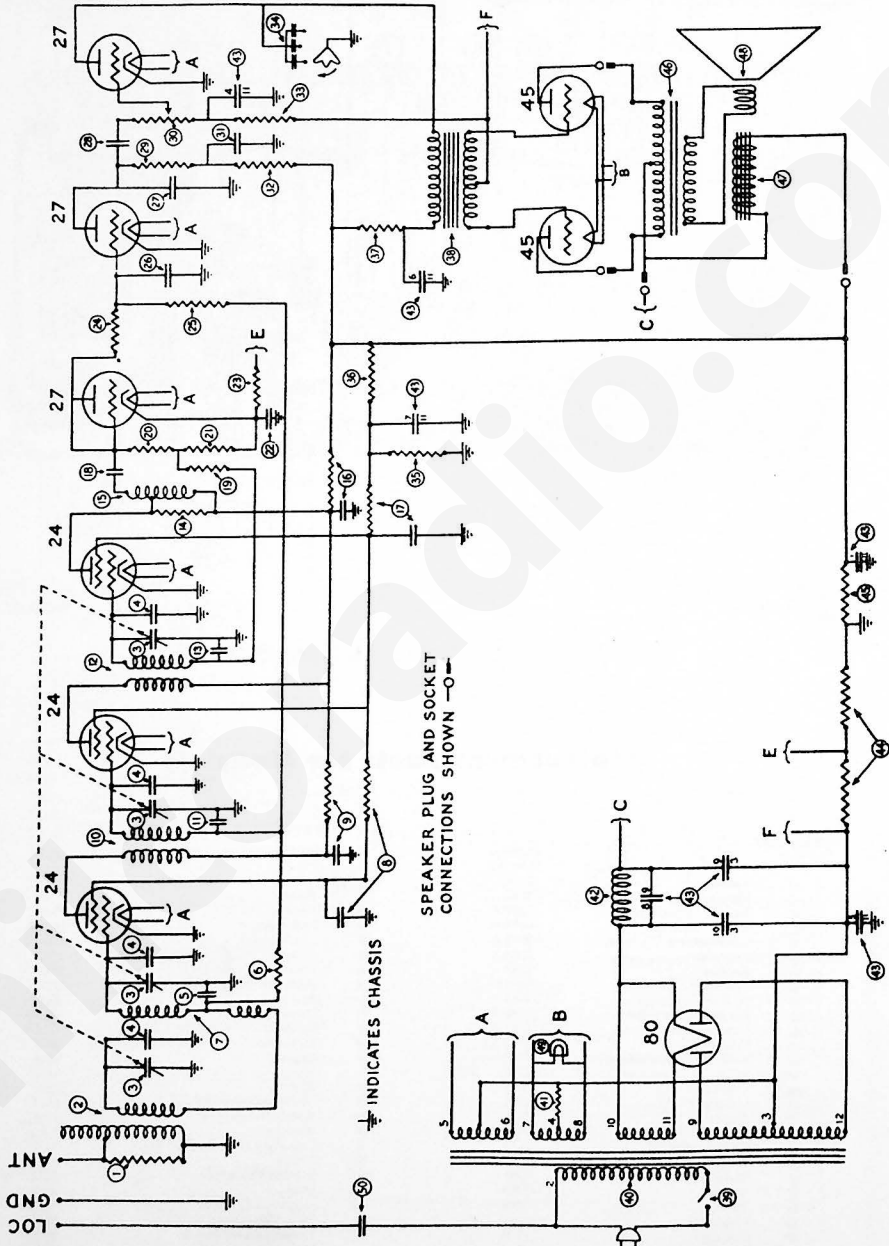

MODEL 96

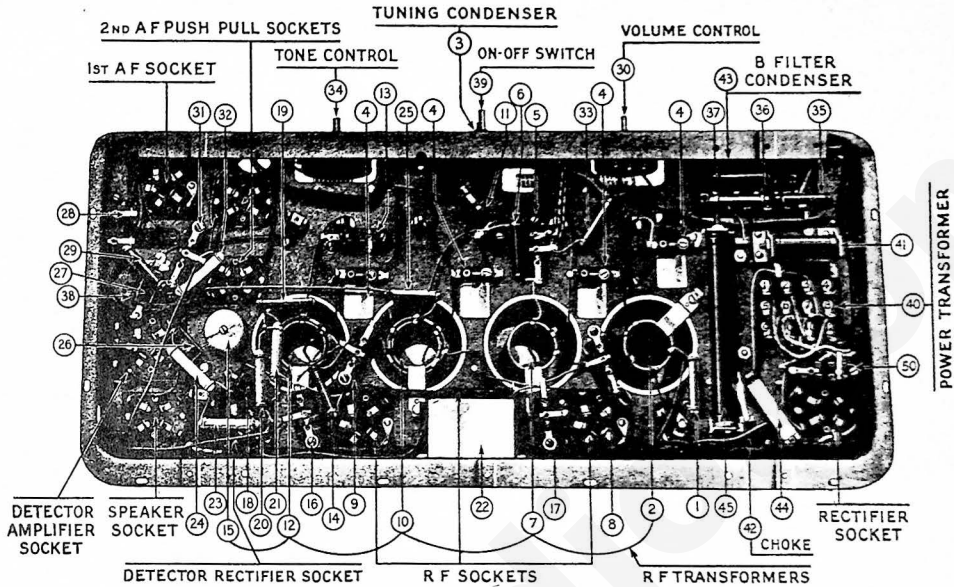

Replacement Parts for Model 96

No.	Description	Part No.	No.	Description	Part No.
①	Antenna Resistor	3526	⑤①	Volume Control	4093
②	First R. F. Transformer	3744-A	⑤②	By-Pass Condenser	3615-D
③	Tuning Condenser	4000-D	⑤③	Resistor	3758
④	Compensating Condenser	3772-A	⑤④	Resistor	3542
⑤	By-Pass Condenser	3615-F	⑤⑤	Tone Control	4037-A
⑥	Resistor	3542	⑤⑥	Resistor	3542
⑦	Second R. F. Transformer	3744-B	⑤⑦	Resistor	3766
⑧	By-Pass Condenser and Resistor	3615-C	⑤⑧	Resistor	3656
⑨	By-Pass Condenser and Resistor	3615-B	⑤⑨	Input Transformer	3537
⑩	Third R. F. Transformer	3744-C	⑤⑩	On-Off Switch	4095
⑪	By-Pass Condenser	3615-E	⑤⑪	Power Transformer (60 Cycle)	3752
⑫	Fourth R. F. Transformer	3744-C	⑤⑫	Power Transformer (25 Cycle)	3753
⑬	By-Pass Condenser	3615-E	⑤⑬	C Resistor	3763
⑭	Resistor	3766	⑤⑭	Choke	3422
⑮	Fifth R. F. Transformer	3775-B	⑤⑮	Filter Condenser (60 Cycle)	3754
⑯	By-Pass Condenser and Resistor	3615-B	⑤⑯	Filter Condenser (25 Cycle)	3755
⑰	By-Pass Condenser and Resistor	3615-C	⑤⑰	Resistor	3764
⑱	Resistor	3774	⑤⑱	B Resistor	3762
⑲	Resistor	3769	⑤⑳	Out-Put Transformer	2848
⑲	Resistor	3767	⑤㉑	Field Coil	2850
⑲	Resistor	3767	⑤㉒	Voice Coil and Cone	2794-B
⑲	By-Pass Condenser	3583	⑤㉓	Pilot Lamp	3463
⑲	Resistor	3767	⑤㉔	Condenser (LOC)	3793-B
⑲	Resistor	3768	⑤㉕	Knob (Vol. Control)	3579
⑲	Resistor	3769	⑤㉖	Knob (Tuning Condenser)	3580
⑲	By-Pass Condenser	3082	⑤㉗	Dial Indicator	4006
⑲	By-Pass Condenser	3082	⑤㉘	Scale	4118
⑲	Condenser	3793-C	⑤㉙	Speaker Plug and Cable (Short)	L-1101-A
⑲	Resistor	3769	⑤㉚	Speaker Plug and Cable (Long)	L-1102-A

Note: The first two Compensating Condensers ④ are 3772-A; the third and fourth Condensers are 3968-A.