



Models 20, 20-A and 21

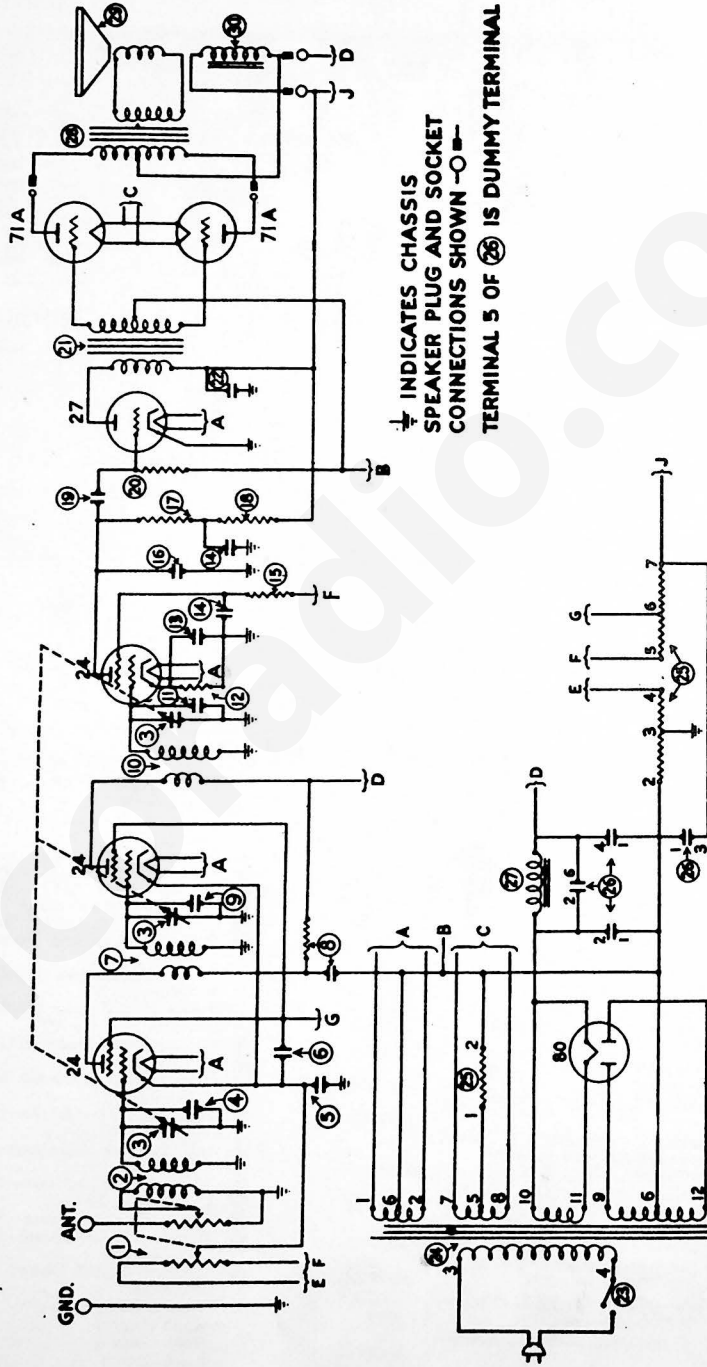

Models 20, 20-A and 21

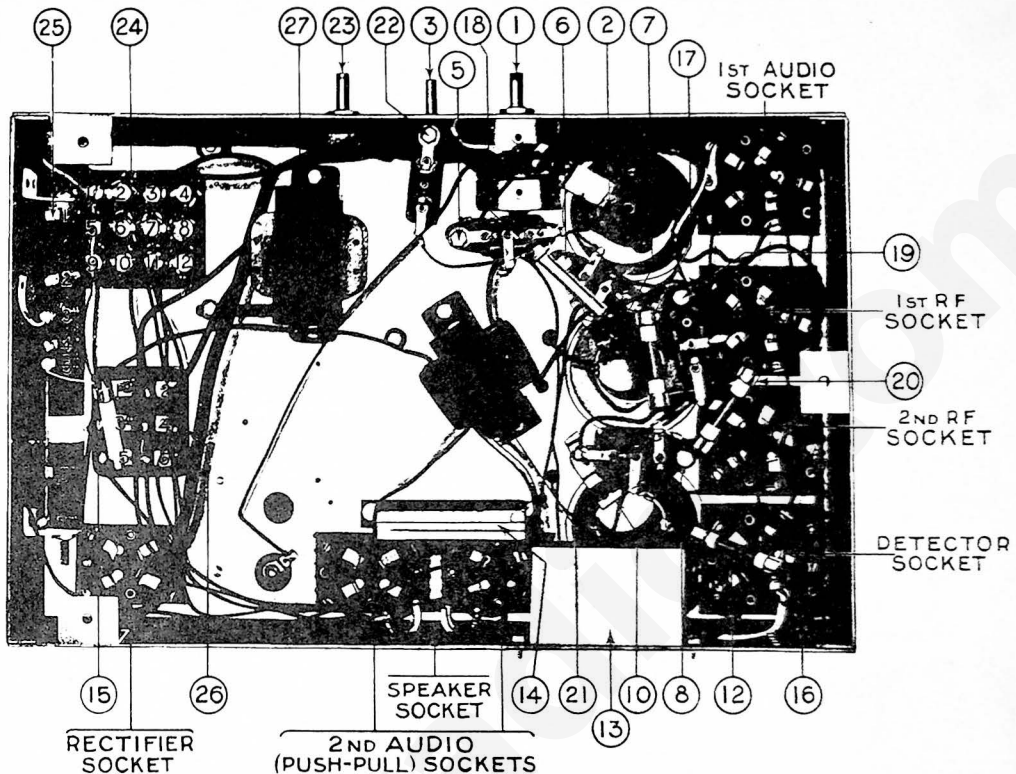

REPLACEMENT PARTS—MODELS 20, 20 A and 21

No.	Description	Part No.	No.	Description	Part No.
①	Volume Control	4094	②④	Power Transformer (50-60 cycle)	4234
②	First R. F. Transformer	3884-N		Power Transformer (25-60 cycle)	4268
③	Tuning Condenser	4200-A	②⑤	B. C. Resistor	4230
④	First Compensating Condenser (Part of Tuning Condenser Assembly)		②⑥	Filter Condenser (50-60 cycle)	4235
⑤	By-Pass Condenser (.05)	3615-J		Filter Condenser (25-60 cycle)	4269
⑥	By-Pass Condenser (.05)	3615-M	②⑦	Filter Choke	4231
⑦	Second R. F. Transformer	3884-P	②⑧	Push-Pull Output Transformer	2766
⑧	By-Pass Condenser (.05) and Resistor	3615-K	②⑨	Voice Coil and Cone	2769-B
⑨	Second Compensating Con- denser (Part of Tuning Condenser Assembly)		②⑩	Field Coil	2768
⑩	Third R. F. Transformer	3884-P		Speaker Plug and Cord	L-1124-A
⑪	Third Compensating Condenser (Part of Tuning Condenser Assembly)			Four-Prong Socket Assembly	3977-A
⑫	Resistor (50,000)	4237		Speaker Socket	3977-B
⑬	By-Pass Condenser (.5)	3583		Five-Prong Socket Assembly	3979-A
⑭	By-Pass Condenser (double .25)	3557		R. F. Tube Shield	4228-A
⑮	Resistor (250,000)	3768		Volume Control Insulators	4092
⑯	By-Pass Condenser (.00025)	3082		Volume Control Insulators	4286
⑰	Resistor (500,000)	3769		Tuning Condenser Dial Scale	4261
⑱	Resistor (100,000)	3767		A. C. Cord	L-943-A
⑲	Condenser (.01)	3903-F		Knob (Large)	4289-A
⑳	Resistor (500,000)	3769		Knob (Small)	4280-A
㉑	Push-pull Input Transformer	4232		Cabinet	34000
㉒	By-Pass Condenser (.05)	3615-L		Bezel Plate	4252
㉓	On-off Switch	4095		Fahnstock Clip	L-1126
				Finishing Rosettes	4267
				Speaker Mounting Screws (three used)	W-493
				Speaker Mounting Screws (one used)	W-483
				Chassis Hold-Down Bolts	W-490
				Feet	W-353

Note:—R. F. Transformers ①, ② and ③ should not be confused with R. F. Transformers ④, ⑤, ⑥ and ⑦ on Bulletin 28. They are not interchangeable.