PHILCO 1940 RMS YEAR BOOK HOME and AUTO RADIOS

PHILCO LABORATORY TESTER





Alignment Instructions -:- Schematic Diagrams Production Changes -:- Setting Push-Button Tuning Phonograph Record Changers -:- Replacement Parts

Parts and Service Division PHILCO RADIO and TELEVISION CORPORATION

PHILCO REPLACEMENT PARTS

Many of the parts, such as condensers and resistors used in the models listed in this book are held to much closer tolerance than standard replacement parts.

Genuine Philco replacement parts must be used to obtain satisfactory performance from Philco Receivers

INDEX PAGE MODEL MODEL Home-Radio Models PAGE 40-527 The Procedures for setting and oper-RP-1 Code 123118 Intermix Record Changer Part No. 35-1176.119, 120, 121, 122, 127 Aligning instructions for the R. F. 40-748104, 105 40-755100, 102, 103 40-756106, 107 40-780108, 109, 110 Replacement Speaker Cones and Output Transformers11, 12

Radio-Phonograph Models

MODE	L								1			Î	PA		1
40-501		 											81,	82	
40-502													81,	82	
40-503		 											83,	84	
40-504														.85	
40-506													83,	84	
40-507		 											86,	87	
40-508		 											88,	89	
40-509		 											88,	89	
40-510													90.	91	
													88.	89	
40-516													92,	93	
40-525	5												94.	95	
40-526	.,	 											94.	95	
			5										,		

Automatic Record Changer 123, 124, 125 Auto-Radio Models The R. F. and I. F. circuit aligning procedures for the auto radio models are listed on pages 164 to 178. Automatic tuning adjusting proced- ures for Auto Radio Models will be found on pages 179 to 192, inclusive. MODEL PAGE AR-1 Are4 .131, 165 AR-4 .133, 165A AR-6 .133, 165A AR-7 .134, 165B, 192 AR-8 .135, 165B, 192 AR-9 .136, 166 N-1514 .137, 167, 128C S-1516 .138, 167, 128D P-1517
The R. F. and I. F. circuit aligning procedures for the auto radio models are listed on pages 164 to 178. Automatic tuning adjusting proced- ures for Auto Radio Models will be found on pages 179 to 192, inclusive. MODEL PAGE AR-4 .130, 165 AR-4 .131, 165 AR-5 .132, 165A, 192 AR-6 .133, 165A AR-7 .134, 165B, 192 AR-8
procedures for the auto radio models are listed on pages 164 to 178. Automatic tuning adjusting proced- ures for Auto Radio Models will be found on pages 179 to 192, inclusive. MODEL PAGE AR-1 .130, 165 AR-4 .131, 165 AR-5 .132, 165A, 192 AR-6 .133, 165A AR-7 .134, 165B, 192 AR-8
Automatic tuning adjusting procedures for Auto Radio Models will be found on pages 179 to 192, inclusive. MODEL PAGE AR-1 .130, 165 AR-4 .131, 165 AR-5 .132, 165A, 192 AR-6 .133, 165A AR-7 .134, 165B, 192 AR-8 .135, 165B, 192 AR-9 .136, 166 N-1514 .137, 167, 128D
found on pages 179 to 192, inclusive. MODEL PAGE AR-1
MODEL PAGE AR-1
$\begin{array}{cccccccccccccccccccccccccccccccccccc$
AR-4
AR-5
AR-6 .133, 165A AR-7 .134, 165B, 192 AR-8 .135, 166B, 192 AR-9 .136, 166 N-1514 .137, 167, 128C S-1516 .138, 167, 128D
A R-7
A R-9136, 166 N-1514137, 167, 128C S-1516138, 167, 128D
N-1514137, 167, 128C S-1516138, 167, 128D
S-1516
P-1517 190 167
N-1524
S-1526
P-1530142, 168, 128F
P-1535
F-1540144, 101, 12011, 1201
C-1550146, 169, 128J
L-1560
C-1606148, 170, 179
C-1608149, 171, 179
S-1616150, 180
P1617151, 171, 181, 128K
S-1622152, 172, 182
S-1626153, 172, 184
G-1628
P-1630154, 173, 183, 128L-M P-1635155, 173, 183
P-1635155, 173, 183 F-1640156, 174, 185
F-1641157, 174, 186
L-1660158, 175, 187, 128N, 129
C-1708
S-1722
S-1726161, 177, 189, 196
F-1740162, 177, 190, 195
L-1760
L-1761163, 178, 191, 195
Parts Car Manufacturer Aerials193, 194
Replacement Speakers, Cones, Output Transformer
Installing Dial Cord Car
Manufacturer Models 195, 196
Control Parts128, 128A, 129

ating electric push-button tuning on Home Radio Models are listed on pages 9 and 10.

and I. F. circuits of Compact Models "TH," "TP," and "PT" are on pages

6, 7, and 8.	F-8
MODEL	PAGE
РТ-25	13. 7
РТ-26	
РТ-27	, -
PT-28	
PT-29	
PT-31	
PT-33	
PT-35	
PT-36	
РТ-37	
PT-38	
PT-39	an operation of the
PT-41	16, 8
РТ-43	21, 6
РТ-45	22, 7
PT-46	
PT-47	
РТ-48	23, 8
РТ-49	24, 7
РТ-50	20, 8
PT-51	24, 7
РТ-53	18, 7
PT-55	21, 6
РТ-57	25, 8
PT-59	26, 6
PT-61	16, 8
PT-63	27, 40
PT-65	25, 8
РТ-66	28, 8
PT-67	29, 6
РТ-69	30, 8
TH-9	31, 7
TH-14	32, 8
TH-15	33, 8
TH-16	32, 8
TH-17	33, 8
TH-18	31, 7
TH-22	
TP-20	34, 6
TP-21	35, 6
40-74	
40-81	
40-82	
40-83	
40-84	
40-88	
40-90	41, 40