
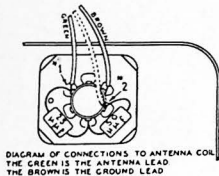


# MODEL N-1524

CONNECT THE ANTENNA LEAD TO  
HOT TERMINAL FOR USE WITH  
THE UNDER CAR ANTENNA.

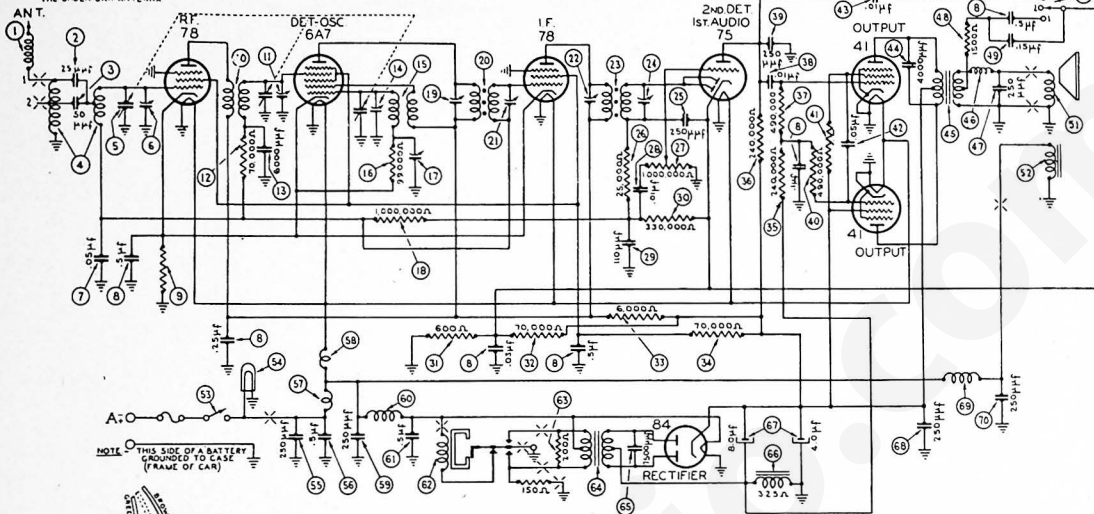


I.F. = 260 KC

Aligning Procedure will be found on page 168.

## MODEL N-1524 PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	32-1926	27	Resistor (490,000 ohms)	33-419344
2	Condenser (.25 mmfd.)	30-1067	28	Condenser (.01 mfd.)	30-4169
3	Condenser (.50 mmfd.)	30-1029	29	Condenser (.250 mmfd.)	30-1032
4	Antenna Transformer	32-2885	30	Resistor (490,000 ohms)	33-419344
5	Tuning Condenser	31-2161	31	Resistor (3,500 ohms)	33-235344
6	First Padder (on Tun. Cond.)		32	Condenser (.05 mfd.)	30-4454
7	Condenser (.05 mfd.)	30-4444	33	Condenser (.01 mfd.)	30-4501
8	Condenser (.03-1-.25-.5-.5 mfd.)	30-4554	34	Condenser (2,000 mmfd.)	30-4177
9	Resistor (550 ohms)	33-1280	35	Output Transformer	32-7928
10	R. F. Transformer	32-2830	36	Choke	32-1374
11	Second Padder (on Tun. Cond.)		37	Condenser (250 mmfd.)	30-1032
12	Resistor (70,000 ohms)	33-370344	38	Resistor (1,500 ohms)	33-215344
13	Condenser (6,000 mmfd.)	30-4467	39	Condenser (.15 mfd.)	30-4191
14	Third Padder (on Tun. Cond.)		40	Tone Control Switch	42-1389
15	Oscillator Transformer	32-2828	41	Come & Voice Coil	30-3586
16	Resistor (99,000 ohms)	33-399344	42	Field Coil	32-9236
17	Low Frequency Padder	31-6230	43	On & Off Switch	42-5617
18	Resistor (1,000,000 ohms)	33-510344	44	Pilot Lamp	34-3040
19	Padder (Prl. 1st I. F. Trans.)	33-370344	45	Condenser (250 mmfd.)	30-1032
20	First I. F. Transformer	32-2791	46	Condenser (.5 mfd.)	30-4474
21	Padder (Prl. 2nd I. F. Trans.)	32-2793	47	"A" Choke	32-1374
22	Second I. F. Transformer	32-2793	48	Filament Choke	32-2729
23	Padder (Sec. 2nd I. F. Trans.)	32-2793	49	Condenser (250 mmfd.)	30-1032
24	Condenser (250 mmfd.)	30-1032	50	Vibrator Choke	32-2812
25	Resistor (25,000 ohms)	33-325344	51	Condenser (.5 mfd.)	30-4474
26	Volume Control (1,000,000 ohms)	33-5245	52	Vibrator	41-3170-3
27	Condenser (.01 mfd.)	30-4479	53	Resistor (200 ohms)	33-120344
28	Condenser (.110 mmfd.)	30-1031	54	Power Transformer	32-7911
29	Resistor (330,000 ohms)	33-433444	55	Condenser (7,500 mmfd.)	30-4420
30	Resistor (600 ohms)	33-1212	56	Filter Choke	32-7910
31	Resistor (70,000 ohms)	33-370444	57	Filter Condenser (4-8 mfd.)	30-2258
32	Resistor (6,000 ohms)	33-280344	58	Condenser (250 mmfd.)	30-1032
33	Resistor (70,000 ohms)	33-370344	59	Choke	32-2657
34	Resistor (240,000 ohms)	33-424344	60	Condenser (250 mmfd.)	30-1032
35	Resistor (240,000 ohms)	33-424344	61	Receiver Housing	38-2102
36	Resistor (240,000 ohms)	33-424344	62	Speaker Cable	41-3376
37	Resistor (240,000 ohms)	33-424344	63	Tuning Control Shaft	28-8813
38	Resistor (240,000 ohms)	33-424344	64	Volume Control Shaft	28-8814
39	Resistor (240,000 ohms)	33-424344	65	Tone Control Shaft	28-8798

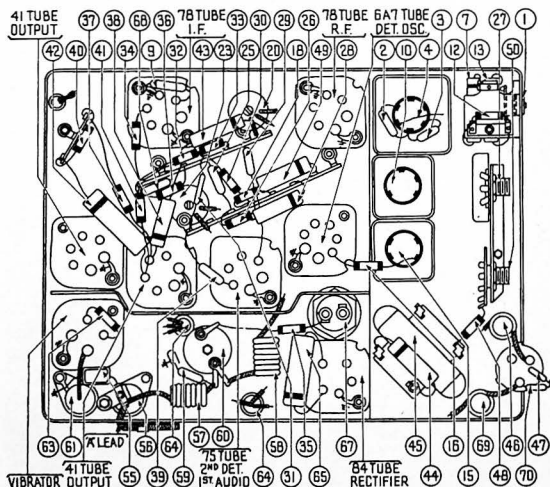

No.	Description	Part No.	No.	Description	Part No.
66	Scale Assembly	42-5786	73	Pilot Lamp Assembly	33-7734
67	Tuning & Volume Knob	27-4690	74	Distributor Resistor	33-1196
68	Tone Knob	27-4639	75	Interference Condenser	30-4007
69	Knob Base	28-4184	76	Interference Condenser	30-4582