



# MODEL P-1530

NOTE: CONNECT THE ANTENNA TO NO.1 TERMINAL FOR USE WITH 50M. ANTENNA  
CONNECT THE ANTENNA TO NO.3 TERMINAL FOR USE WITH ROOF OR UNDERGAR ANTENNA

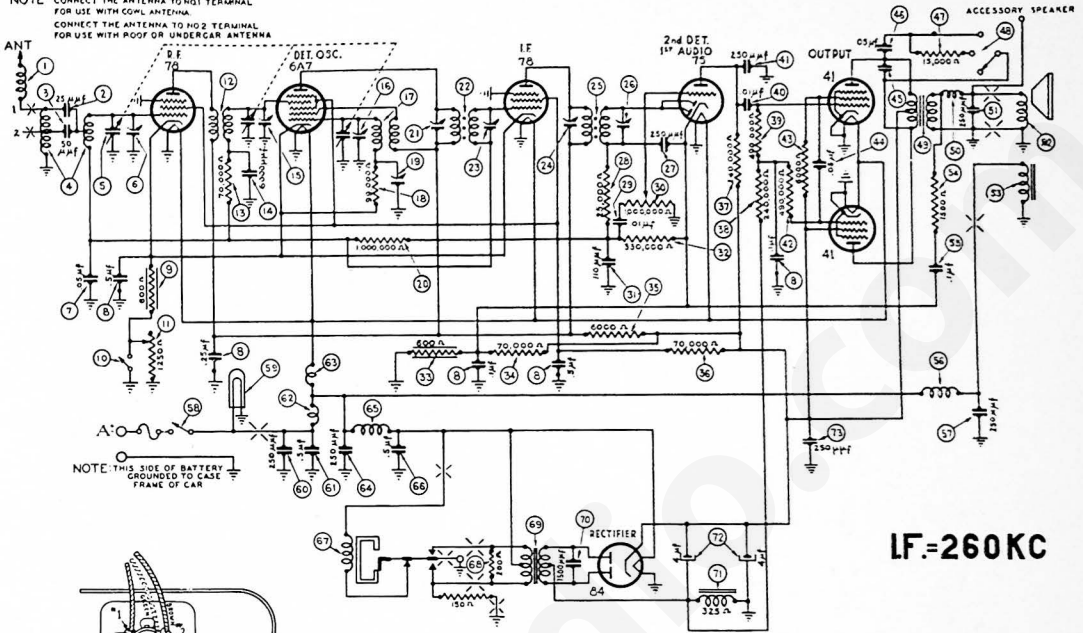


LF.=260 KC

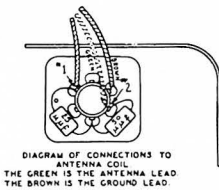

Aligning Procedure will be found on page 168.

## PARTS LIST — MODEL P-1530

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	32-2063	31	Condenser (250 mfd.)	30-1032
2	Condenser (25 mfd.)	30-1067	32	Resistor (490,000 ohms)	33-449314
3	Condenser (50 mfd.)	30-1029	33	Resistor (6,000 ohms)	33-260314
4	Antenna Transformer	32-2833	34	Condenser (.05 mfd.)	30-4454
5	Tuning Condenser	31-2111	35	Condenser (4,000 mfd.)	30-4185
6	First Padder (on Tun. Cond.)		36	Condenser (.05 mfd.)	30-4495
7	Condenser (.05 mfd.)	30-1444	37	Resistor (15,000 ohms)	33-3153411
8	Condenser (1-1-25-5-5 mfd.)	30-4547	38	Tone Control Switch	42-1377
9	Resistor (600 ohms)	33-1212	39	Output Transformer	32-7009
10	Sensitivity Switch	42-1378	40	Choke	32-1374
11	Sensitivity Control	33-5248	41	Condenser (250 mfd.)	30-1032
12	R. F. Transformer	32-2830	42	Cone & Voice Coil	36-3159
13	Resistor (70,000 ohms)	33-370314	43	Complete Speaker (A50)	36-1371
14	Condenser (6,000 mfd.)	30-4445	44	Field Coil Assembly	36-3313
15	Second Padder (on Tun. Cond.)		45	Resistor (1,500 ohms)	33-215344
16	Third Padder (on Tun. Cond.)		46	Condenser (.1 mfd.)	30-4499
17	Oscillator Transformer	32-2828	47	"B" Choke	32-2812
18	Resistor (99,000 ohms)	33-393344	48	Condenser (250 mfd.)	30-1032
19	Low Frequency Padder	31-6230	49	On & Off Switch	42-1368
20	Resistor (1,000,000 ohms)	33-510314	50	Pilot Lamp	34-2039
21	Padder (Pri. 1st I. F. Trans.)		51	Condenser (250 mfd.)	30-1032
22	First I. F. Transformer	32-2791	52	Condenser (.5 mfd.)	30-4474
23	Padder (Sec. 1st I. F. Trans.)		53	"A" Choke	32-1614
24	Padder (Pri. 2nd I. F. Trans.)		54	Filament Choke	32-2720
25	Second I. F. Transformer	32-2793	55	Condenser (250 mfd.)	30-1032
26	Padder (Sec. 2nd I. F. Trans.)		56	Vibrator Choke	32-2812
27	Condenser (250 mfd.)	30-1032	57	Condenser (.5 mfd.)	30-4474
28	Resistor (25,000 ohms)	33-325344	58	Vibrator	41-3170-3
29	Condenser (.01 mfd.)	30-4479	59	Resistor (200 ohms)	33-120341
30	Volume Control (1,000,000 ohms)	33-5245	60	Power Transformer	32-7911
31	Condenser (110 mfd.)	30-1031	61	Condenser (7,500 mfd.)	30-4420
32	Resistor (330,000 ohms)	33-433341	62	"R" Filter Choke	32-7910
33	Resistor (600 ohms)	33-1212	63	Filter Condenser (4-4 mfd.)	30-2257
34	Resistor (70,000 ohms)	33-370314	64	Condenser (250 mfd.)	30-1032
35	Resistor (6,000 ohms)	33-260314	65	Receiver Housing	35-2056
36	Resistor (70,000 ohms)	33-370314	66	Pilot Lamp Assembly	35-8167
37	Resistor (210,000 ohms)	33-424344	67	Tuning Shaft	28-8779
38	Resistor (210,000 ohms)	33-424344	68	Volume Shaft	28-8780
39	Resistor (490,000 ohms)	33-449314	69	Tone Shaft	28-8781
40	Condenser (.01 mfd.)	30-4514	70	Local Distance Shaft	28-8782
			71	Accessory Speaker Socket	35-8803
			72	Speaker Socket	27-6039

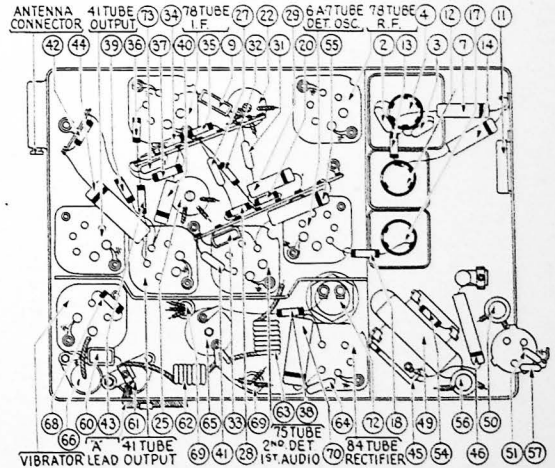

No.	Description	Part No.	No.	Description	Part No.
41	Four Prong Socket	27-6044	72	Fuse	7227
42	Five Prong Socket	27-6035	73	Fuse Insulator	27-7727
43	Six Prong Socket	27-6036	74	Stud (Speaker Mtg.)	28-6058
44	Seven Prong Socket	27-6037	75	Nut (Speaker Mtg.)	W-55A
45	Interference Condenser	30-4407	76	Tie Bolt (Rec. Mtg.)	28-6268
46	Interference Condenser	30-4475	77	Nut (Rec. Mtg.)	W-518A
47	Distributor Resistor	4851	78	Switch & Lead Assembly	41-3217