


MODEL P-1535

NOTE:

CONNECT ANTENNA TO NO.1 TERMINAL FOR USE WITH COWL ANTENNA
CONNECT ANTENNA TO NO.2 TERMINAL FOR USE WITH ROOF OR UNDER-CARRIAGE ANTENNA

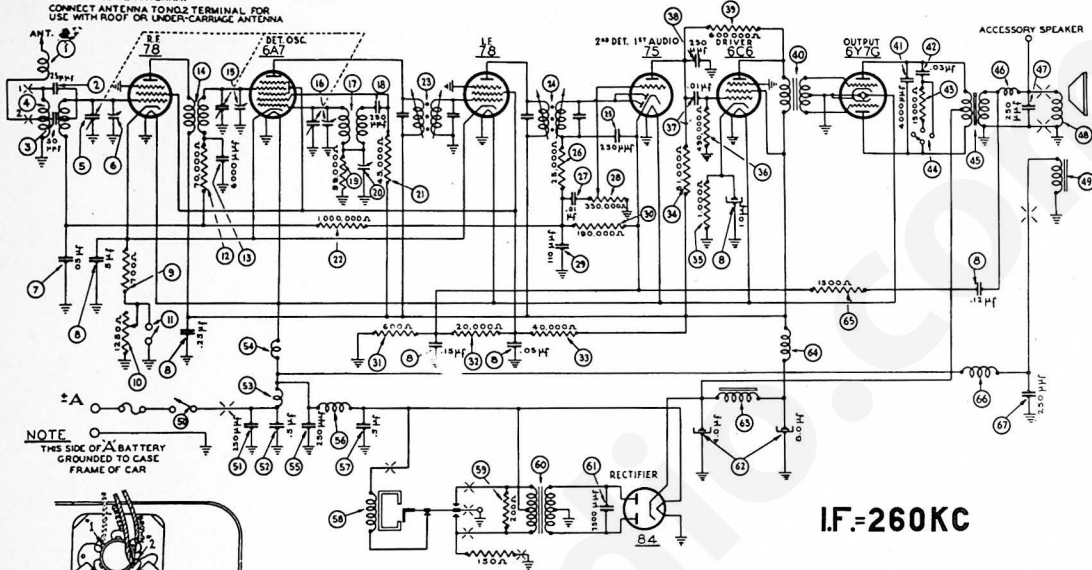

IF=260KC


NOTE:
THIS SIDE OF A BATTERY
GROUNDED TO CASE
FRAME OF CAR

DIAGRAM OF CONNECTIONS OF
ANTENNA COIL
THE GREEN IS THE ANTENNA LEAD.
THE BROWN IS THE GROUND LEAD.

Aligning Procedure will be found on page 167.

PARTS LIST — MODEL P-1535

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	32-2063	40	Input Transformer	32-7770
2	Condenser (25 mmfd.)	30-1067	41	Condenser (4,000 mmfd.)	30-4185
3	Condenser (50 mmfd.)	30-1029	42	Condenser (.03 mfd.)	30-4447
4	Antenna Transformer	32-2833	43	Resistor (15,000 ohms)	33-315344
5	Tuning Condenser	31-2111	44	Tone Control Switch	42-1377
6	First Padder (on Tun. Cond.)	30-4444	45	Output Transformer	32-7778
7	Condenser (.05 mfd.)	30-4444	46	Choke	32-1374
8	Condenser (.05-.12-.15-.25-.5-10 mfd.)	30-4545	47	Condenser (250 mmfd.)	30-1032
9	Resistor (700 ohms)	33-1220	48	Cone & Voice Coil	36-3159
10	Sensitivity Control (1.250 ohms)	33-5248	49	Complete Speaker (A49)	36-1370
11	Sensitivity Control Switch	42-1378	50	Field Coil Assembly	36-3513
12	Resistor (70,000 ohms)	33-370344	51	On-Off Switch	42-1374
13	Condenser (6,000 mmfd.)	30-4467	52	Condenser (250 mmfd.)	30-1032
14	R. F. Transformer	32-2830	53	Condenser (.5 mfd.)	30-4474
15	Second Padder (on Tun. Cond.)	30-4467	54	"A" Choke	32-1374
16	Third Padder (on Tun. Cond.)	30-4467	55	Filament Choke	32-1694
17	Oscillator Transformer	32-2829	56	Condenser (250 mmfd.)	30-1032
18	Condenser (250 mmfd.)	30-1032	57	Vibrator Choke	32-2537
19	Resistor (99,000 ohms)	33-399344	58	Condenser (.5 mfd.)	30-4474
20	Low Frequency Padder	31-0230	59	Vibrator	41-3170-3
21	Resistor (45,000 ohms)	33-345344	60	Resistor (200 ohms)	33-120344
22	Resistor (1,000,000 ohms)	33-510344	61	Power Transformer	32-7720
23	First I. F. Transformer	32-2554	62	Condenser (7,500 mmfd.)	30-4420
24	Second I. F. Transformer	32-2556	63	Filter Condenser (4-8 mfd.)	30-2167
25	Condenser (250 mmfd.)	30-1032	64	Filter Choke	32-7811
26	Resistor (25,000 ohms)	33-325344	65	"B" Choke	32-1281
27	Condenser (.01 mfd.)	30-4479	66	Choke (1,500 ohms)	33-215341
28	Volume Control (350,000 ohms)	33-5246	67	Choke	32-2957
29	Condenser (110 mmfd.)	30-1031	68	Condenser (250 mmfd.)	30-1032
30	Resistor (100,000 ohms)	33-419344	69	Receiver Housing	38-2050
31	Resistor (800 ohms)	33-1212	70	Tuning Shaft	28-8762
32	Resistor (20,000 ohms)	33-320344	71	Volume Shaft	28-8763
33	Resistor (40,000 ohms)	33-340444	72	Tone Shaft	28-8764
34	Resistor (51,000 ohms)	33-351344	73	Local Distance Shaft	28-8765
35	Resistor (1,000 ohms)	33-210344	74	Tuning and Volume Knob	27-4687
36	Resistor (400,000 ohms)	33-440344	75	Switch Knobs	28-7255
37	Condenser (.01 mfd.)	30-4501	76	Accessory Speaker Socket	38-8803
38	Condenser (250 mmfd.)	30-1032	77	Speaker Socket	27-6030
39	Resistor (600,000 ohms)	33-459344	78	Four Prong Socket	27-6041
			79	Five Prong Socket	27-6055
			80	Six Prong Socket	27-6036
			81	Seven Prong Socket	27-6037

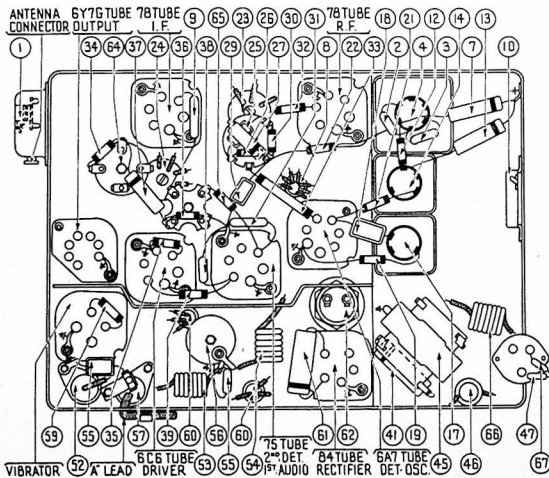

No.	Description	Part No.	No.	Description	Part No.
82	Eight Prong Socket	27-6058	88	Tea Bolt (Rec. Mtg.)	28-6268
83	Interference Condenser	30-4007	89	Nut (Rec. Mtg.)	W-518
84	Inductive Suppressor	32-2250	90	Mtc. Bracket and Stud (Speaker Mtg.)	28-1546
85	Fuse	7227	91	Nut (Speaker Mtg.)	W-55
86	Fuse Insulator	27-7729	92	Switch & Lead Assembly	41-3217