 
 
 
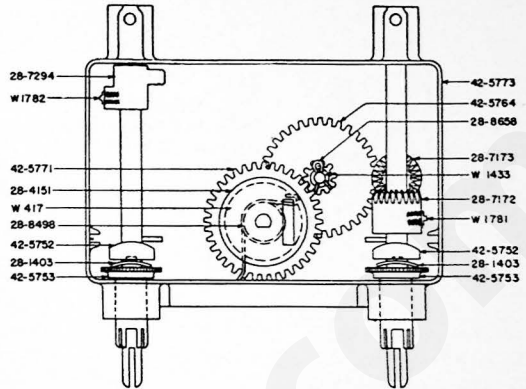 


PACKARD CONTROL---MODEL P-1530

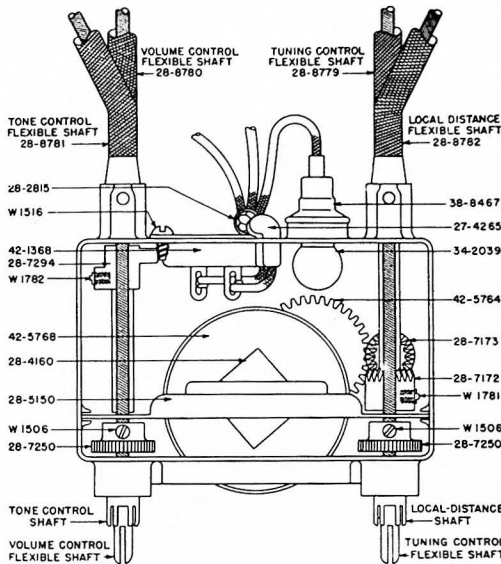

PARTS LIST AND PRICES (Prices Subject to Change Without Notice)

PART NUMBER	DESCRIPTION	LIST PRICE	PART NUMBER	DESCRIPTION	LIST PRICE
W-417	Washer	per 100 .50	28-7249	Tone and Local Distance Knob	.20
W-1433	Washer	per 100 .15	28-7250	Gear	.10
W 1506	Set Screw	per 100 1.60	28-7294	Switch Lever	.15
W-1516	Screw	per 100 1.30	28-8009	Spring	per 100 .50
W-1781	Set Screw	per 100 2.00	28-8498	Anti Back Lash Spring	.10
W-1782	Set Screw	per 100 2.50	28-8658	Spring	.03
4169	Washer	per 100 1.20	28-8779	Tuning Control Flexible Shaft	1.00
27-4285	Sleeve	per 100 1.25	28-8780	Volume Control Flexible Shaft	.90
27-4688	Tuning and Volume Knob	.20	28-8781	Tone Control Flexible Shaft	.90
27-7132	Washer	per 100 .40	28-8782	Local Distance Control Flexible Shaft	1.00
27-7133	Ferrule	.01	Pilot Lamp	.09	
27-7132	Felt Washer	per 100 .30	34-9039	"A" Lead	.10
27-9024	Washer	per 100 .40	38-7993	"A" Lead	.20
28-1270	Housing	per 100 .40	38-8467	Pilot Lamp Assembly	.30
28-1272	Housing	per 100 .85	42-1368	On-Off Switch	.35
28-1403	Spring Washer	per 100 1.35	42-5752	Retainer and Sleeve Assembly	.15
28-2815	Clamp	.01	42-5753	Gear and Sleeve Assembly	.20
28-4151	Washer	.02	42-5784	Intermediate Gear Assembly	.20
28-4160	Spring	.01	42-5788	Dial Assembly	.35
28-5149	Cover	.10	42-5771	Drum Shaft and Gear Assembly	.15
28-5150	Shaft Retainer Plate	.05	42-5773	Housing and Stud Assembly	.85
28-6684	Gland Nut	.10			
28-7172	Miter Drive Gear	.10			
28-7173	Miter Gear	.10			