
## CHRYSLER AND DESOTO CONTROL---MODEL C-1550

## Chrysler C-18, C-19 and C-20; DeSoto S-5

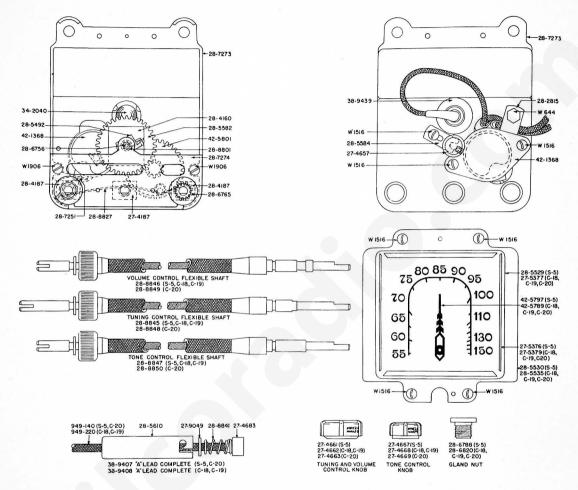

## PARTS LIST AND PRICES

(Prices Subject to Change Without Notice)

PART NUMBER	DESCRIPTION	LIST	PRICE	PART Number	DESCRIPTION LIST	PRICE
W-644	Screw	per 100	\$1.50	28-5610	Fuse Housing	.05
W-1516	Screw	per 100	1.30	28-6756	Pointer Shaft	
W-1906	Screw		*	28-6765	Drive Gear	
27-4657	Knob		•	28-6788	Gland Nut	
27-4661	Tuning & Volume	Knob (S-5)	.25	28-6820	Gland Nut	
27-4662	Tuning & Volume	Knob (C-18, C-19)	.25	28-7251	Switch Lever	.15
27-4663		Knob (C-20)	.30	28-7273	Control Housing	
27-4667			.20	28-7274	Cover	
27-4668	Tone Knob (C-18.	C-19)	.20	28-8801	Anti-back Lash Spring	
27-4669	Tone Knob (C-20)		.25	28-8827	Spring	
27-4683			.03	28-8841	Spring	.01
27-5376				28-8845	Tuning Shaft (S-5, C-18, C-19)	.01
27-5377	Dial (C-18, C-19	C-20)		28-8846	Volume Shaft (S-5, C-18, C-19)	
27-5379	Glass (C-18 C-19	, C-20)	.35	28-8847	Tone Shaft (S-5, C-18, C-19)	
27-9049	Washer	per 100	.80	28-8848	Tuning Shaft (C-20)	
28-2815			.01	28-8849	Volume Shaft (C-20)	
28-4160	Spring		.01	28-8850	Tone Shaft (C-20)	
28-4187			.01	34-2040	Pilot Lamp	.09
28-5492			.01	38-9407		
28-5529	Dial (8-5)		.50	38-9408		
28-5530	Dial Pateiner (S.	X	.50	38-9439		
28-5535	Clase Potainer (C	18, C-19, C-20)		42-1368	Pilot Lamp Assembly	
28-5582	Coor Coor	10, 0-10, 0-20)		42-5789	On-Off Switch	.35
28-5584				42-5797	Pointer (C-18, C-19, C-20) Pointer (S-5)	.15

<sup>\*</sup> Prices not available at this time.