


PACKARD CONTROL---MODEL P-1617

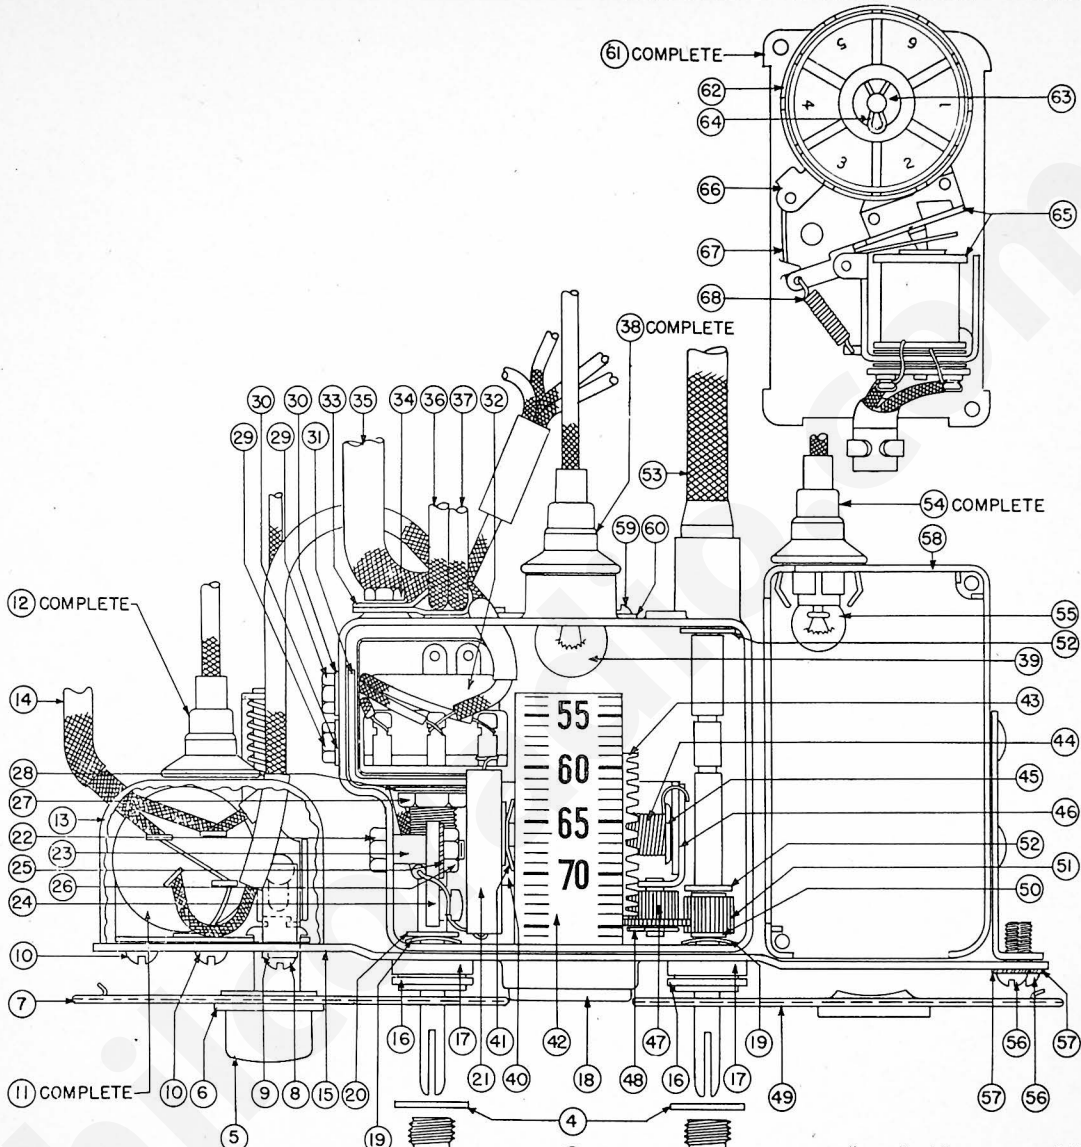

No.	Description	Part No.
1	Tuning & Volume Knob	27-4687
2	Knob Base	28-4184
3	Gland Nut	57-0026
4	Washer	28-7435
5	Push Button Knob	55-0173
6	Light Shield	55-0198
7	Left Bezel	57-0273
8	Screw	W1516
9	Bracket	57-0599
10	Screw	W1516
11	Push Button Switch (complete)	77-0175
12	Pilot Lamp Assembly	38-7734
13	Push Button Housing	57-0532
14	Automatic Cable	85-0031
15	Plate	57-0282
16	Nut	W124
17	Nut	57-0547
18	Bezel	57-0008
19	Washer	28-4187
20	Washer	57-0228
21	Condenser	61-0020
22	Screw	W-2002
23	Spacer	8223
24	Panel	03103

No.	Description	Part No.
25	Washer	W181
26	Nut	W124
27	Nut	W684
28	Washer	W1624
29	Screw & Washer	W2150
30	Washer & Screw	W2150
31	Bracket	57-0251
32	Volume Control & On-Off Switch	67-0004-1
33	Clamp	57-0470

PARTS LIST

No.	Description	Part No.
34	Screw	W644
35	Cable	93-0026
36	"A" Lead	38-8183
37	"A" Lead	93-0015
38	Pilot Lamp Assembly	38-7734
39	Pilot Lamp Assembly	34-2040
40	Bracket	57-0130
41	Washer	28-1100
42	Dial	85-0033
43	Gear	57-0018

No.	Description	Part No.
44	Anti Back Lash Spring	57-0151
45	Eyelet	W739
46	Bracket	57-0130
47	Gear	85-0054
48	Spring	28-8496
49	Right Bezel	57-0274
50	Washer	28-5990
51	Gear	57-0050
52	Washer	57-0228
53	Flexible Shaft	57-0468
54	Pilot Lamp Assembly	38-7734
55	Pilot Lamp	34-2040
56	Screw	W1852
57	Washer	W488
58	Cover	415-1017
59	Screw	W814
60	Cover	57-0469
61	Station Indicator (complete)	85-0047
62	Indicator	55-0197
63	Washer	W495FA3
64	Spring	28-8711FA3
65	Solenoid	77-0227
66	Stop	415-1008
67	Stop Spring	415-1007
68	Spring	415-1003