


PACKARD CONTROL---MODEL P-1630

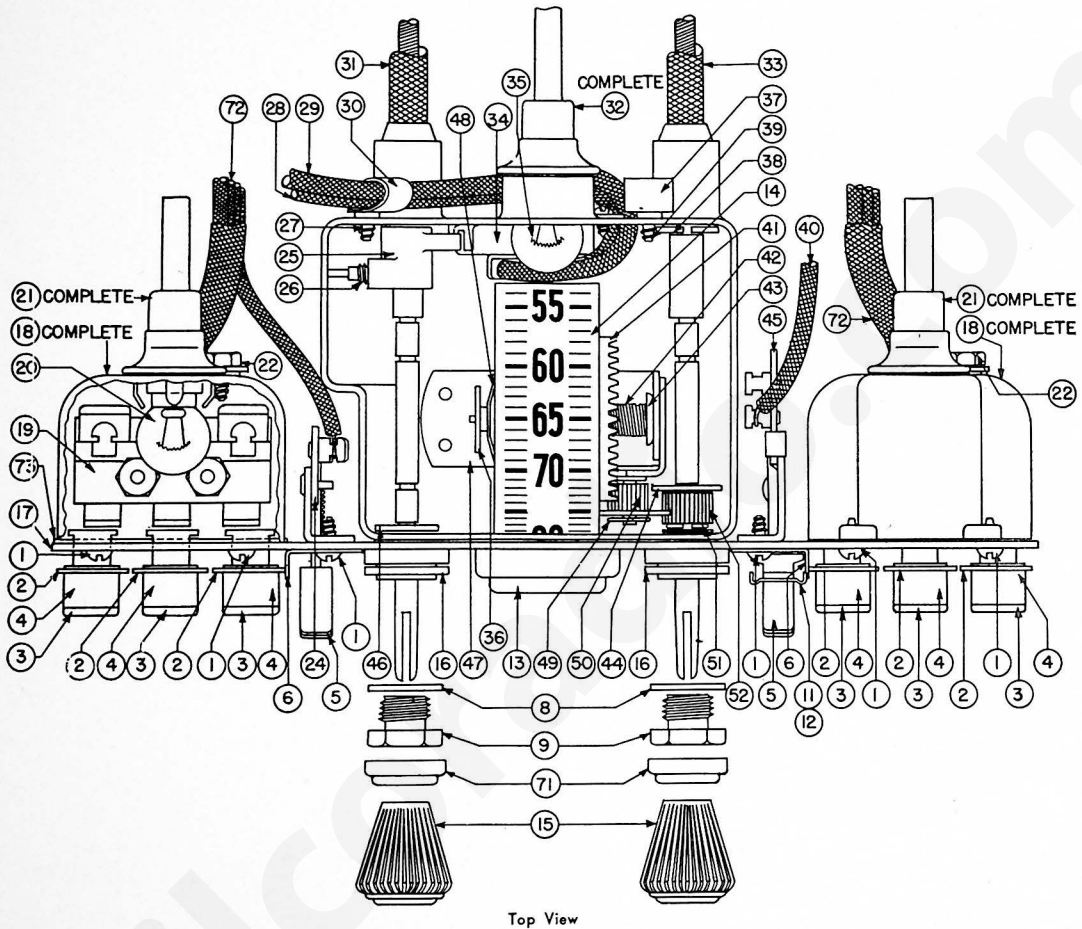

Top View


PARTS LIST

No.	Description	Part No.
①	Set Screw	W-1516
②	Light Shield	55-0198
③	Push Button Cover	57-0029
④	Push Button	55-0005
⑤	Tone and Return to Manual Knob	55-0004
⑥	Light Shield	57-0583
⑦	Washer	28-5435
⑧	Oland Nut	57-0026
⑨	Indicator Plate (1700-1-2 car)	57-0025
⑩	Indicator Plate (1703-5 car)	57-0585
⑪	Dial Bezel	57-0008
⑫	Dial Assembly	85-0019
⑬	Tuning & Volume Knob	27-4887
⑭	Washer	57-0615
⑮	Mounting Plate	57-0166

No.	Description	Part No.
⑯	Push Button Switch (Complete)	77-0024
⑰	Push Button Switch	77-9022
⑱	Pilot Lamp	34-2039
⑲	Pilot Lamp Assembly	38-8487
⑳	Screw	W644
㉑	Return to Dial Switch	77-0025
㉒	Switch Lever	28-7251
㉓	Switch Lever Screw	W1782
㉔	Screw	W644
㉕	"A" Lead	95-0015
㉖	"A" Lead	38-8183
㉗	Clamp	28-2815
㉘	Volume Shaft	57-0117
㉙	Pilot Lamp Assembly	38-8487
㉚	Tuning Shaft	57-0116
㉛	On-Off Switch	85-0009
㉜	Pilot Lamp	34-2039
㉝	Dial Bracket Assembly	412-1019

No.	Description	Part No.
㉞	Clamp	28-4098
㉟	Spring	28-4187
㊱	Screw	W644
㊲	Tone Control Cable	77-0029
㊳	Shaft and Gear Assembly	412-1017
㊴	Anti Back Lash Spring	57-0151
㊵	Brass Eyelet	W739
㊶	Washer	28-4685
㊷	Tone Control Switch	77-0026
㊸	Spring	28-4187
㊹	Dial Bracket Assembly	412-1019
㊺	Spring	28-4160
㊻	Spring	28-8496
㊼	Gear	85-0054
㊽	Washer	28-4187
㊾	Drive Gear	57-0050
㊿	Dress Washers	28-4184
1	Automatic Cable	77-0028
2	Button Lock	57-0609

PACKARD CONTROL---MODEL P-1630

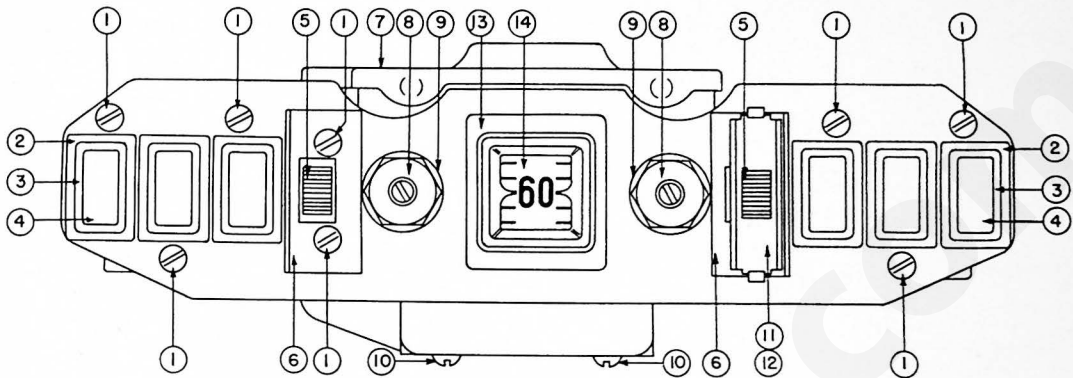


Front View

PARTS LIST

No.	Description	Part No.
①	Set Screw	W-1516
②	Light Shield	55-0198
③	Push Button Cover	57-0029
④	Push Button	55-0005
⑤	Tone and Return to Manual Knob	55-0004

No.	Description	Part No.
⑥	Light Shield	57-0563
⑦	Cover	57-0152
⑧	Washer	28-5435
⑨	Gland Nut	57-0026
⑩	Screw	W1516

No.	Description	Part No.
⑪	Indicator Plate (1700-1-2 car)	57-0025
⑫	Indicator Plate (1703-5 car)	57-0585
⑬	Dial Bezel	57-0586
⑭	Dial Assembly	57-0008
⑮	Dial Assembly	85-0019

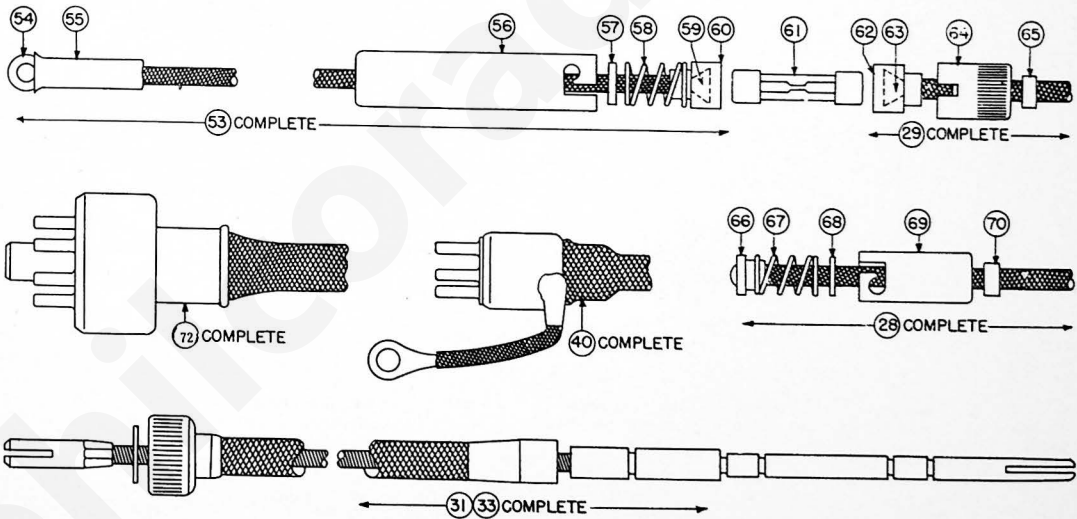

Cables, "A" Lead and Flexible Shaft

PARTS LIST

No.	Description	Part No.
①	"A" Lead	38-8183
②	"A" Lead	95-0013
③	Volume Shaft	37-0117
④	Tuning Shaft	57-0116
⑤	Tone Control Cable	77-0029
⑥	Ammeter Lead	77-0052
⑦	Terminal	L-1166
⑧	Sleeve	27-7242

No.	Description	Part No.
⑨	Fuse Housing	28-5610
⑩	Washer	27-9049
⑪	Spring	28-8841
⑫	Terminal	28-5609
⑬	Ferrule	27-4683
⑭	Fuse	45-2559
⑮	Ferrule	27-4683
⑯	Terminal	28-5609

No.	Description	Part No.
⑰	Housing	28-5608
⑱	Rubber Washer	W169
⑲	Ferrule	27-7133
⑳	Spring	28-8009
㉑	Washer	27-7132
㉒	Housing	28-1232
㉓	Rubber Washer	W169
㉔	Automatic Cable	77-0028