# INSTRUCTIONS FOR INSTALLING AND OPERATING

# MODELS PT-25, PT-27 & PT-39

## FOR STANDARD BROADCAST RECEPTION

Models PT-25, PT-27 and PT-39 are five tube superheterodyne radios for operation on either alternating current (AC) or direct current (DC) supply. They cover a frequency range from 540 kilocycles to 1720 kilocycles (KC).

The scale is calibrated in kilocycles (less the final zero). Standard broadcast stations are listed in kilocycles in most station lists.

The power rating of these radios is marked on the name label on the cabinets. Make sure that this rating corresponds with the power furnished your home.

#### INSTALLATION

After unpacking the radio make sure all the tubes are in their correct sockets pressed firmly down. A label on the cabinet will show the relative location of the tubes.

A twenty foot indoor aerial wire is provided with the radio. Uncoil this wire and place it around the baseboard moulding or under the rug. For best reception in steel reinforced buildings, the Philco Utility Aerial, Part No. 40-6384 (obtainable from your Philco dealer) is recommended. This especially designed, highly efficient, aerial can be installed in a few minutes. A convenient flexible lead-in is provided for connection to the radio aerial.

NOTE: If your house current is DC and no sound is heard after the tubes are sufficiently heated, reverse the electric plug in the outlet. The same procedure is advised if your power supply is AC and a slight hum is observed with the volume turned low.

#### **OPERATION**

Turn the "On-Off Switch and Volume Control" (left hand knob) to the right (clockwise) about half its range. This supplies power to the radio and illuminates the dial.

Now select the desired station by rotating the "Station Selector" (right hand knob).

For best tone, tune the desired station with the volume turned low. This enables you to get the exact point where the station comes in best. Then adjust the volume to the desired level with the volume control.


Some Police Radio Stations may be tuned in above 1600 kilocycles.

#### **SERVICE**

For the convenience of all radio owners, Philco has developed a plan for prompt, efficient radio service in every locality. This plan is known as "Radio Manufacturers

Service." There is a member in your neighborhood — his shop or store can be identified by the emblem shown here. To make sure of guaranteed work, genuine Philco tubes and parts, and standard prices — call a member of "Radio Manufacturers Service."

### INSTRUCTIONS FOR INSTALLING AND OPERATING MODELS PT-25, PT-27 & PT-39

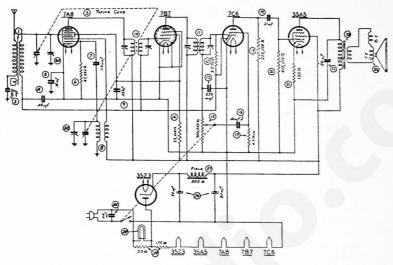

REPLACEMENT PARTS
PHILCO TRANSITONE HOME RADIO MODELS PT-25, PT-27 AND PT-39

Saham	No	Description	Philoo Part No	Schem	No	Description	Phileo Part No
Boicome							
1	Antenna	Transformer	32-3151	16	Tubular	Condenser (.01 mf., 2	00 V.)30-4479S
2	Tubular	Condenser (.0015 mf.	, 200 V.) 30-4555S	17	Resistor	(4.7 meg., 14 watt) .	33-547154
3	Tuning (	Condenser		18	Resistor	(220,000 chms, 1/4 wat	t)33-422154
4	Tubular	Condenser (.05 mf., 2	00 V.)30-45198	19	Tubular	Condenser (.01 mf., 4	00 V.)30-45728
5	Tubular	Condenser (.15 mf., 4	00 V.)30-45058	20	Resistor	(470,000 ohms, 14 wat	t)33-447154
6	Resistor	(47,000 ohms, 1/4 wa	tt)33-347154	21	Resistor	(130 chms, 1/2 watt)	33-113336
T	Mica Co	ondenser (110 mmf.)	30-1130	22	Tubular	Condenser (.04 mf., 40	0 V.)30-41198
8	Oscillato	or Transformer	32-3152	23	Output	Transformer Part of Sp	eaker No. 36-1469
9	Tubular	Condenser (.05 mf., 2	200 V.)30-45199	24	Speaker		36-1469
10	1st I. I	F. Transformer	32-3149	25	Tubular	Condenser (.04 mf., 40	0 V.)30-41198
11	2nd I.	F. Transformer	32-3150	26	Electrol	ytic Condenser	
12	Resistor	(2.2 meg., 1/4 watt)	33-522154		(20	-20 mf., 150 V.)	30-2382
13	Mica Co	ondenser (250 mmf.)	61-0033	27	Field (	Coil Part of Sp	eaker No. 36-1469
14	Resistor	(22,000 ohms, 1/2 wa	tt)33-322334	28	Pilot L	amp	34-2068
15	Volume	Control (500,000 ohr	ns)33-5306	29	Line Re	esistor	33-3367

#### WARRANTY

"We warrant each new Philco Transitone Radio Receiver and Speaker to be free from defects in material and workmanship under normal use and service, our obligation under this warranty being limited to making good at our depot any part or parts thereof which shall, within ninety (99) days after delivery of such Receiver to the original retail purchaser, be returned to our depot with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied, and of all other obligations or liabilities on our part, and we neither assume nor authorize any representative or other person to assume for us any other liability in connection with the sale of Receivers or Speakers. This warranty shall not apply to any Receiver or Speaker which shall have been repaired or altered other than by us in any way so as, in our judgment, to affect its stability or reliability, nor which has been subject to misuse, negligence, or accident, nor which has had the serial number altered, effaced or removed. Neither shall this warranty apply to any Receiver or Speaker which has been connected otherwise than in accordance with the instructions furnished by us."