

Number	Description	Part No.
1	Volume Control	4094
2	First R.F. Transformer	3884-N
3	Tuning Condenser	4200-A
4	First Compensating Condenser (Part of Tuning Condenser Assembly)	
5	By-Pass Condenser (.05 mfd.)	3615-J
6	By-Pass Condenser (.05 mfd.)	3615-M
7	Second R.F. Transformer	3884-P
8	By-Pass Condenser (.05 mfd.) and Resistor (250 ohms)	3615-K
9	Second Compensating Condenser (Part of Tuning Condenser Assembly)	
10	Third R.F. Transformer	3884-P
11	Third Compensating Condenser (Part of Tuning Condenser Assembly)	
12	Resistor (50,000 ohms)	4237
13	By-Pass Condenser (.5 mfd.)	3583
14	By-Pass Condenser (double .25 mfd.)	3557
15	Resistor (250,000 ohms)	3768
16	By-Pass Condenser (.00025 mfd.)	3082
17	Resistor (500,000 ohms)	3769
18	Resistor (100,000 ohms)	3767
19	Condenser (.01 mfd.)	3903-F
20	Resistor (500,000 ohms)	3769
21	Push-pull Input Transformer	4232
22	By-Pass Condenser (.05 mfd.)	3615-L
23	On-Off Switch	4095
24	Power Transformer (50-60 Cycle)	4813
25	B-C Resistor	4824
26	Filter Condenser	
27	Filter Choke	4819
28	Push-Pull Output Transformer	2766
29	Voice Coil and Cone	2769-B
30	Field Coil	2768
31	Electrolytic Condenser (14 mfd., 400 volts)	4818
	Speaker Plug and Cord	L-1124-A
	Four-Prong Socket Assembly	3977-A
	Speaker Socket	3977-B
	Five-Prong Socket Assembly	3979-A
	R.F. Tube Shield	4228-A
	Volume Control Insulators	4092
	Volume Control Insulators	4286
	Tuning Condenser Dial Scale	4261
	A.C. Cord	L-943-A
	Knob (Large)	4289-A
	Knob (Small)	4290-A
	Pilot Lamp Bracket	4871
	Cabinet	42000
	Fahnestock Clip	L-1126
	Chassis Hold-Down Bolts	W-490
	Feet	W-353