

LISTING OF PHILCO HOME RADIO RECEIVERS SOLD IN CANADA, 1928-1947

Showing USA equivalents where applicable/available

Compiled and Revised by Ron Ramirez © 1993-2015

| Model | Type of Cabinet | U.S. Equiv. | Power | Tubes Used | 220A | Radio-Phono | 220 | AC | 7 |
|-------------|-----------------|---------------|---------|------------|--------------|--------------|------------|---------|----|
| | | | | | 270A | Radio-Phono | 270 | AC | 7 |
| | | | | | 370A | Lazyboy | 370 | AC | 7 |
| 1928 | | | | | | | | | |
| | | | | | 1932 | | | | |
| 521 | Table Model | 511 | AC | 7 | | | | | |
| 522 | Table Model | 512 | AC | 7 | 4A | SW Converter | 4 | AC | 3 |
| 523 | Table Model | 513 | AC | 7 | 22AL | Radio-Phono | 22L | AC | 7 |
| 524 | Table Model | 514 | AC | 7 | 43AH | Highboy | 43H | AC | 8 |
| 525 | Table Model | 515 | AC | 7 | 51AB | Baby Grand | 51B | AC | 5 |
| 541 | Table Model | 531 | AC | 7 | 51AL | Lowboy | 51L | AC | 5 |
| 561 | Table Model | 551 | AC | 7 | 52AL | Lowboy | 52L | AC | 5 |
| | | | | | 71AB | Baby Grand | 71B | AC | 7 |
| 1929 | | | | | 71AL | Lowboy | 71L | AC | 7 |
| | | | | | 71AH | Highboy | 71H | AC | 7 |
| 82 | Lowboy | 86 | AC | 8 | 91AH | Highboy | 91H | AC | 9 |
| 82 | LB Drop Front | 86 | AC | 8 | 91AX | Console | 91X (1933) | AC | 9 |
| | | | | | 112AX | Console | 112X | AC | 11 |
| 82 | Highboy | 86 | AC | 8 | 551A | Colonial | 551 | AC | 5 |
| 62 | Table Model | 65 | AC | 6 | | Clock | | | |
| 62 | Lowboy | 65 | AC | 6 | 570A | Grandfather | 570 | AC | 7 |
| 62 | Highboy | 65 | AC | 6 | | Clock | | | |
| 62 | HB De Luxe | 65 | AC | 6 | | | | | |
| 83 | Lowboy | 87 | AC | 8 | 1933 | | | | |
| 83 | Highboy | 87 | AC | 8 | | | | | |
| 83 | HB De Luxe | 87 | AC | 8 | 80AB | Baby Grand | 80B | AC | 4 |
| 92 | Table Model | 95 | AC | 9 | 316AL | Lowboy | 16L | AC | 11 |
| 92 | Lowboy | 95 | AC | 9 | 318AH | Lowboy | 18H | AC | 8 |
| 92 | Highboy | 95 | AC | 9 | 319AL | Lowboy | 19L | AC | 6 |
| 92 | HB De Luxe | 95 | AC | 9 | 319AX | Console | 19X | AC | 6 |
| | | | | | 337L | Lowboy | 37L | Battery | 5 |
| 1930 | | | | | 357AC | Compact | 57C | AC | 4 |
| | | | | | 360AB | Baby Grand | 60B | AC | 5 |
| 73 | Table Model | 76 | AC | 7 | 360AL | Lowboy | 60L | AC | 5 |
| 73 | Console | 76 | AC | 7 | 389AB | Baby Grand | 89B | AC | 6 |
| 73 | Lowboy | 76 | AC | 7 | 391AL | Lowboy | 91L | AC | 9 |
| 73 | Highboy | 76 | AC | 7 | 391AX | Console | 91X | AC | 9 |
| 73 | HB De Luxe | 76 | AC | 7 | | | | | |
| 20A | Baby Grand | 20 | AC | 7 | 1934 | | | | |
| 20A | Consolette | 20 | AC | 7 | | | | | |
| 30 | Lowboy | 30 | Battery | 8 | 316AX | Console | 16X | AC | 11 |
| 30 | Highboy | 30 | Battery | 8 | 318AL | Lowboy | 18L | AC | 8 |
| 41 | Lowboy | 41 | DC | 6 | 318AMX | Console | 18MX | AC | 8 |
| 41 | Highboy | 41 | DC | 6 | 338B | Baby Grand | 38B | Battery | 5 |
| 77A | Table Model | 77 | AC | 7 | 338L | Lowboy | 38L | Battery | 5 |
| 77A | Console | 77 | AC | 7 | 344AB | Baby Grand | 44B | AC | 6 |
| 77A | Highboy | 77 | AC | 7 | 344AL | Lowboy | 44L | AC | 6 |
| 96A | Table Model | 96 | AC | 9 | 358AC | Compact | 58C | AC | 4 |
| 96A | Lowboy | 96 | AC | 9 | 360AMB | Baby Grand | 60MB | AC | 5 |
| 96A | Highboy | 96 | AC | 9 | 360AL | Lowboy | 60L | AC | 5 |
| 296A | Radio-Phono | 296 | AC | 9 | 360AH | Highboy | | AC | 5 |
| 296A | Concert Grand | Concert Grand | AC | 9 | | | | | |
| | | | | | 1935* | | | | |
| 1931 | | | | | 316AB | Baby Grand | 16B | AC | 11 |
| | | | | | 316AL | Lowboy | 16L | AC | 11 |
| 35 | Baby Grand | 35 | Battery | 7 | 316AX | Console | 16X | AC | 11 |
| 35 | Highboy | 35 | Battery | 7 | 334B | Baby Grand | 34B | Battery | 7 |
| 50A | Baby Grand | 50 | AC | 5 | 334L | Lowboy | 34L | Battery | 7 |
| 50A | Lowboy | 50 | AC | 5 | 338B | Baby Grand | 38B | Battery | 5 |
| 70A | Baby Grand | 70 | AC | 7 | 338L | Lowboy | 38L | Battery | 5 |
| 70A | Highboy | 70 | AC | 7 | 345AC | Compact | 45C | AC | 6 |
| 90A | Baby Grand | 90 | AC | 9 | 345AL | Lowboy | | AC | 6 |
| 90A | Lowboy | 90 | AC | 9 | 359AS | Table Model | 59S | AC | 4 |
| 90A | Highboy | 90 | AC | 9 | 366AB | Baby Grand | 66B | AC | 5 |
| 111A | Lowboy | 111 | AC | 11 | 366AL | Lowboy | 66L | AC | 5 |
| 111A | Highboy | 111 | AC | 11 | 3118AB | Baby Grand | | AC | 8 |
| 112A | Lowboy | 112 | AC | 11 | 3118AL | Lowboy | | AC | 8 |
| 112A | Highboy | 112 | AC | 11 | 3118AH | Highboy | 118H | AC | 8 |
| 211A | Radio-Phono | 211 | AC | 11 | 3118AX | Console | 118X | AC | 8 |
| 212A | Radio-Phono | 212 | AC | 11 | | | | | |

| | | | | | | | | | |
|-------------|-------------|----------|---------|----|-------------|----------------|-----------|---------|----|
| 1936 | | | | | 39-3A1ACBI | Compact, ivory | 38-12CBI# | AC | 5 |
| 338B | Baby Grand | 38B | Battery | 5 | 39-3A2AT | Table Model | 38-12T# | AC | 5 |
| 338F | Console | 38F | Battery | 5 | 39-3A5ACB | Bakelite | 38-15CB# | AC | 5 |
| 359AC | Compact | 59C | AC | 4 | 39-3A5ACBI | Compact, ivory | 38-15CBI# | AC | 5 |
| 384AB | Baby Grand | 84B | AC | 4 | 39-3A5AT | Table Model | 38-15T# | AC | 5 |
| 3116AB | Baby Grand | 116B | AC | 11 | 39-3B4CB | Bakelite | 40-90CB# | Battery | 4 |
| 3116AX | Console | 116X | AC | 11 | 39-3B4F | Console | | Battery | 4 |
| 3610AB | Baby Grand | 610B | AC | 5 | 39-317AT | Table Model | 39-17T | AC | 5 |
| 3610AF | Console | 610F | AC | 5 | 39-317AF | Console | 39-17F | AC | 5 |
| 3610AL | Lowboy | | AC | 5 | 39-319AT | Table Model | 39-19T | AC | 5 |
| 3610AT | Table Model | 610T | AC | 5 | 39-319AF | Console | 39-19F | AC | 5 |
| 3623B | Baby Grand | 623B | Battery | 6 | 39-330AT | Table Model | 39-25T# | AC | 6 |
| 3623F | Console | 623F | Battery | 6 | 39-330AXF | Console | | AC | 6 |
| 3630AB | Baby Grand | 630B | AC | 6 | 39-331AXF | Console | 39-31XF | AC | 6 |
| 3630AX | Console | 630X | AC | 6 | 39-340AXX | Console | 39-40XX | AC | 8 |
| 3635AK | Console | | AC | 6 | 39-341AXX | Console | | AC | 8 |
| 3650AB | Baby Grand | 650B | AC | 8 | 39-371T | Portable | 39-71T | Battery | 4 |
| 3650AX | Console | 660X# | AC | 8 | 39-372T | Portable | 39-72T | Battery | 4 |
| 3655AK | Console | | AC | 8 | 39-3116ARX | Console | 39-116XX | AC | 13 |
| 3665AX | Console | 665X | AC | 10 | TP34 | Table Model | TP-4 | AC/DC | 5 |
| 1937 | | | | | TP34I | Table Model | TP-4I | AC/DC | 5 |
| 37-333B | Baby Grand | 37-33B | Battery | 5 | 1940 | | | | |
| 37-333F | Console | 37-33F | Battery | 5 | 10T | Table Model | TH-4 | AC/DC | 5 |
| 37-338B | Baby Grand | 37-38B | Battery | 6 | 10TI | Table Model | TP-4I# | AC/DC | 5 |
| 37-338J | Console | 37-38J | Battery | 6 | 12T | Table Model | TP-20 | AC/DC | 5 |
| 37-361AB | Baby Grand | 37-38B# | AC | 5 | 14T | Table Model | | AC/DC | 5 |
| 37-361AF | Console | 37-61F | AC | 5 | 15AT | Table Model | 40-140T | AC | 6 |
| 37-361ABN | Baby Grand | | AC | 5 | 16AT | Table Model | 40-145T | AC | 6 |
| 37-384AB | Baby Grand | 37-84B | AC | 4 | 17AT | Table Model | 40-155T# | AC | 7 |
| 37-3116AX | Console | 37-116X | AC | 15 | 18AF | Console | 40-165F | AC | 6 |
| 37-3600AC | Compact | 37-600C | AC | 4 | 19AXF | Console | 40-180XF | AC | 7 |
| 37-3610AT | Table Model | 37-630T# | AC | 5 | 21AXX | Console | 40-195XX | AC | 10 |
| 37-3610AJ | Console | 37-610J | AC | 5 | 22AXF | Console | 40-190XF# | AC | 8 |
| 37-3623B | Baby Grand | 37-623B | Battery | 6 | 23AK | Console | 40-165K# | AC | 6 |
| 37-3623J | Console | 37-623J | Battery | 6 | 24T | Table Model | TH-5 | AC/DC | 5 |
| 37-3624B | Baby Grand | 37-624B | 6 Volt | 6 | 25T | Table Model | 40-115C | AC/DC | 6 |
| 37-3624X | Console | | 6 Volt | 6 | 26T | Table Model | TP-12 | AC/DC | 5 |
| 37-3630AB | Baby Grand | | AC | 6 | 27T | Table Model | PT-43 | AC/DC | 5 |
| 37-3630AX | Console | 37-630X | AC | 6 | 28T | Table Model | PT-61 | AC/DC | 5 |
| 37-3640AB | Baby Grand | 37-640B | AC | 7 | 29T | Table Model | PT-50 | AC/DC | 5 |
| 37-3640X | Console | 37-640X | AC | 7 | 31T | Table Model | PT-25 | AC/DC | 5 |
| 37-3650AX | Console | 37-650X | AC | 8 | 31TI | Table Model | PT-27 | AC/DC | 5 |
| 37-3670AX | Console | 37-670X | AC | 11 | 201T | Table Model | PT-25# | Battery | 4 |
| 37-310AX | Console | 37-10X | AC | 9 | 202F | Console | 40-95F | Battery | 4 |
| 37-311AX | Console | 37-11X | AC | 10 | 203T | Table Model | | Battery | 5 |
| 1938 | | | | | 203F | Console | | Battery | 5 |
| 38-C2AXX | Console | 38-2XX | AC | 11 | 204T | Table Model | 40-100T | Battery | 4 |
| 38-C3AXX | Console | 38-3XX | AC | 9 | 205F | Console | | Battery | 4 |
| 38-C4AXX | Console | 38-4XX | AC | 8 | 206T | Table Model | | Battery | 4 |
| 38-C7AT | Table Model | 38-7T | AC | 6 | 330AXF | Console | | AC | 6 |
| 38-C7ACS | Chairside | 38-7CS | AC | 6 | 331AXF | Console | 39-31XF | AC | 6 |
| 38-C7AXX | Console | 38-7X | AC | 6 | 340AXX | Console | 39-40XX | AC | 8 |
| 38-C9AT | Table Model | 38-9T | AC | 6 | 341AXX | Console | | AC | 8 |
| 38-C9AX | Console | | AC | 6 | 3116ARX | Console | 39-116RX | AC | 13 |
| 38-C10AT | Table Model | 38-10T | AC | 5 | 401T | Portable | 40-81T | Battery | 4 |
| 38-C10AF | Console | 38-10F | AC | 5 | 402T | Portable | 40-88T | Battery | 5 |
| 38-C10AK | Console | | AC | 5 | 403T | Portable | | Battery | 4 |
| 38-C12AT | Table Model | | AC | 5 | 404P | Port. w/phono | 40-504P | Battery | 4 |
| 38-C116AXX | Console | 38-116XX | AC | 15 | 701 | Radio-Phono | 40-508P | AC | 7 |
| 38-C324T | Table Model | | Battery | 4 | 1941 | | | | |
| 38-C325T | Table Model | | Battery | 6 | 32AT | Table Model | | AC | 5 |
| 38-C325K | Console | | Battery | 6 | 33AT | Table Model | 41-714T | AC | 6 |
| 38-C623T | Table Model | 38-623T | Battery | 6 | 34AT | Table Model | 41-245T | AC | 7 |
| 38-C623X | Console | | Battery | 6 | 35AT | Table Model | 41-712T | AC | 5 |
| 38-C624T | Table Model | 38-624T | 6 Volt | 6 | 35ATD | Table Model | | AC | 5 |
| 38-C624X | Console | | 6 Volt | 6 | 36T | Table Model | | AC/DC | 5 |
| 1939 | | | | | 36TI | Table Model | | AC/DC | 5 |
| 39-3A1ACB | Bakelite | TH-3# | AC | 5 | 37AT | Table Model | | AC | 6 |
| | | | | | 38AT | Table Model | 41-250T | AC | 8 |

| | | | | | | | | | |
|-------------|-------------------|----------|-------------|----|-------------|-------------------|----------|------------|---|
| 39AT | Table Model | 41-722T | AC | 6 | 49AT | Table Model | | AC | 5 |
| 40AK | Console | | AC | 6 | 50AT | Table Model | | AC | 6 |
| 41AJ | Console | 41-265K# | AC | 7 | 51AT | Table Model | 42-730T# | AC | 7 |
| 41AK | Console | 41-265K | AC | 7 | 52AF | Console | | AC | 5 |
| 42AX | Console | | AC | 8 | 53AX | Console | | AC | 6 |
| 43AX | Console | 41-290X | AC | 10 | 54AX | Console | | AC | 8 |
| 44AX | Console | 41-315X | AC | 11 | 55AT | Table Model | 42-760T | AC | 8 |
| 45T | Table Model | PT-25 | AC/DC | 5 | 56AX | Console | | AC | 8 |
| 45TI | Table Model | PT-27 | AC/DC | 5 | 702AP | Table Radio-Phono | | AC | 5 |
| 46T | Table Model | | AC/DC | 5 | | | | | |
| 46TI | Table Model | | AC/DC | 5 | 703AP | Radio-Phono | | AC | 5 |
| 46TL | Table Model | | AC/DC | 5 | 705P | Radio-Phono | | AC | 9 |
| 46TLI | Table Model | | AC/DC | 5 | 715AP | Radio-Phono | 41-608P | AC | 9 |
| 47AT | Table Model | | AC | 5 | | | | | |
| 207T | Table Model | | Battery | 4 | 1946 | | | | |
| 209T | Table Model | 41-95T | Battery | 5 | | | | | |
| 210T | Table Model | 41-90CB | Battery | 4 | 57 | Table Model | 46-200 | AC/DC | 5 |
| 211T | Table Model | | Battery | 5 | 57-I | Table Model | 46-200-I | AC/DC | 5 |
| 212F | Console | | Battery | 5 | 61 | Table Model | 46-250 | AC/DC | 5 |
| 213K | Console | | Battery | 5 | 61-I | Table Model | 46-250-I | AC/DC | 5 |
| 214T | Table Model | | Battery | 6 | 64 | Table Model | 46-420 | AC/DC | 6 |
| 301RP | Wireless phono | RP-1 | AC | 2 | 64-I | Table Model | 46-420-I | AC/DC | 6 |
| | | | | | 65 | Table Model | 46-421 | AC/DC | 6 |
| 405T | Portable | 41-81T | Battery | 4 | 65-I | Table Model | 46-421-I | AC/DC | 6 |
| 406T | Portable | 41-83T | Battery | 5 | 217 | Table Model | 46-131 | Battery | 4 |
| 407T | Portable | 41-84T | AC/DC/Batt. | 5 | 409 | Portable | 46-350 | AC/DC/Batt | 6 |
| 408T | Portable | 41-84T | AC/DC/Batt. | 5 | 706 | Table Radio-Phono | 46-1201 | AC | 5 |
| 702AP | Table Radio-Phono | | AC | 5 | | | | | |
| 703AP | Radio-Phono | | AC | 5 | 1947 | | | | |
| 715P | Radio-Phono | 41-608P | AC | 9 | | | | | |
| 1942 | | | | | 60 | Table Model | 46-203+ | AC/DC | 5 |
| | | | | | 66 | Table Model | 46-454+ | AC/DC | 6 |
| | | | | | 68 | Console | | AC | 6 |
| 33AT | Table Model | | AC | 6 | 75 | Table Model | 48-460 | AC/DC | 6 |
| 34AT | Table Model | 41-245T | AC | 7 | 75-I | Table Model | 48-460-I | AC/DC | 6 |
| 37AT | Table Model | | AC | 6 | 218 | Table Model | 46-132 | Battery | 5 |
| 44AXD | Console | 41-315X | AC | 11 | 221 | Console | 46-133+ | Battery | 5 |
| 45T | Table Model | 42-PT25 | AC/DC | 5 | 708 | Table Radio-Phono | 46-1203 | AC | 6 |
| 45TI | Table Model | PT-27 | AC/DC | 5 | | | | | |
| 48AT | Table Model | | AC | 5 | | | | | |

* From 1935 on, Philco radios are listed in this chart by model year instead of calendar year.

USA model is similar in appearance but differs from Canadian model.

+ USA model was proposed but never produced.

Sources:

Philco Corporation of Canada Limited, *List of Philco Sets Sold in Canada to Date*, July 1, 1942, courtesy Paul Rosen

Philco 1940 Year Book. Toronto: Philco Corporation of Canada Limited, 1940.

Philco 1941 Year Book. Toronto: Philco Corporation of Canada Limited, 1941.

Philco 1946 Year Book. Toronto: Philco Corporation of Canada Limited, 1946.

Philco 1947 Year Book. Toronto: Philco Corporation of Canada Limited, 1947.

Philco Corporation of Canada Limited, sales and promotional material, 1940-42.