



FOR CORRECT OPERATION

Before placing this Philco Radio in operation, loosen the Chassis Mounting Bolts just enough to allow the chassis to float freely on the soft rubber support pads. These bolts will be found under the shelf that carries the chassis, or, in the Baby Grand Models, under the bottom of the Cabinet.

