# INSTRUCTIONS FOR INSTALLING AND OPERATING

## MODEL TP-4

### STANDARD BROADCAST RECEIVER

Model TP-4 is a five tube superheterodyne radio receiver for operation on either alternating current (AC) or direct current (DC) supply. It covers a frequency range from 540 to 1720 kilocycles (KC) on the broadcast band and also includes a local police range from 2.3 to 2.5 megacycles (MC).

The broadcast scale is calibrated in kilocycles (less the final zero). Standard

broadcast stations are listed in kilocycles in most station lists.

The local police band is calibrated in megacycles. A megacycle is 1,000 kilocycles.

The power rating of this receiver is marked on the name label on the cabinet. Make sure that this rating corresponds with the power furnished your home.

#### **INSTALLATION**

After unpacking the receiver make sure all the tubes are in their correct sockets pressed firmly down. A label on the cabinet will show the relative location of the tubes.

A twenty foot indoor aerial wire is provided with the receiver. Uncoil this wire and place it around the baseboard moulding or under the rug. For best reception in steel reinforced buildings, the Philco Utility Aerial, Part No. 40-6384 (obtainable from your Philco dealer), is recommended. This especially designed, highly efficient, aerial can be installed in a few minutes. A convenient flexible lead-in is provided for connection to the receiver aerial.

NOTE: If your house current is DC and no sound is heard after the tubes are sufficiently heated, reverse the electric plug in the outlet. The same procedure is advised if your power supply is AC and a slight hum is observed with the volume turned low.

#### **OPERATION**


Turn the "On-Off Switch and Volume Control" (left-hand knob) to the right (clockwise) about half its range. This supplies power to the receiver and illuminates the dial.

Now select the desired station by rotating the "Station Selector" (right-hand knob). Local Police calls may be tuned in by pushing the "Broadcast-Police" switch, located on the back of the receiver, to the "Police" position.

For best tone, tune the desired station with the volume turned low. This enables you to get the exact point where the station comes in best. Then adjust the volume to the desired level with the volume control.

#### Service . . .

For the convenience of all radio owners, Philco has developed a plan for prompt, efficient radio service in every locality. This plan is known as "Radio Manufacturers Service." There is a member in your neighborhood—his shop or store can be identified by the emblem shown here. To make sure of guaranteed work, genuine Philco tubes and parts, and standard prices—call a member of "Radio Manufacturers Service."

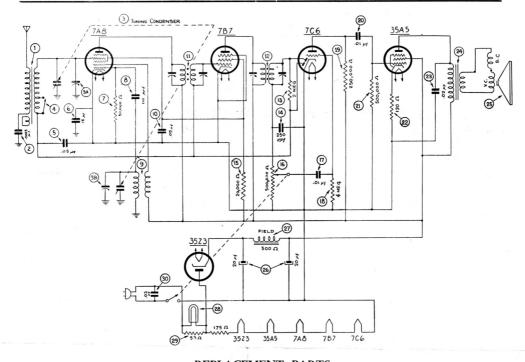

#### REPLACEMENT PARTS TRANSITONE HOME RADIO MODEL TP-4

Schem 1	No. Description	Philco Part No.	Schem 1	No.	Description	$\begin{array}{c} Phileo\\ Part\ No. \end{array}$
1	Antenna Transformer	32-3164	18	Resis	stor (4 meg., $1/3$ wat	t)33-540244
2	Tubular Condenser (.0015 mf.,		19	Resis	stor (250,000 ohms,	
	200 V.)			1/3  v	watt)	33-425244
3	Tuning Condenser		20		ılar Condenser (.01 n	
4	Switch	42-1406		400 v	7.)	30-4572S
5	Tubular Condenser (.05 mf.,		21	Resis	stor (500,000 ohms,	
	200 v.)	30-4519S		1/3  v	watt)	33-450244
6	Tubular Condenser (.15 mf.,		22		stor (130 ohms, 1/2 w	
	400 v.)	30-4505S	23		ılar Condenser (.02 n	
7	Resistor (50,000 ohms, 1/3 watt)	33-350244		400 v	7.)	30-4516S
8	Mica Condenser (110 mmf.)	30-1031	24		out Transformer	
9	Oscillator Transformer	32-3152			Part of Spea	ker No. 36-1469
10	Tubular Condenser (.05 mf.,		25		ker	
	200 v.)		26	Tubu	ılar Condenser (.03 r	nf.,
11	1st I. F. Transformer				7.)	30-4449S
12	2nd I. F. Transformer		27		trolytic Condenser	
13	Resistor (2 meg., 1/3 watt)				20 mf., 150 v.)	30-2382
14	Mica Condenser (250 mmf.)		28	Field	l Coil	
15	Resistor (20,000 ohms, 1/3 watt)				Part of Speaker, I	
16	Volume Control (500,000 ohms)	. 33-5306	29		Lamp	
17	Tubular Condenser (.01 mf.,		30	Line	Resistor	33-3367
	200 v.)	30-4479S				

#### WARRANTY

"We warrant each new Transitone Radio Receiver and Speaker to be free from defects in material and workmanship under normal use and service, our obligation under this warranty being limited to making good at our depot any part thereof which shall, within ninety (90) days after delivery of such Receiver to the original retail purchaser, be returned to our depot with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective; this warranty being expressly in lieu of all other warranties expressed or implied, and of all other obligations or liabilities on our part, and we neither assume nor authorize any representative or other person to assume for us any other liability in connection with the sale of Receivers or Speakers. This warranty shall not apply to any Receiver or Speaker which shall have been repaired or altered other than by us in any way so as, in our judgment, to affect its stability or reliability, nor which has had the serial number altered, effaced or removed. Neither shall this warranty apply to any Receiver or Speaker which has been connected otherwise than in accordance with the instructions furnished by us."

Mad: ILS A