Model 86

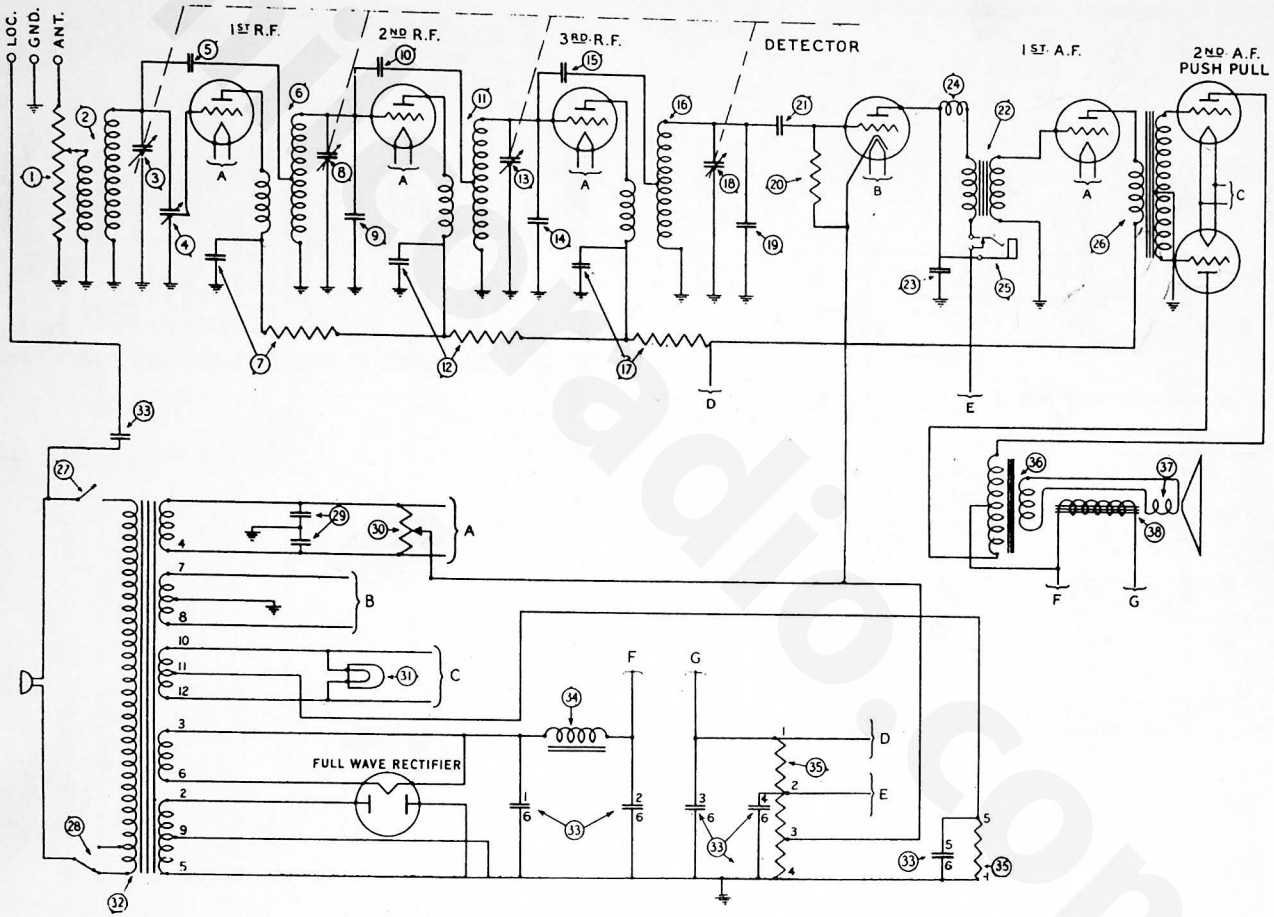
LOC.
GND.
ANT.
1ST R.F.
2ND R.F.
3RD R.F.
DETECTOR
1ST A.F.
2ND A.F.
PUSH PULL
A
B
C
D
E
F
G
FULL WAVE RECTIFIER

MODEL 86

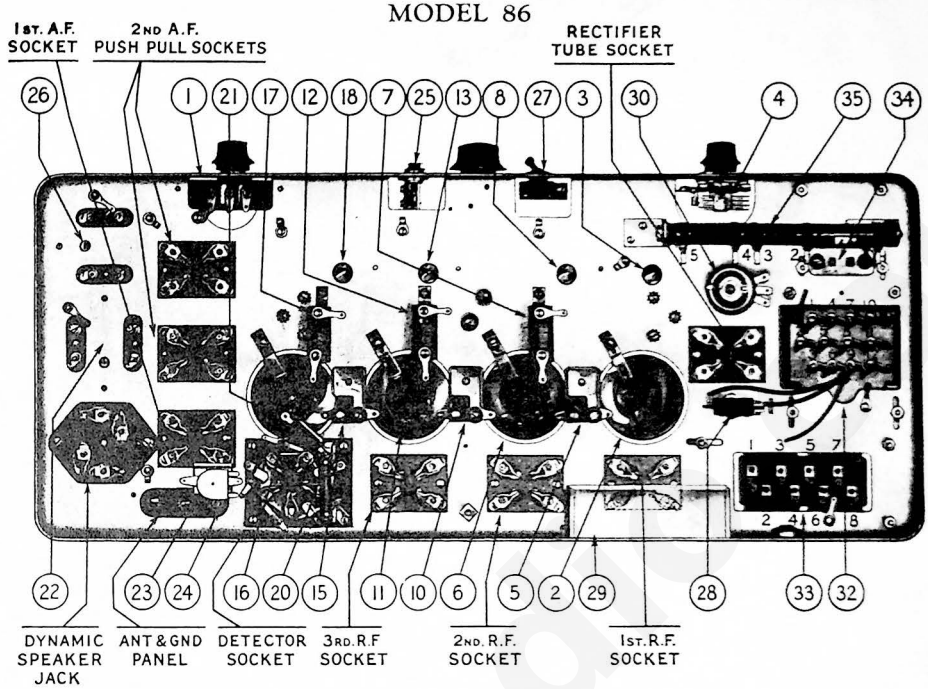

Replacement Parts for Model 86

	Part Name	Part No.
1	Volume Control	3076
2	R. F. Transformer (Antenna Tuning)	3075-B
3 - 8 - 12 - 13	Tuning Condenser (complete with drum and scale)	3001-B
4	Range Control	3133
5 - 10 - 15	Neutralizing Condenser	3025-A
6 - 11 - 16	R. F. Transformer	3075-A
7 - 12 - 17	By-Pass Condenser (.1 mfd. with Plate Resistor Winding)	3292-A
8 - 14 - 19	Compensating Condensers	3282-A
20	Grid Leak	3083
21	Grid Condenser	3082
22	Audio Transformer	3241
23	By-Pass Condenser (.001 mfd.)	3081
24	Detector R. F. Choke	3256-A
25	Phonograph Pick-Up Jack	3087
26	Push-Pull Input Transformer	3242
27	Power-Toggle Switch	3253
28	Primary Tap Switch	3116
29	Filament By-Pass Condenser (2 sections .5 mfd.)	3080
30	6-Ohm Hum Adjuster	3096
31	Pilot Lamp	3105
32	Power Transformer (60 cycle)	3271
33	Filter Condenser Block (60 cycle)	3246
34	Filter Choke Coil	3269
35	B-C Section Resistor	3232
36	Push-Pull Output Transformer	2897
	Speaker Plug	2871-A
37	Speaker Cone and Voice Coil	2898
38	Speaker Field Coil	2896
	Cable Spring	3012
	Control Knob Tuning Condenser	3035-A
	Control Knob (Volume and Range Control)	3036-A
	226 Tube Socket	3051-A
	Condenser Drive Cable	3054-A
	Knob Spring	3103
	Fibre Adjusting Wrench	3164
	280 Tube Socket	3169-A
	171 Tube Socket	3170-A
	Pilot Lamp Socket Assembly	3202-A
	Jack Insulator Nut	3231
	Terminal Panel Assembly	3236-A
	Speaker Socket	3247-A
	227 Tube Socket, Spring Type	3263-A
	Jack Insulator	3272
	A.C. Attachment Cord and Plug	L-943-A
	Wiring Cable	L-1037
	Speaker Cable	L-1039
	Socket Wrench for Speaker Mounting Bolts	3312

***Note:*—When ordering replacements for 25-cycle Receivers (Model 82) use the following part numbers instead of those given above. All other part numbers remain the same.**

32	Power Transformer (25 cycle)	3278
33	Filter Condenser Block (25 cycle)	3279