MODEL S-1526

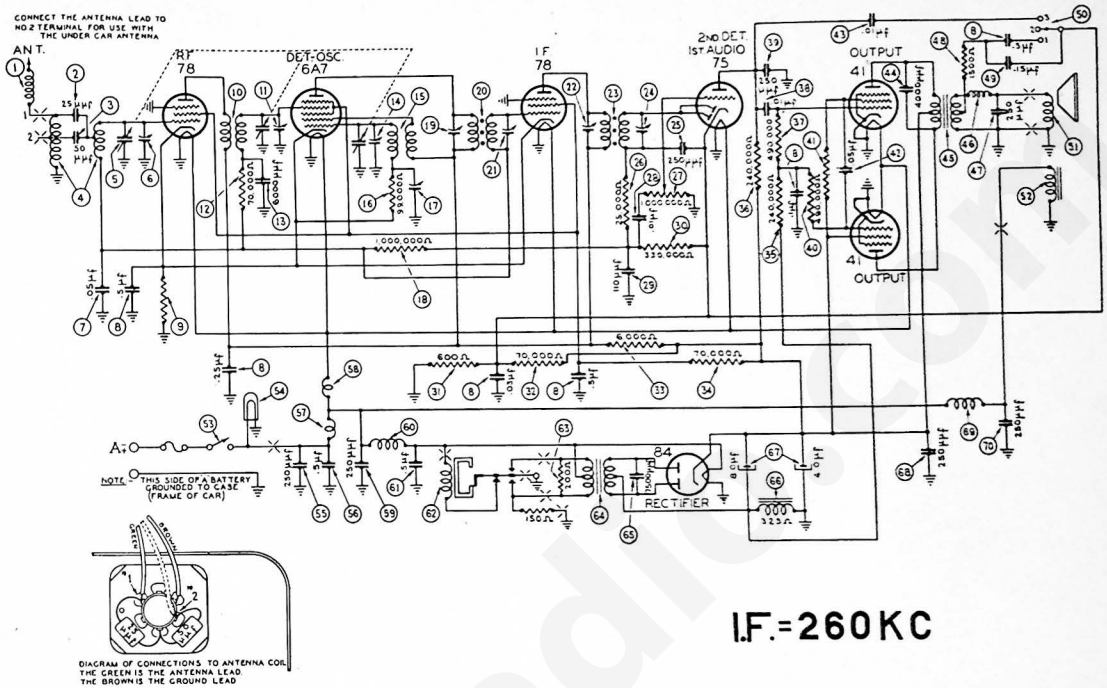

I.F.=260KC

Aligning Procedure will be found on page 168.

MODEL S-1526 PARTS LIST

No.	Description	Part No.
①	Antenna Choke	32-2063
②	Condenser (25 mmfd.)	30-1067
③	Condenser (50 mmfd.)	30-1029
④	Antenna Transformer	32-2855
⑤	Tuning Condenser	31-2161
⑥	First Padder (on Tun. Cond.)	
⑦	Condenser (.05 mfd.)	30-4444
⑧	Condenser (.03-.1-.25-.5-.5 mfd.)	30-4554
⑨	Resistor (550 ohms)	33-1280
⑩	R. F. Transformer	32-2830
⑪	Second Padder (on Tun. Cond.)	
⑫	Resistor (70,000 ohms)	33-370344
⑬	Condenser (6,000 mmfd.)	30-4467
⑭	Third Padder (on Tun. Cond.)	
⑮	Oscillator Transformer	32-2828
⑯	Resistor (99,000 ohms)	33-399344
⑰	Low Frequency Padder	31-6230
⑱	Resistor (1,000,000 ohms)	33-510344
⑲	Padder (Pri. 1st I. F. Trans.)	
⑳	First I. F. Transformer	32-2791
㉑	Padder (Sec. 1st I. F. Trans.)	
㉒	Padder (Pri. 2nd I. F. Trans.)	
㉓	Second I. F. Transformer	32-2793
㉔	Padder (Sec. 2nd I. F. Trans.)	
㉕	Condenser (250 mmfd.)	30-1032
㉖	Resistor (25,000 ohms)	33-325344
㉗	Volume Control (1,000,000 ohms)	33-5251
㉘	Condenser (.01 mfd.)	30-4479
㉙	Condenser (110 mmfd.)	30-1031
㉚	Resistor (330,000 ohms)	33-433344
㉛	Resistor (600 ohms)	33-1212
㉜	Resistor (70,000 ohms)	33-370444
㉝	Resistor (6,000 ohms)	33-260344
㉞	Resistor (70,000 ohms)	33-370344
㉟	Resistor (240,000 ohms)	33-424344
㊱	Resistor (240,000 ohms)	33-424344
㊲	Resistor (490,000 ohms)	33-449344
㊳	Condenser (.01 mfd.)	30-4514
㊴	Condenser (250 mmfd.)	30-1032
㊵	Resistor (490,000 ohms)	33-449344
㊶	Resistor (3,500 ohms)	33-235344
㊷	Condenser (.05 mfd.)	30-4454
㊸	Condenser (.01 mfd.)	30-4501
㊹	Condenser (2,000 mmfd.)	30-4177
㊺	Output Transformer	32-2928
㊻	Choke	32-1374
㊼	Condenser (250 mmfd.)	30-1032
㊽	Resistor (1,500 ohms)	33-215344
㊾	Condenser (.15 mfd.)	30-4191
㊿	Tone Control Switch	42-1389
(51)	Cone & Voice Coil	36-3526
(52)	Field Coil	32-9236
(53)	On & Off Switch	42-1369
(54)	Pilot Lamp	34-2039
(55)	Condenser (250 mmfd.)	30-1032
(56)	Condenser (.5 mfd.)	30-4474
(57)	"A" Choke	32-1374
(58)	Filament Choke	32-2729
(59)	Condenser (250 mmfd.)	30-1032
(60)	Vibrator Choke	32-2812
(61)	Condenser (.5 mfd.)	30-4474
(62)	Vibrator	41-3170-3
(63)	Resistor (200 ohms)	33-120344
(64)	Power Transformer	32-7911
(65)	Condenser (7,500 mmfd.)	30-4420
(66)	Filter Choke	32-7910
(67)	Filter Condenser (4-8 mfd.)	30-2258
(68)	Condenser (250 mmfd.)	30-1032
(69)	Choke	32-2657
(70)	Condenser (250 mmfd.)	30-1032
	Receiver Housing	38-2058
	Four Prong Socket	27-6044
	Five Prong Socket	27-6035
	Six Prong Socket	27-6036
	Seven Prong Socket	27-6037
	Inductive Suppressor	32-2250
	Interference Condenser	30-4007
	Fuse	7227

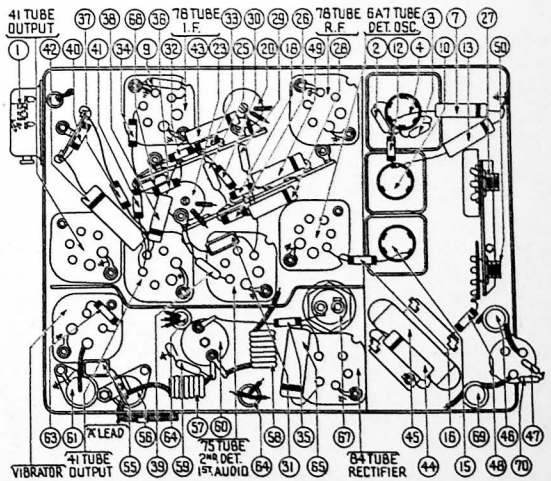

No.	Description	Part No.
	Fuse Insulator	27-7729
	Tuning Control Shaft	28-8790
	Volume Control Shaft	28-8791
	Tone Control Shaft	28-8792
	Scale Assembly	42-5779
	Speaker Cable	41-3231
	Tuning & Volume Knob	27-4689
	Tone & "On-Off" Knob	27-4618