MODEL P-1635

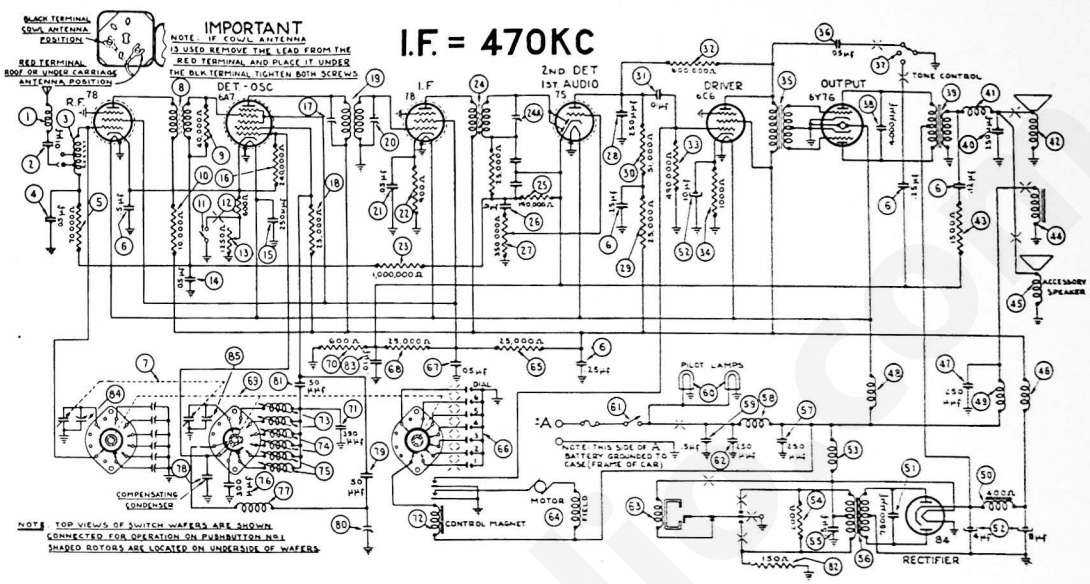

Aligning Procedure will be found on page 173.

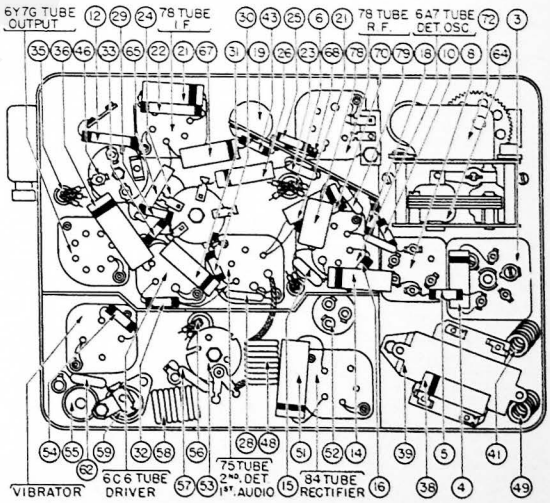

PARTS LIST

No.	Description	Part No.
1	Antenna Choke	32-1956
2	Condenser (.01 mfd.)	61-0014
3	Antenna Transformer	65-0008
4	Condenser (.05 mfd.)	30-4569
5	Resistor (70,000 ohms)	33-370337
6	Condenser (.12-.25-.25-.25-.5 mfd.)	61-0019
7	Tuning Condenser	63-0003
8	R. F. Transformer	65-0009
9	Resistor (40,000 ohms)	33-339137
10	Resistor (10,000 ohms)	33-310337
11	Local-Distant Switch	42-1429
12	Resistor (600 ohms)	33-160438
13	Sensitivity Control (1,250 ohms)	33-5248-4
14	Condenser (.05 mfd.)	30-4444
15	Condenser (250 mmfd.)	30-1032
16	Resistor (240,000 ohms)	33-424337
17	Padder (Pri. 1st I. F. Trans.)	
18	Resistor (25,000 ohms)	33-325337
19	First I. F. Transformer	65-0002
20	Padder (Sec. 1st I. F. Trans.)	
21	Condenser (.05 mfd.)	30-4569
22	Resistor (900 ohms)	33-190438
23	Resistor (1,000,000 ohms)	33-510337
24	Second I. F. Transformer	65-0003
24a	Padder (Sec. 2nd I. F. Trans.)	
25	Resistor (190,000 ohms)	33-419337
26	Condenser (.01 mfd.)	30-4479
27	Volume Control (350,000 ohms)	67-0005
28	Condenser (250 mmfd.)	30-1032
29	Resistor (25,000 ohms)	33-325337
30	Resistor (51,000 ohms)	33-351337
31	Condenser (.01 mfd.)	30-4501
32	Resistor (600,000 ohms)	33-460337
33	Resistor (490,000 ohms)	33-449337
34	Resistor (1,000 ohms)	33-210337
35	Input Transformer	32-7779
36	Condenser (.05 mfd.)	30-4012
37	Tone Control Switch	42-1430
38	Condenser (4,000 mmfd.)	30-4185
39	Output Transformer	32-7778
40	Condenser (250 mmfd.)	30-1032
41	Choke	32-1004
42	Cone and Voice Coil	91-0048
43	Resistor (1,500 ohms)	33-215337
44	Field Coil	Not Replaceable
45	Accessory Speaker	73-0019
46	"B" Choke	32-1281
47	Condenser (250 mmfd.)	30-1032
48	Filament Choke	32-1604
49	Choke	32-2657
50	Filter Choke	32-7811
51	Condenser (7,500 mmfd.)	30-4567
52	Filter Condenser (4-8-10 mfd.)	61-0012
53	Vibrator Choke	32-2537
54	Resistor (200 ohms)	32-120337
55	Condenser (.5 mfd.)	30-4474
56	Power Transformer	32-7720
57	Condenser (250 mmfd.)	30-1032
58	"A" Choke	32-1644
59	Condenser (.5 mfd.)	30-4474
60	Pilot Lamp	34-2064
61	On-Off Switch	42-1374
62	Condenser (250 mmfd.)	30-1032
63	Vibrator	41-3170
64	Motor	83-0001
65	Resistor (25,000 ohms)	33-325437
66	Push Button Switch	85-0017
67	Condenser (.05 mfd.)	30-4444
68	Resistor (25,000 ohms)	33-325337
69	Rotary Switch Assembly	77-0174
70	Resistor (600 ohms)	33-160438
71	Silver Cap Condenser (390 mmfd.)	61-0031
72	Motor and Relay Assembly	77-0178
73	Oscillator Transformer (Low Freq.)	65-0006
74	Oscillator Transformer (Med. Freq.)	65-0005
75	Oscillator Transformer (High Freq.)	65-0004
76	Silver Cap Condenser (300 mmfd.)	61-0003
77	Oscillator Transformer	65-0007
78	Thermel Comp. Condenser	61-0011
79	Condenser (50 mmfd.)	30-1101
80	Low Frequency Padder	31-6230
81	Condenser (50 mmfd.)	30-1101
82	Resistor (150 ohms)	33-115337
83	Condenser (.01 mfd.)	30-4479
84	First Padder (on Tun. Cond.)	
85	Second Padder (on Tun. Cond.)	
	Resistor (25,000 ohms)	33-325337
	Antenna Padder Assembly	77-0017
	Interference Condenser	30-4007
	Interference Condenser	30-4475
	Distributor Suppressor	32-2250
	Push Button	55-0021
	Return to Manual Button	55-0096
	Tuning and Volume Knob	27-1687
	Return to Dial Switch	Part of 83
	Switch Knob	28-7255
	Call Letter Kit	81-0024
	"T" Bolt (Set Mtg.)	28-6161
	Nut (Set Mtg.)	W518
	Stud (Speaker Mtg.)	28-6088
	Nut (Speaker Mtg.)	W55
	Dial Face Glass	55-0014
	Pointer	57-0238