

PHILCO AUTO RADIO

CHRYSLER SKYWAY ANTENNA for 1940, 1941 and 1942 CARS

CHRYSLER PART NO. 860201

PHILCO PART NO. 91-0099

Complete Assembly	91-0099
Antenna Rod	57-0131
Rubber Gasket (Upper)	27-4549
Rubber Gasket (Lower)	27-4501
Spacer	27-4547
Lower Insulator Cap	27-4543
Washer	W-424FA3
Lockwasher	W-287
Long Insulator Screw	W-1885
Strap Assembly	45-2413
Rubber Washer	27-4550
Adapter (to set)	77-0476
Lead-in	95-0065
Insulator	55-0372
Lower Insulator Screw	28-6633
Cover Plate	57-0605
Upper Insulator	27-4612
Lower Insulator	27-4613
Ball	27-4739
Hood Grounding Spring	57-0617


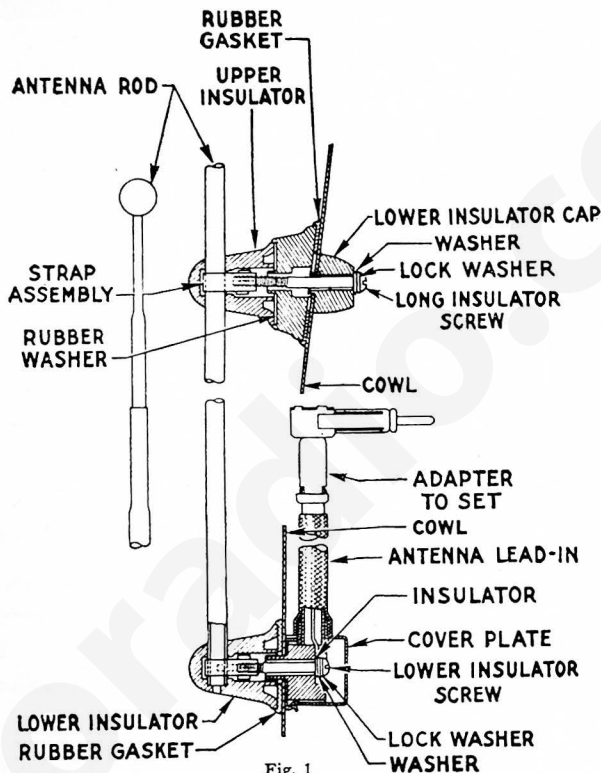


Fig. 1

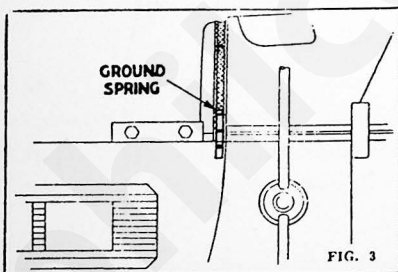

HOOD GROUNDING—

Install hood grounding clip spring as shown in Fig. 3. Loosen the hood side panel bolts on the left hand side and pry out the lower hood lacing screw. Apply the clip with a self-threading screw using the hole from which the screw was just removed, then drill the other hole and apply screw. Use a No. 29 drill. This operation grounds the top and side of the hood to the cowl.

1. Remove left cowl trim panel.
2. Select proper template, and drill two 1/2" holes in left cowl side panel as indicated on template.
3. Remove insulating material from around holes in cowl panel.
4. Assemble insulators to antenna and attach antenna to cowl panel as shown in Figure 1.
5. Dress antenna lead along dash panel and over top of radio and plug into receptacle of radio.
6. Replace cowl trim panel.