


Model 655

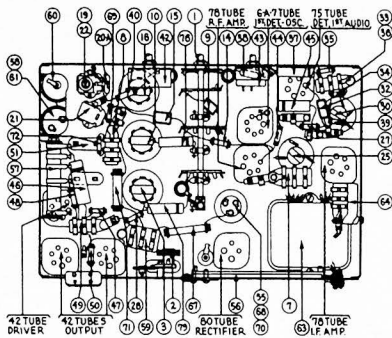

Schematic Number	Part and Description	Part No.
1	Wave Band Switch	42-1153
2	Wave Trap	38-6850
3	Ant. Transformer	32-1867
4	Compensator (Standard) (Ant.)	31-6058
5	Compensator (Police) (Ant.)	
6	Compensator (Short-Wave) (Ant.)	3615-SG†
7	Condenser (.05 mf. Bakelite)	
8	Condenser (.05 mf. Bakelite)	3615-SG†
9	Condenser (50 mmf. Mica)	30-1029
10	Det. Transformer (Standard) (Det.)	32-1868
11	Compensator (Police) (Det.)	31-6063
12	Compensator (Short-Wave) (Det.)	
13	Resistor (51,000 ohm, 1/4 watt)	33-351143
14	Condenser (.00025 mf. Mica)	30-1032
15	Osc. Transformer	32-1976
16	Compensator (Standard) (Osc.)	31-6058
17	Compensator (Police) (Osc.)	
18	Compensator (Short-Wave) (Osc.)	31-6027
19	Compensator (Std. Series) (Osc.)	
20	Condenser (.0025 Mica)	7006
21	Compensator (Police Series) (Osc.)	31-6071
22	Compensator (Short-Wave Series) (Osc.)	Part of 20
23	Tuning Condenser	31-1555
24	Compensator (1st I.F. Pri.)	31-6053
25	1st I.F. Transformer	32-1917
26	Compensator (1st I.F. Sec.)	Part of 25
27	Resistor (1.0 meg., 1/4 watt)	33-510143
28	Resistor (51,000 ohm, 1/4 watt)	33-351143
29	Compensator (2nd I.F. Pri.)	31-6053
30	2nd I.F. Transformer	32-1836
31	Compensator (2nd I.F. Sec.)	Part of 30
32	Condenser (.00011 mf. Mica)	30-1030
33	Condenser (.00011 mf. Twin Bakelite)	8035-DG†
34	Resistor (330,000 ohm, 1/4 watt)	33-433133
35	Resistor (99,000 ohm, 1/4 watt)	33-399143
36	Condenser (.00011 mf.)	Part of 35
37	Condenser (.05 mf. Tubular)	30-4020
38	Condenser (50 mmf. mica)	30-1029
39	Resistor (10 megohm, 1/4 watt)	33-510143
40	Resistor (51,000 ohm, 1/4 watt)	33-351143
41	Condenser (.01 mf.)	Part of 39
42	Program Control	30-43781
43	Volume Control	33-5108
44	Resistor (1.0 megohm, 1/4 watt)	33-510143
45	Condenser (.03 mf. Tubular)	30-4025
46	Condenser (.03 mf. Tubular)	30-4134
47	Resistor (99,000 ohm, 1/4 watt)	33-399143
48	Resistor (160,000 ohm, 1/4 watt)	33-416133
49	Condenser (.05 mf. Bakelite)	3615-SU†
50	Resistor (70,000 ohm, 1/4 watt)	33-370133
51	Input Transformer	32-7114
52	Output Transformer	32-7078
53	Voice Coil & Cone Assy. (B.G. K-17)	*36-3159
54	Field Coil Assy. (B.G. K-17)	*36-3104
55	Electrolytic Condenser (3.0-1.0-2.0 mf.)	30-2122
56	B. C. Resistor (7750 ohm)	33-3211
57	B. C. Resistor (10-10-100-130 ohm)	33-3226
58	Electrolytic Condenser (8.0-10.0 mf.)	30-2045
59	Condenser (.1 mf. Bakelite)	6287-DU†
60	Electrolytic Condenser (8.0 mf.)	30-2025*
61	Electrolytic Condenser (10 mf.)	Part of 60
62	Filter Choke	32-7115

*Code 123—30-2014

†Code 122—30-4379

Schematic Number	Part and Description	Part No.
63	Power Transformer (115 V., 60 cycle)	32-7402
64	Condenser (.015 Twin Bakelite)	3793-DG†
65	Phono-motor switch Assy.	6345
66	Phono-motor (115 V., 60 cycle)	35-1002
67	Resistor (39,000 ohm, 1 watt)	33-339443
68	Electrolytic Condenser (1.0 mf.)	Part of 67
69	Resistor (15,000 ohm, 1/4 watt)	33-315133
70	Electrolytic Condenser (2.0 mf.)	Part of 69
71	Resistor (32,000 ohm, 2 watt)	33-332533
72	Resistor (51,000 ohm, 1/4 watt)	33-351343
73	Shadow Tuning Meter	45-2083
74	Pilot lamp (shadow meter)	34-2064
75	Resistor (5,000 ohm)	33-250123
76	Condenser (.05 mf. Tubular)	30-4020
77	Pilot lamp (dial)	34-2039
78	Phono-radio switch Assy.	35-3014
79	Condenser (.05 mf. Tubular)	30-4020
80	Condenser (.09 mf. Bakelite)	4989-SU†
81	Resistor (15,000 ohm)	33-315133
82	Resistor (15,000 ohm)	33-315133
83	Pickup head	35-2014
84	Pickup arm	35-2010
85	Phono-motor (115 V., 50 cycle)	35-1007
86	Phono-motor (115 V., 40 cycle)	35-1003
87	Phono-motor (115 V., 25 cycle)	35-1008
88	Phono-motor (230 V., 60 cycle)	35-1004
89	Phono-motor (230 V., 50 cycle)	35-1009
90	Phono-motor (230 V., 40 cycle)	35-1005
91	Phono-motor (230 V., 25 cycle)	35-1006
92	Hmm Bucking coil	32-1940
93	Radio-phonograph switch plate	28-2250
94	Switch Pointer	4277
95	Needle Cup	28-2222
96	Needle Cup Cover	28-2223
97	Speed Change lever	28-1648
98	Speed Change lever spring	28-1649
99	Speed Change lever spacer	28-6103
100	Speed Change lever washer	5577
	Turntable	35-3001
	Motor Board	25869
	Motor Board mtg. washer	27-4199
	Motor Board mtg. washer	28-2089
	Motor Board mtg. washer	W-461-A
	Motor Board mtg. screw	W-461-B
	Motor Board mtg. nut	W-149-A
	Motor Connector plug	4091
	Shadow Meter light shield	28-2917
	Glowing arrow screen	27-5159
	Glowing arrow mask	27-5104
	Scale guard	27-8140
	Screen bracket	29-3061
	Mask arm	29-3274
	Coupling	29-3339
	Lamping	29-3338
	Shadow Screen	27-5120
	Speaker Cable	02722
	Knob (Phono-Radio)	03334
	Knob (Tuning)	27-4206
	Knob (Slow Speed Tuning)	27-4207
	Knob (Volume/Program Control)	27-4208
	Knob (Wave Band)	27-4225
	Socket (4-prong)	27-6044
	Socket (6-prong)	27-6036
	Socket (7-prong)	27-6037
	Speaker Socket	27-6043
	Tube Shield Body	28-2726
	Tube Shield Base	28-2725
	R. F. Shield	38-6921
	I. F. Shield	38-6808
	Wave Switch Nut	W-684-A
	Power Transformer (115 V., 25 cycle)	32-7403
	Power Transformer (230 V., 50-60 cycle)	32-7404
	Electrolytic Condenser clamp	6440
	Electrolytic Condenser insulator	27-7194
	Chassis Mtg. screw	W-1496-A
	Chassis Mtg. washer (rubber)	27-4201
	Chassis Mtg. cushion (rubber)	27-4202
	Chassis Mtg. sleeve	30-3101
	Mask	28-3433
	Bezel	28-3164
	Bezel mtg. screw	W-1494
	Bezel glass	27-8113
	Bezel glass gasket	27-8036
	Dial scale	27-5165
	Hub & set screw Assy.	31-1724
	Pilot lamp bracket Assy.	38-6789
	B. C. Resistor mtg. screw	W-888
	B. C. Resistor mtg. nut	W-317-A
	B. C. Resistor spacer	3791
	Front Bumper	27-4200
	Dial scale (inverted type code 123)	27-5183
	Speaker Trans. Terminal cover	02824
	Bottom shield	38-7189
	Speaker mtg. bolt	29-3128
	Speaker mtg. nut	W-124-A
	Voice coil cone Assy. (Furn. H-13)	02625
	Field coil Assy. (Furn. H-13)	02803

†Code 122—Use Type "U" (ODG, etc.) Prefix Condensers

