
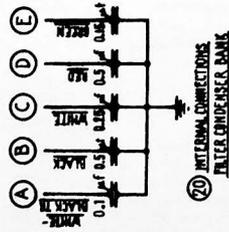



MODELS 38 & 38A

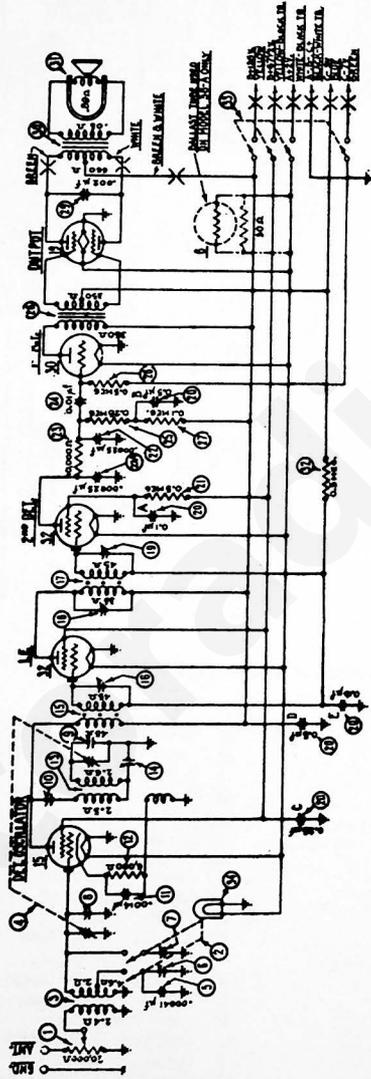

I. F. 460 K. C.

(20) INTERNAL CONNECTIONS INTERCOMPARATOR BANK

MODEL 38—38A
(Battery Operated)

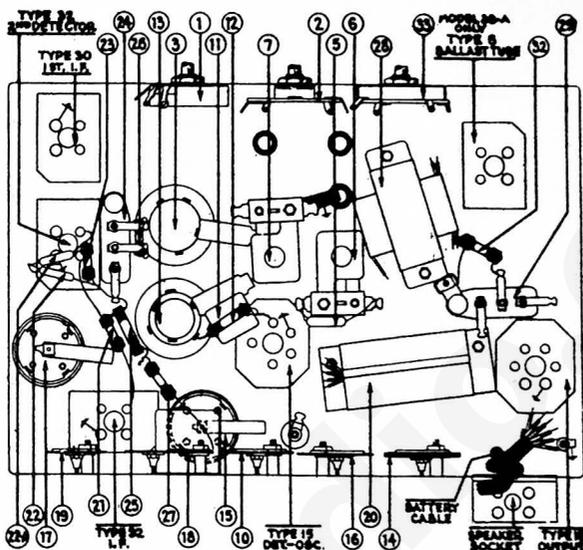

REPLACEMENT PARTS FOR MODELS 38 AND 38-A

No. on Figs.	Description	Part No.	No. on Figs.	Description	Part No.
①	Volume Control.....	33-8017	⑫	Condenser (.01).....	3003-S
②	Wave-Band Switch.....	45-1030	⑬	Resistor (.25 meg.) (Red-Yellow-Yellow).....	4410
③	Antenna Transformer.....	33-1308	⑭	Resistor (.5 meg.) (Yellow-White-Yellow).....	4517
④	Tuning Condenser Assembly.....	31-1076	⑮	Resistor (1 meg.) (White-White-Orange).....	4411
⑤	Condenser (.00041).....	30-1000	⑯	Input Transformer.....	7329
⑥	Compensating Condenser (Ant.; L.F.; Polios).....	04000-S	⑰	Condenser (.002).....	7399-C
⑦	Compensating Condenser (Ant.; H.F.; Polios).....	04000-X	⑱	Output Transformer.....	3046
⑧	Compensating Condenser (Ant.; H.F.; Part of ⑦).....	04000-S	⑲	Voice Coil and Cone Assembly (KR-9).....	36-3014
⑨	Compensating Condenser (Osc.; H.F.; Part of ⑧).....	04000-S	⑳	Resistor (.5 meg.) (Yellow-White-Yellow).....	4517
⑩	Compensating Condenser (1st. L.F. Primary).....	04000-A	㉑	Switch ("ON-OFF"; Battery).....	43-1040
⑪	Condenser (.0014).....	7007	㉒	Pilot Lamp (Station Selector).....	5816
⑫	Resistor (4,000) (Blue-Black-Red).....	7085	㉓	Resistor (∞ ohm) [(Used across Type 6 ballast tube filament; Model 38-A, only)].....	7156
⑬	Oscillator Transformer.....	23-1209	㉔	Shorting Jumper (Model 38; across filament terminals; Type 6 tube socket).....	36-3001
⑭	Compensating Condenser (Osc.; L.F.).....	04000-S	㉕	Tube Shield.....	25-1107
⑮	1st. L.F. Transformer.....	23-1261	㉖	Four-prong Tube Socket.....	7646
⑯	Compensating Condenser (1st. L.F. Secondary).....	04000-A	㉗	Five-prong Tube Socket.....	7646
⑰	2nd. L.F. Transformer.....	23-1263	㉘	Six-prong Tube Socket.....	7647
⑱	Compensating Condenser (2nd. L.F. Primary).....	04000-A	㉙	Speaker Socket.....	6957
⑲	Compensating Condenser (2nd. L.F. Secondary).....	04000-A	㉚	Battery Cable Assembly (including multi-plug).....	36-3305
㉑	Filter Condenser Bank.....	03915	㉛	Station Selector Dial-ends.....	27-5019
㉒	Resistor (.8 meg.) (Yellow-White-Yellow).....	4517	㉜	Knob (large).....	03083
㉓	Condenser (.00026).....	3082	㉝	Knob (small).....	03084
㉔	Condenser (.00026).....	3082			
㉕	Resistor (10,000) (Brown-Black-Orange).....	4412			