

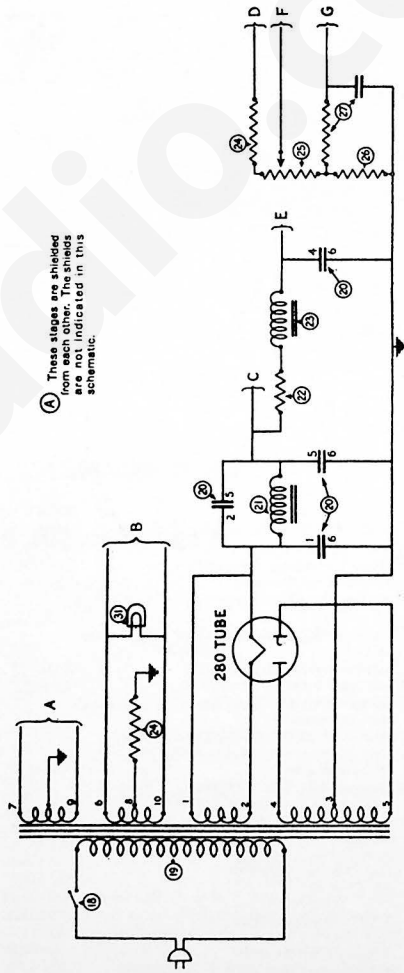


# Model 65

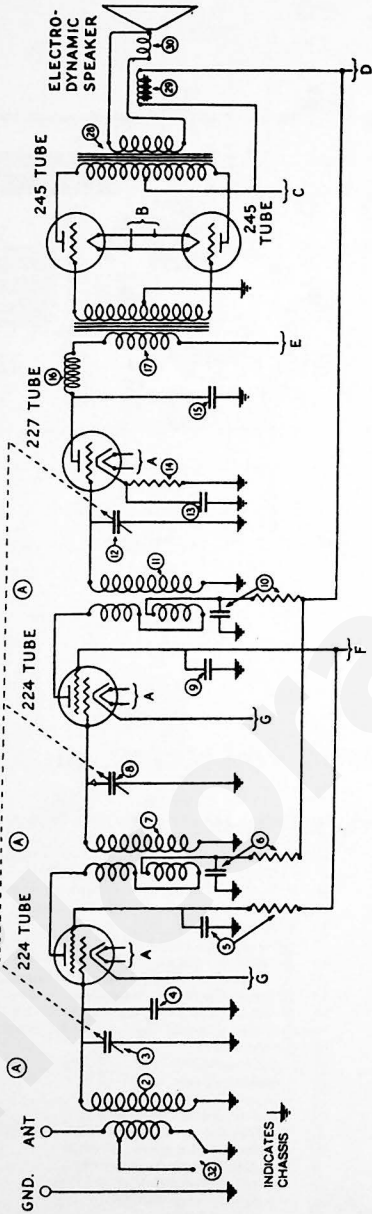

(A) These stages are shielded (see note) and their internal wiring is not indicated in this schematic.

## Model 65

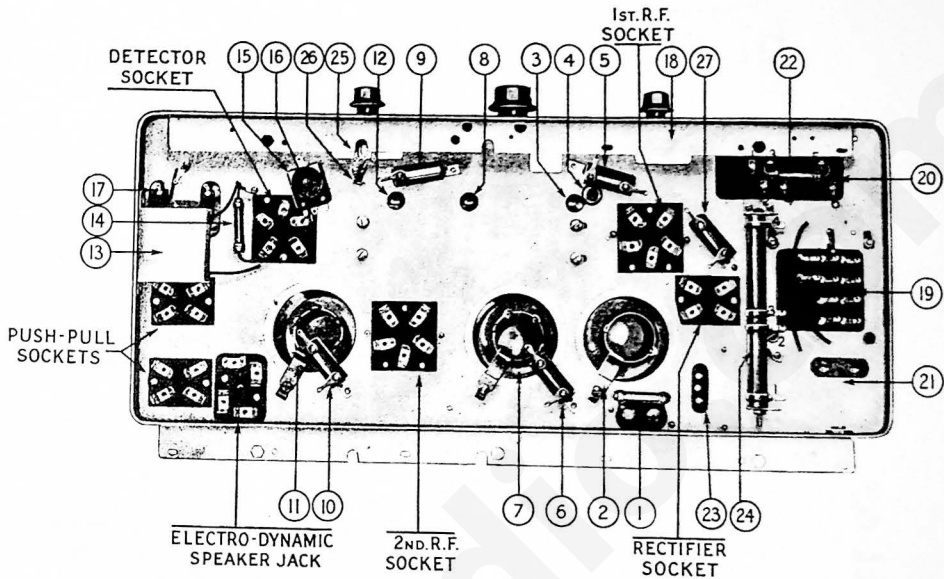

## Replacement Parts for Model 65

NUMBER	DESCRIPTION	PART No.		
①	Antenna Resistor	3524	⊕	Volume Control
①	R. F. Transformer (Antenna Coil)	3506-B	⊕	Six-Ohm Resistor
- ① - ②	Tuning Condenser	3480-B	⊕	Cathode By-Pass Condenser and Resistance
①	Fixed Condenser	3617-A	⊕	Push-Pull Output Transformer
①	Screen Grid By-Pass Condenser and Resistance	3292-A	⊕	Speaker Field Winding
① - ②	Plate By-Pass Condenser and Resistance	3584-A	⊕	Voice Coil and Cone
① - ②	R. F. Transformer	3506-A	⊕	Pilot Lamp
①	Screen Grid By-Pass Condenser	3292-P	⊕	Knob (Small)
②	Detector Cathode By-Pass Condenser	3583	⊕	Knob (Large)
②	Detector Cathode Resistor	3525	⊕	Knob Spring
②	.001 Detector Plate By-Pass Condenser	3081	⊕	Four Hole Socket Assembly
②	R. F. Choke	3256-A	⊕	Five Hole Socket Assembly
②	Push-Pull Input Transformer	3537	⊕	Speaker Plug Socket Assembly
②	Set Power Switch	3517	⊕	Pilot Lamp Socket Assembly
②	Power Transformer	3516	⊕	A.C. Attachment Cord and Plug
②	B Filter Condenser Block	3515	⊕	Speaker Plug and Cable
②	First Filter Choke	3422	⊕	Rubber Washer
②	Detector Plate Resistor	3526	⊕	Rubber Foot (Set)
②	Second Filter Choke	3518	⊕	Rubber Foot (Speaker)
②	BC Resistor	3512	⊕	Socket Wrench for Speaker Mounting Bolts