


MODEL F-1540

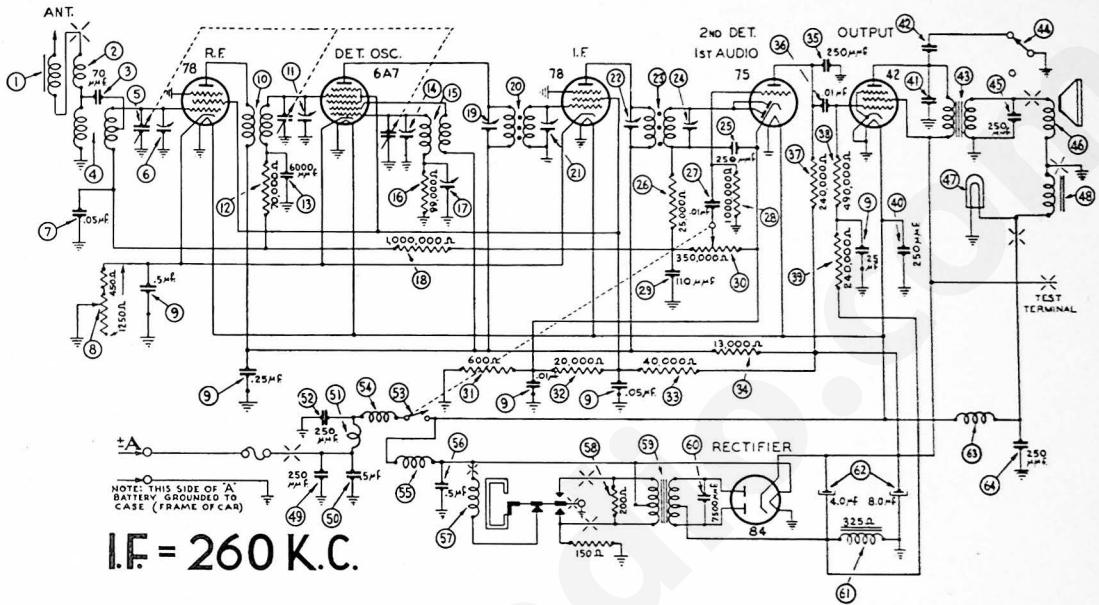

Aligning Procedure will be found on page 169.

MODEL F-1540 PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
①	Antenna Lead	41-3386	29	Resistor (240,000 ohms)	33-424344
②	Antenna Choke	32-1372	30	Resistor (490,000 ohms)	33-449344
③	Condenser (.0 mmfd.)	30-1105	31	Resistor (240,000 ohms)	33-424344
④	Antenna Transformer	32-2912	32	Condenser (2.0 mmfd.)	30-1032
⑤	Tuning Condenser	31-2181	33	Condenser (.02 mfd.)	30-4495
⑥	First Padder (on Tun. Cond.)	33-5239	34	Condenser (.02 mfd.)	30-4495
⑦	Condenser (.0 mfd.)	30-4444	35	Output Transformer	32-7946
⑧	Sensitivity Control	33-5239	36	Tone Control Switch	42-1406
⑨	Condenser (.01-.05-.25-.5 mfd.)	30-4561	37	Condenser (250 mmfd.)	30-1032
⑩	R. F. Transformer	32-2830	38	Cone & Voice Coil	45-2608
⑪	Second Padder (on Tun. Cond.)	33-399344	39	Pilot Lamp	34-2039
⑫	Resistor (70,000 ohms)	33-70314	40	Field Coil Assembly	32-9283
⑬	Condenser (6,000 mmfd.)	30-4467	41	Resistor (250 mmfd.)	30-1032
⑭	Third Padder (on Tun. Cond.)	33-5239	42	Condenser (.5 mfd.)	30-4474
⑮	Oscillator Transformer	32-2828	43	"A" Choke	32-1374
⑯	Resistor (90,000 ohms)	33-399344	44	Condenser (250 mmfd.)	30-1032
⑰	Low Frequency Padder	31-6239	45	On-Off Switch	33-3200
⑱	Resistor (1,000,000 ohms)	33-510344	46	Filament Choke	32-1644
⑲	Padder (Pri. 1st I. F. Trans.)	30-4474	47	Vibrator Choke	32-2911
⑳	First I. F. Transformer	32-2826	48	Condenser (.5 mfd.)	30-4474
㉑	Padder (Sec. 1st I. F. Trans.)	33-32344	49	Vibrator	41-3170-3
㉒	Second I. F. Transformer	32-2908	50	Resistor (200 ohms)	33-120344
㉓	Padder (Sec. 2nd I. F. Trans.)	30-1032	51	Power Transformer	32-7944
㉔	Condenser (250 mmfd.)	30-1032	52	Condenser (7,500 mmfd.)	30-4420
㉕	Resistor (25,000 ohms)	33-32344	53	"B" Filter Choke	32-2943
㉖	Condenser (.01 mfd.)	30-4479	54	Filter Condenser (4-8 mfd.)	30-2295
㉗	Resistor (1,000,000 ohms)	33-510344	55	Choke	32-1561
㉘	Condenser (110 mmfd.)	30-1031	56	Condenser (250 mmfd.)	30-1032
㉙	Volume Control	33-5260	57	Four Prong Socket	27-6044
㉚	Resistor (600 ohms)	33-100331	58	Five Prong Socket	27-6035
㉛	Resistor (20,000 ohms)	33-320344	59	Six Prong Socket	27-6036
㉜	Resistor (40,000 ohms)	33-340444	60	Seven Prong Socket	27-6037
㉝	Resistor (13,000 ohms)	33-313344	61	Speaker Socket	27-6030
㉞	Condenser (250 mmfd.)	30-1032	62	Receiver Housing	38-6384
㉟	Condenser (.01 mfd.)	30-4501	63	Tuning & Volume Knob	27-4697
			64	Dial Assembly	42-5826
			65	Tuning Shaft	28-6795
			66	Volume Shaft	28-8837

