



MODEL P-1617

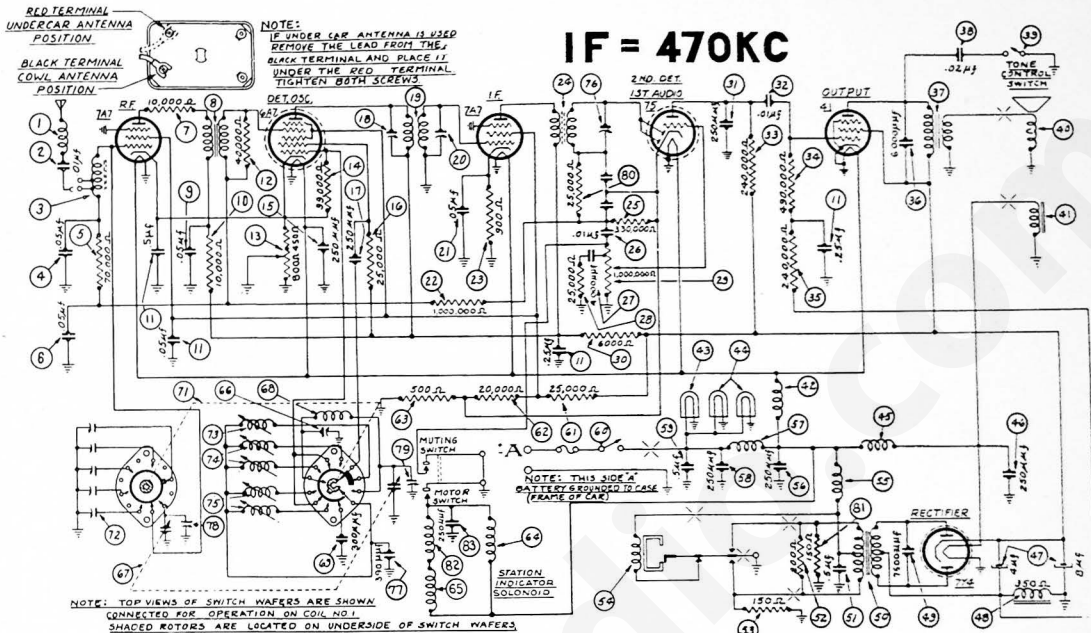

Aligning Procedure will be found on page 171.

PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	65-0062	51	Filter Condenser (4.8 mfd.)	61-0018
2	Condenser (.01 mfd.)	61-0011	52	Filter Choke	32-7959
3	Antenna Transformer	65-0015	53	Condenser (.7500 mmfd.)	30-4567
4	Condenser (.05 mfd.)	30-4444	54	Power Transformer	65-0046
5	Resistor (70,000 ohms)	33-370337	55	Condenser (.5 mfd.)	30-1565
6	Condenser (.05 mfd.)	30-4444	56	Resistor (200 ohms)	33-120337
7	Resistor (10,000 ohms)	33-310337	57	Resistor (150 ohms)	33-120337
8	R. F. Transformer	65-0009	58	Vibrator	33-120337
9	Condenser (.05 mfd.)	30-4123	59	Vibrator Choke	41-3170
10	Resistor (10,000 ohms)	33-325337	60	Condenser (250 mmfd.)	30-1032
11	Condenser	61-0016	61	"A" Choke	65-0037
12	Resistor (40,000 ohms)	33-340137	62	Condenser (250 mmfd.)	30-1032
13	Sensitivity Control	33-5264	63	Condenser (.5 mfd.)	30-4474
14	Resistor (109,000 ohms)	33-399337	64	On-Off Switch	77-0175
15	Condenser (250 mmfd.)	30-1032	65	Resistor (25,000 ohms)	33-325337
16	Resistor (25,000 ohms)	33-325337	66	Resistor (20,000 ohms)	33-320337
17	Condenser (250 mmfd.)	30-1032	67	Resistor (500 ohms)	33-150438
18	Padder (Pri. 1st I. F. Trans.)	65-0041	68	Solenoid	77-0108
19	First I. F. Transformer	65-0011	69	Impulse Motor	77-0108
20	Padder (Sec. 1st I. F. Trans.)	65-0008	70	Low Frequency Padder	65-0020
21	Condenser (.05 mfd.)	30-4444	71	Tuning Condenser	63-0011
22	Resistor (1,000,000 ohms)	33-540337	72	Oscillator Transformer	65-0058
23	Resistor (900 ohms)	33-190438	73	Silver Cap Condenser (300 mmfd.)	61-0003
24	Second I. F. Transformer	65-0045	74	Selector Switch	77-0198
25	Resistor (330,000 ohms)	33-433337	75	Antenna Padder Assembly	77-0126
26	Condenser (.01 mfd.)	61-0014	76	Oscillator Transformer (High Freq.)	65-0049
27	Condenser (1,000 mmfd.)	61-0020	77	Oscillator Transformer (Med. Freq.)	65-0050
28	Resistor (25,000 ohms)	33-325337	78	Oscillator Transformer (Low Freq.)	65-0051
29	Volume Control (1,000,000 ohms)	67-0004-1	79	Padder (Sec. 2nd I. F. Trans.)	65-0031
30	Resistor (6,000 ohms)	33-250337	80	Silver Cap Condenser (300 mmfd.)	61-0031
31	Condenser (250 mmfd.)	30-1032	81	First Padder (on Tun. Cond.)	65-0031
32	Condenser (.01 mfd.)	30-4169	82	Part of Ant. Padder Assy.	65-0031
33	Resistor (20,000 ohms)	33-424337	83	Second Padder (on Tun. Cond.)	65-0031
34	Resistor (190,000 ohms)	33-449337	84	Resistor (25,000 ohms)	33-325337
35	Resistor (20,000 ohms)	33-424337	85	Resistor (150 ohms)	33-115337
36	Condenser (45,000 mmfd.)	30-1094	86	Choke	32-1644
37	Output Transformer	65-0048	87	Condenser (250 mmfd.)	30-1032
38	Condenser (.02 mfd.)	30-1495	88	Interference Condenser	30-4007
39	Tone Control Switch	42-1110	89	Interference Condenser	30-4175
40	Cone & Voice Coil Kit	91-0047	90	Distributor Resistor	33-1196
41	Field Coil	Not Replaceable	91	Push Button	55-0173
42	Flament Choke	65-0037	92	Push Button Cover	57-0472
43	Pilot Lamp	34-2040	93	Tuning & Volume Knob	27-4687
44	Pilot Lamp	34-2040			
45	Choke	32-1874			
46	Condenser (250 mmfd.)	30-1032			

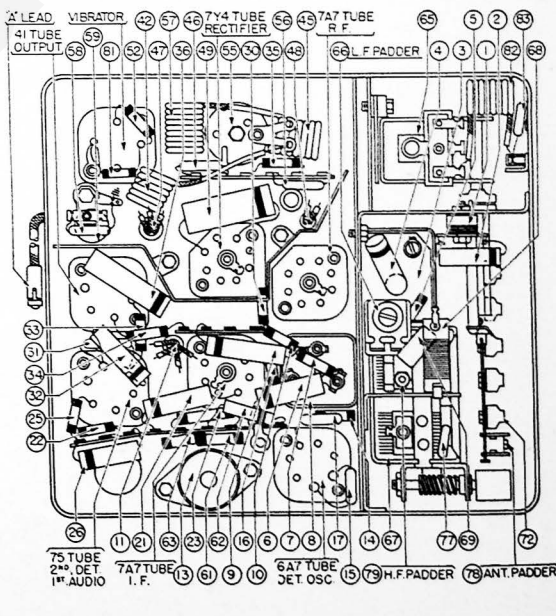

No.	Description	Part No.	No.	Description	Part No.
94	Knob Base	28-4184	95	Nut	W518
96	Call Letter Kit	81-0045	96	Station Indicator	85-0047
97	"T" Bolt	28-6268			