


# MODEL L-1660


I.F. = 470KC.

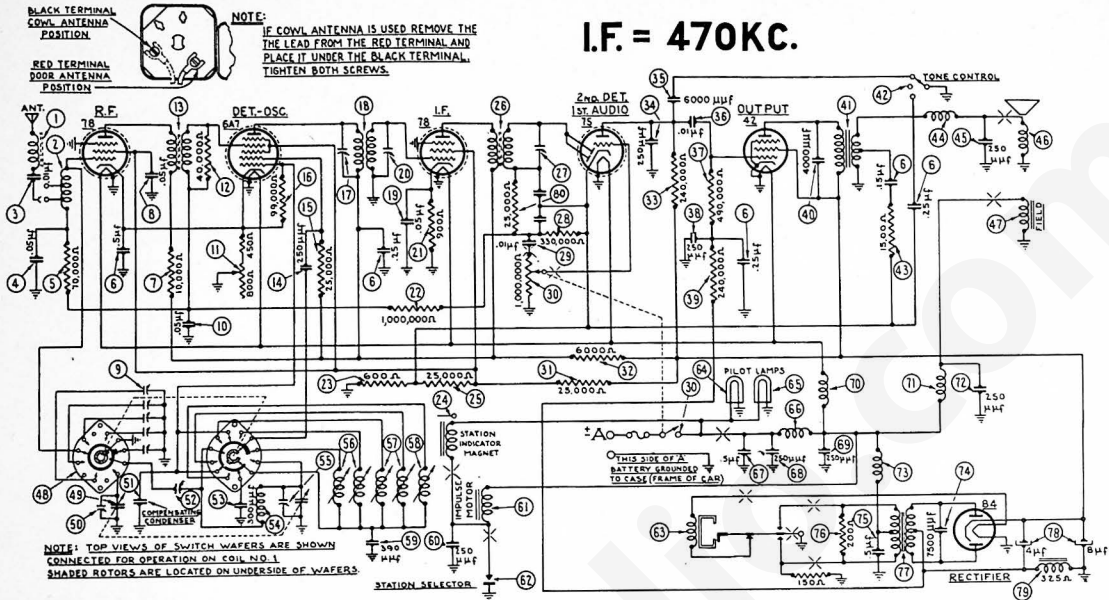

Aligning Procedure will be found on page 175.

## PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	65-0062	31	Resistor (1,500 ohms)	33-215337
2	Antenna Transformer	65-0063	32	Choke	32-1374
3	Condenser (.01 mfd.)	61-0014	33	Condenser (250 mmfd.)	30-1032
4	Condenser (.05 mfd.)	30-4569	34	Cone and Voice Coil Kit	91-0053
5	Resistor (70,000 ohms)	33-370337	35	Field Coil	Not Replaceable
6	Condenser		36	Walter Switch	Not Replaceable
7	(.15-.25-.25-.5 mfd.)	61-0024	37	Tuning Condenser	65-0012
8	Resistor (10,000 ohms)	33-310337	38	First Padder (on Tun. Cond.)	
9	Condenser (.05 mfd.)	30-4144	39	Thermal Compensating Cond.	61-0011
10	Antenna Padder Assembly	77-0035	40	Low Frequency Padder	63-0017
11	Condenser (.05 mfd.)	30-4144	41	Silver Cap Condenser	
12	Sensitivity Control	33-5264-4	42	(300 mmfd.)	61-0003
13	Resistor (40,000 ohms)	33-339137	43	Oscillator Transformer	65-0052
14	I. F. Transformer	65-0009	44	Second Padder (on Tun. Cond.)	
15	Condenser (250 mmfd.)	30-1038	45	Oscillator Trans.	
16	Resistor (25,000 ohms)	33-325337	46	(High Freq.)	65-0049
17	Resistor (99,000 ohms)	33-399337	47	Oscillator Trans.	
18	Padder (Pri. 1st I. F. Trans.)		48	(Med. Freq.)	65-0050
19	First I. F. Transformer	65-0002	49	(Low Freq.)	65-0051
20	Condenser (.05 mfd.)	30-4569	50	Silver Cap Condenser	
21	Padder (Sec. 1st I. F. Trans.)		51	(390 mmfd.)	61-0031
22	Resistor (900 ohms)	33-190438	52	Condenser (250 mmfd.)	30-1032
23	Resistor		53	Impulse Motor	77-0120
24	(1,000,000 ohms)	33-510337	54	Station Indicator Switch	85-0041
25	Resistor (600 ohms)	33-160438	55	Vibrator	41-3170
26	Solenoid		56	Pilot Lamp	34-2039
27	Resistor (25,000 ohms)	33-325337	57	Pilot Lamp	34-2040
28	Second I. F. Transformer	65-0003	58	"A" Choke	32-1644
29	Condenser (5 mfd.)	30-4474	59	Condenser (.5 mfd.)	30-4474
30	Condenser (.01 mfd.)	30-4479	60	Condenser (250 mmfd.)	30-1032
31	Volume Control	65-0094	61	Condenser (250 mmfd.)	30-1032
32	and On-Off Switch	67-0009	62	Filament Choke	32-1604
33	Resistor (25,000 ohms)	33-325437	63	Choke	32-2657
34	Resistor (8,000 ohms)	33-260337	64	Condenser (250 mmfd.)	30-1032
35	Resistor (240,000 ohms)	33-424337	65	Vibrator Choke	32-2812
36	Condenser (250 mmfd.)	30-1032	66	Condenser (7,500 mmfd.)	30-4567
37	Condenser (5 mfd.)	30-4504	67	Condenser (.5 mfd.)	30-4565
38	Condenser (.01 mfd.)	30-4501	68	Resistor (200 ohms)	33-120337
39	Resistor (400,000 ohms)	33-449337	69	Power Transformer	65-0016
40	Condenser (250 mmfd.)	30-1032	70	Filter Condenser (4-8 mfd.)	30-2295
41	Resistor (240,000 ohms)	33-424337	71	Filter Choke	32-7910
42	Condenser (4,000 mmfd.)	30-4185	72	Resistor (25,000 ohms)	33-325337
43	Output Transformer	65-0094	73	Scale Assembly	85-0040
44	Tone Control Switch	85-0042	74	Tuning Control Knob	65-0179

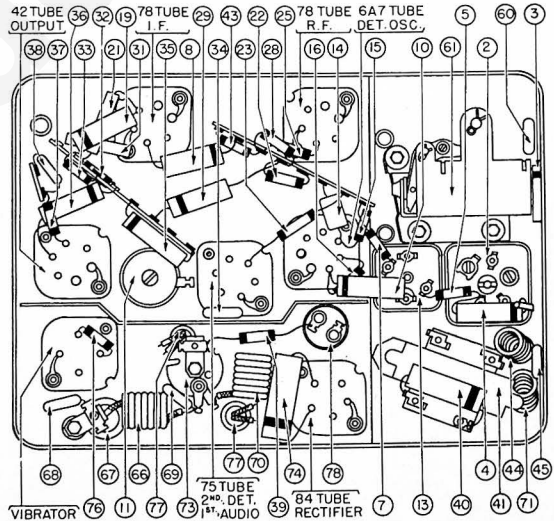

No.	Description	Part No.	No.	Description	Part No.
	Volume Control Knob	65-0180		Interference Condenser	30-4663
	Push Button Knob	65-0184		"T" Bolt (Rec. Mtg.)	28-6041
	Tuning Shaft	67-0491		Nut (Rec. Mtg.)	67-0489
	Call Letter Kit	81-0066		Bolt (Spker. Mtg.)	W1721
	Interference Condenser	30-4564		Nut (Spker. Mtg.)	W317
	Interference Condenser	30-4181		Automatic Station Selector	
	Interference Condenser	30-4404		Drum	65-0197
	Interference Condenser	30-4307			