


MODEL C-1708

I.F. = 455 KC.

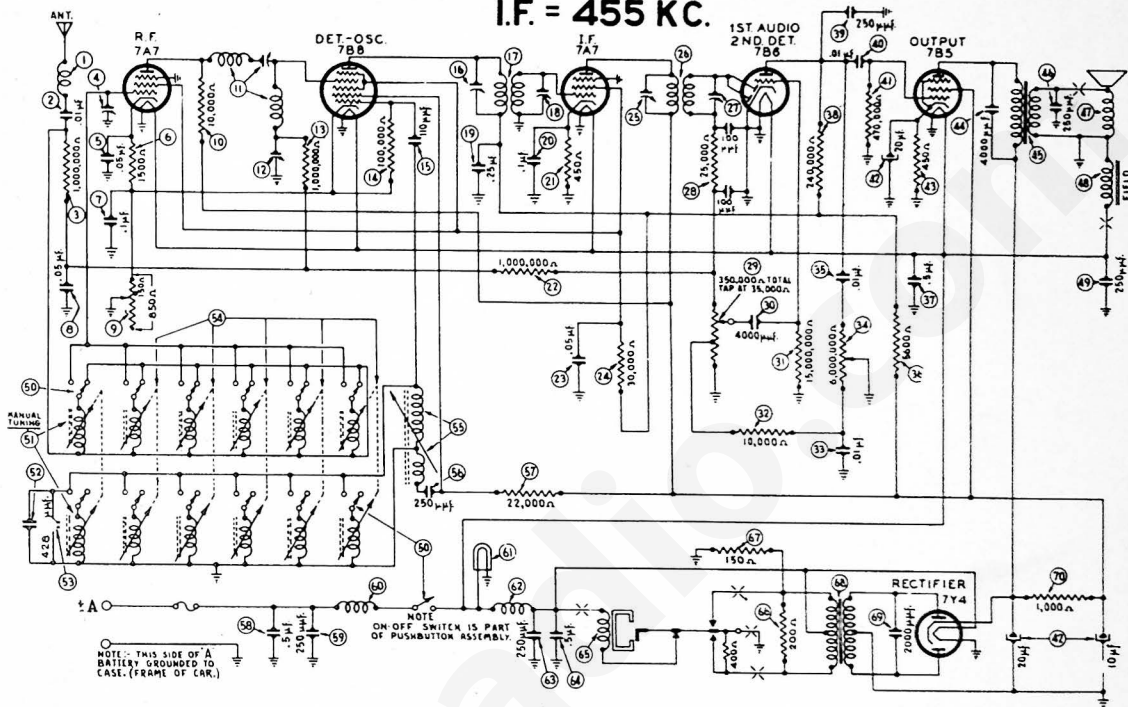

Aligning Procedure will be found on page 176.

SCH. No.	DESCRIPTION	PART No.
1	Antenna Choke	65-0202
2	Condenser (.01 mfd.)	61-0014
3	Resistor (1,000,000 ohms)	30-4499
4	Antenna Padder	63-0035
5	Condenser (.05 mfd.)	30-4444
6	Resistor (1500 ohms)	33-212334
7	Condenser (.05 mfd.)	30-4499
8	Sensitivity Control (1000 ohms)	30-4464
9	Resistor (10,000 ohms)	67-0025
10	Untuned R. F. Assembly	33-110454
11	I. F. Wave Trap Padder	65-0271
12	Resistor (1,000,000 ohms)	33-110154
13	Resistor (100,000 ohms)	33-410154
14	Condenser (.10 mfd.)	30-1033
15	Padder (Pri. 1st I. F. Trans.)	61-0034
16	First I. F. Transformer	65-0236
17	Padder (Sec. 1st I. F. Trans.)	30-4604
18	Condenser (.25 mfd.)	30-4499
19	Resistor (450 ohms)	33-145438
20	Resistor (1,000,000 ohms)	33-110154
21	Condenser (.05 mfd.)	33-210454
22	Resistor (30,000 ohms)	33-330434
23	Padder (Pri. 2nd I. F. Trans.)	61-0033
24	Second I. F. Transformer	65-0237
25	Padder (Sec. 2nd I. F. Trans.)	33-325154
26	Resistor (4000 ohms)	30-4499
27	Volume Control (350,000 ohms)	67-0022
28	Condenser (.000 mfd.)	30-4334
29	Resistor (15,000,000 ohms)	31-61154
30	Resistor (10,000 ohms)	33-110154
31	Condenser (.01 mfd.)	30-4479
32	Tone Control (800,000 ohms)	67-0022
33	Condenser (.01 mfd.)	30-0078
34	Resistor (.560 ohms)	33-256334
35	Condenser (.15 mfd.)	30-4499
36	Resistor (240,000 ohms)	33-424334
37	Condenser (.25 mfd.)	33-210454
38	Condenser (.01 mfd.)	30-4189
39	Resistor (470,000 ohms)	33-447154
40	Filter Condenser (10-20-20 mfd.)	61-0012
41	Resistor (450 ohms)	33-145438
42	Condenser (.400 mfd.)	65-0235
43	Output Transformer	61-0033
44	Condenser (.250 mfd.)	61-0068
45	Cone Kit (For 73-0030-2)	91-0068
46	Cone Kit (For 73-0030-3)	91-0069
47	Field Coil	Not Replaceable
48	Condenser (.250 mfd.)	61-0033
49	Push-Button and On-Off Switch	65-0097
50	Inductive Tuning Unit	77-0640
51	Thermal Compensator	61-0089
52	Condenser (.428 mfd.)	61-0089
53	Push-Button Switch and Trans. Assy.	77-0359
54	Oscillator Tracking Coil	61-0222
55	Condenser (.50 mfd.)	61-0033
56	Resistor (22,000 ohms)	33-322454
57	Condenser (.250 mfd.)	61-0074
58	Condenser (.250 mfd.)	61-0074
59	"14" Chd	61-0033
60	Pilot Lamp	65-0248
61	Vibrator Choke	34-2039
62	Condenser (.250 mfd.)	65-0222
63	Condenser (.250 mfd.)	61-0033

SCH. No.	DESCRIPTION	PART No.	SCH. No.	DESCRIPTION	PART No.
64	Condenser (.5 mfd.)	30-4588	64	Condenser (.5 mfd.)	30-4588
65	Vibrator	63-0017	65	Vibrator	63-0017
66	Resistor (200 ohms)	33-120354	66	Resistor (200 ohms)	33-120354
67	Resistor (150 ohms)	33-113254	67	Resistor (150 ohms)	33-113254
68	Power Transformer	65-0234	68	Power Transformer	65-0234
69	Condenser (1000 mfd.)	33-210434	69	Condenser (1000 mfd.)	33-210434
70	Resistor (1000 ohms)	61-0033	70	Resistor (1000 ohms)	61-0033
	Dial	65-0248		Dial	65-0248
	Drive Cord	65-0488		Drive Cord	65-0488
	Pointer	67-0884		Pointer	67-0884
	Window Crystal	65-0679		Window Crystal	65-0679
	Tuning and Volume Knob (Motor Parts)	65-0611		Tuning and Volume Knob (Motor Parts)	65-0611
	Tuning and Volume Knob (Dodge)	65-0623		Tuning and Volume Knob (Dodge)	65-0623
	Tuning and Volume Knob (DeSoto)	65-0634		Tuning and Volume Knob (DeSoto)	65-0634
	Tuning and Volume Knob (Chrysler)	65-0655		Tuning and Volume Knob (Chrysler)	65-0655
	Push-Button	65-0713		Push-Button	65-0713
	Station Tab	65-0731		Station Tab	65-0731
	Window	65-0731		Window	65-0731
	Speaker Cable	65-0731		Speaker Cable	65-0731
	Tone Control Lever (Fly, Chry., Dod.)	65-0750		Tone Control Lever (Fly, Chry., Dod.)	65-0750
	Yoke Control Lever (DeSoto)	67-1109A7		Yoke Control Lever (DeSoto)	67-1109A7
	Antenna Lead	65-0106		Antenna Lead	65-0106

