


MODELS L-1760 and L-1761

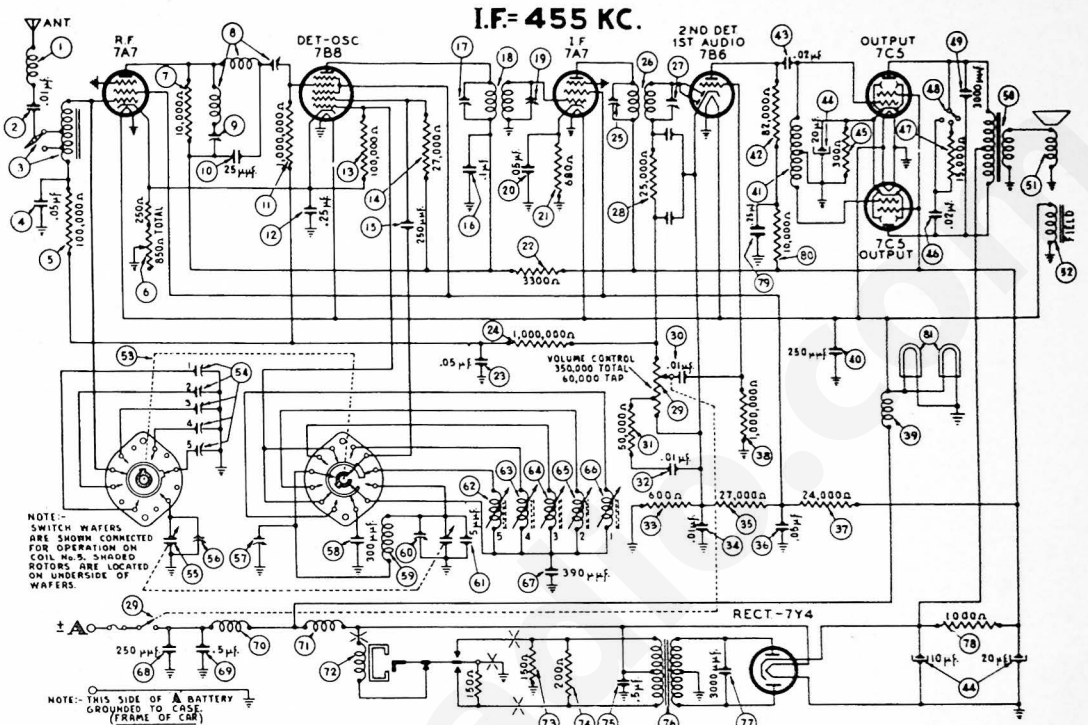

Aligning Procedure will be found on page 178.

PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	65-0168	23	Condenser (.02 mfd.)	30-4481
2	Condenser (.01 mfd.)	61-0014	24	Filter Cond. (10-20-20 mfd.)	61-0086
3	Antenna Transformer	65-0306	25	Resistor (300 ohms)	33-130436
4	Condenser (.05 mfd.)	30-4549	26	Condenser (.02 mfd.)	30-4419
5	Resistor (100,000 ohms)	33-410334	27	Resistor (15,000 ohms)	33-315354
6	Sensitivity Control	67-0029	28	Tone Control Switch	85-0106
7	Resistor (10,000 ohms)	33-310334	29	Condenser (3000 mmfd.)	30-4469
8	R. F. Transformer	65-0305	30	Output Transformer	65-0295
9	I. F. Wave Trap Padder	33-1108	31	Replacement Cone	
10	Condenser (25 mmfd.)	33-1108	32	(For 73-0039-2 Speaker)	91-0113
11	Resistor (1,000,000 ohms)	33-510234	33	(For 73-0039-4 Speaker)	91-0114
12	Condenser (.25 mfd.)	61-0088	34	Field Coil	Not Replaceable
13	Resistor (100,000 ohms)	33-410334	35	Wafer Switch	77-0408
14	Resistor (27,000 ohms)	33-327334	36	Antenna Padder Assembly	77-0391
15	Condenser (250 mmfd.)	61-0034	37	Tuning Condenser	63-0036
16	Condenser (.1 mfd.)	30-4455	38	First Padder (On Tuning Cond.)	63-0027
17	Padder (Pri. 1st I. F. Trans.)	65-0303	39	Sil. Mica Cond. (300 mmfd.)	61-0003
18	Padder (Sec. 1st I. F. Trans.)	30-4444	40	Manual Oscil. Transformer	65-0301
19	Resistor (680 ohms)	33-168334	41	Second Padder (On Tun. Cond.)	61-0038
20	Resistor (3300 ohms)	33-23354	42	Oscil. Trans. (900-1500 K.C.)	65-0255
21	Condenser (.05 mfd.)	30-4549	43	Oscil. Trans. (900-1500 K.C.)	65-0255
22	Resistor (1,000,000 ohms)	33-510154	44	Oscil. Trans. (750-1300 K.C.)	65-0256
23	Padder (Pri. 2nd I. F. Trans.)	65-0304	45	Oscil. Trans. (550-1050 K.C.)	65-0257
24	Second I. F. Transformer	65-0304	46	Oscil. Trans. (550-1050 K.C.)	65-0257
25	Padder (Sec. 2nd I. F. Trans.)	33-325234	47	Sil. Mica Cond. (390 mmfd.)	61-0031
26	Volume Control (350,000 ohms)	67-0026	48	Condenser (250 mmfd.)	61-0023
27	Condenser (.01 mfd.)	61-0014	49	Condenser (.5 mfd.)	61-0083
28	Resistor (50,000 ohms)	33-347134	50	"A" Choke	32-1644
29	Condenser (.01 mfd.)	33-23354	51	Vibrator Choke	Part of 3
30	Resistor (400 ohms)	33-160334	52	Resistor (150 ohms)	33-115154
31	Condenser (.01 mfd.)	30-4479	53	Resistor (200 ohms)	33-120354
32	Resistor (27,000 ohms)	33-327334	54	Condenser (.5 mfd.)	61-0083
33	Condenser (.05 mfd.)	30-4444	55	Power Transformer	65-0294
34	Resistor (24,000 ohms)	33-324434	56	Condenser (3000 mmfd.)	61-0059
35	Resistor (1,000,000 ohms)	33-510154	57	Resistor (1000 ohms)	33-210554
36	Choke	65-0300	58	Condenser (.25 mfd.)	61-0125
37	Condenser (250 mmfd.)	61-0033	59	Resistor (10,000 ohms)	33-310334
38	Input Transformer	65-0293	60	Pilot Lamps	34-2064
39	Resistor (82,000 ohms)	33-382334	61	Volume Control Knob	55-0748
			62	Manual Control Knob	55-0750

