

MODELS 41-250 AND 41-255, CODE 121

SPECIFICATIONS

Models 41-250 and 41-255 are alternating current (A. C.) operated super-heterodyne radios incorporating Electric Push-button and Manual tuning, and the New Philco built-in American and Overseas loop aerial system. In addition these models are designed to receive the sound of a television program tuned in by special type Philco Television Radios.

In general, these models are similar with the exception of the audio circuits, number of tubes used and cabinet design. Model 41-250 is an eight (8) tube radio; and Model 41-255 consists of a nine (9) tube chassis. These differences are shown in the schematic diagram and parts lists.

Other features of design included in these models are: Three tuning ranges covering the frequencies listed below; continuously variable tone control; audio bass frequency compensation; push-pull pentode and illuminated push-button controls.

ELECTRIC PUSH-BUTTON TUNING: The automatic tuning mechanism of each model is identical and consists of eight (8) electric tuning push-buttons, seven (7) of the push-buttons are used for selecting broadcast stations, and one as the power control (On-Off switch).

The lowest frequency station push-button labeled "Television" can be adjusted for reception of the sound channel of a television program received by Philco television sets. This push-button may also be used in conjunction with a Philco Wireless Record Player. Instructions for adjusting the push-buttons are the same as that given on page

AERIAL CONNECTIONS: The built-in loop aerial system is designed to operate without an outside aerial or ground, and to give exceptionally high receiving performance of stations on standard and shortwave frequencies. Another feature is its noise-reducing characteristic. The loop can be turned to

ALIGNING R. F. AND I. F. CIRCUITS: The Procedure for aligning the R. F. and I. F. Circuits of these Models is the same as that given for Models 41-250, and 41-285. The Locations of the Compensating Condensers are shown on the Schematic Diagram.

the position in which it picks up a minimum amount of interference, or to the position where best reception is obtained.

To operate the radio in steel reinforced buildings and other shielded locations, where signal strength is weak, the Philco 1941 Outdoor Aerial Part No. 45-2817, is recommended for maximum receiving performance. The outdoor aerial can be easily connected to the radio by inserting the plug attached to the transformer unit into the socket provided at the rear of the Radio chassis. This aerial can be obtained from your local Philco distributor. A ground connection is not required with either type of installation.

POWER SUPPLY: 115 volts, 60 cycle A. C.

These models can also be operated on 25 cycle current. To do this it is necessary to replace the power transformer with a 25 cycle as indicated in the parts lists.

POWER CONSUMPTION:

FREQUENCY TUNING RANGES: 540 to 1720 K. C.; 2.2 to 7.0 M. C.; 9.0 to 12.0 M. C.

INTERMEDIATE FREQUENCY: 455 K. C.

AUDIO OUTPUT: 2 watts.

PHILCO TUBES USED: Model 41-250; XXL, R. F. mixer; XXL Oscillator; two 7B7, I. F. amplifiers; 7C6, 2nd detector; 1st audio, A. V. C.; two 11 audio output, and an 84 rectifier. Model 41-255; XXL, R. F. mixer; XXL oscillator; 2 7B7, I. F. amplifiers; 7A6, 2nd detector; 7C6 1st audio, A. V. C.; two 41 audio output, and an 84 rectifier.

CABINET DIMENSIONS:

Model	Height	Width	Depth
41-250	11"	19"	13"
41-255	10 1/2"	19 3/4"	13 3/4"

REPLACEMENT PARTS

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
1	Loop Aerial	76-1090	36	Condenser (.05 mfd., 200 volts)	30-4519			
2	Compensator (Aerial 12 M. C.)	31-6308	37	3rd I. F. Transformer	32-3484			
3	R. F. Transformer (Broadcast)	32-3485	37A	Resistor (47,000 ohms, Part of 37)	33-347339			
3A	R. F. Transformer (Police) Part of 3		37B	Mica Condenser (100 Mmf. Part of 37)	33-4137			
4	Mica Condenser (250 Mmf.)	60-125157	37C	Mica Condenser (100 Mmf. Part of 37)	33-4137			
5	Resistor (22,000 ohms)	33-522339	37D	Compensator (Part of 37)				
6	Condenser (.05 mfd., 200 volts)	30-4519	37E	Mica Condenser (100 Mmf.)	60-110157			
7	Mica Condenser (15 Mmf.)	60-015137	38	Condenser (.01 mfd., 400 volts)	30-4572			
8	R. F. Transformer (S. W.)	32-3481	39	Resistor (470,000 ohms)	33-447339			
9	Silver Mica Condenser (98 Mmf.)	30-1186	40	Mica Condenser (50 Mmf.)	60-050137			
10	Tuning Condenser	31-2482	41	Resistor (33,000 ohms)	33-333339			
11	Push-button Switch	42-1587	42	Volume Control	33-5408			
12	Padder Strip (Push-buttons)	31-6366	43	Condenser (.01 mfd., 400 volts)	30-4572			
13	Oscillator Transformer	32-3478	44	Tone Control	33-5403			
14	Resistor (22,000 ohms)	33-522339	45	Condenser (.01 mfd., 400 volts)	30-4572			
15	Resistor (47,000 ohms)	33-247339	46	Resistor (1 megohm)	33-510339			
16	Compensator Dual (1500 K. C. Osc.)	31-6298	47	Resistor (470,000 ohms)	33-447339			
16A	Compensator (6 M. C. Part of 16)		48	Resistor (10 megohms)	33-610339			
17	Compensator Dual (580 K. C.)	31-6355	49	Condenser (.003 ohms, 1000 volts)	30-4469			
17A	Compensator (12 M. C. Osc. Part of 17)		50	Resistor (220,000 ohms)	33-422339			
18	Mica Comp. (1600 Mmf.)	60-216324	51	Mica Condenser (100 mmf.)	60-110157			
19	Silver Mica Condenser (84 Mmf.)	30-1181	52	Condenser (.01 mfd., 400 volts)	30-4572			
20	Osc. Trans. Assem. (7 coils, Push-buttons)	32-3591	53	Resistor (470,000 ohms)	33-447339			
20A	Coils 1, 2, 3, 4, 5, of Assembly (20)	32-3597	54	Resistor (470,000 ohms)	33-447339			
20B	Coils 6, 7 of Assembly (20) Iron Core	32-3041	55	Condenser (.01 mfd., 400 volts)	30-4572			
	Coil Mounting Spring	28-6916	56	Resistor (3900 ohms)	33-239339			
	Centering Cur.	28-6936	57	Condenser (.003 mfd., 400 volts)	30-4469			
21	Mica Condenser Dual (370 Mmf.)	30-1183	58	Output Transformer	32-8120			
21A	Part of 21 (370 Mmf.)		59	Cone Assembly (for Speaker 36-1483-2)	36-4127			
22	Resistor (10,000 ohms)	33-310339		Cone Assembly (for Speaker 36-1483-4)	36-4135			
23	Resistor (33,000 ohms)	33-522339	60	Field Coil (Replace Speaker)				
24	Mica Condenser (250 Mmf.)	60-125157	61	Resistor (15-31-146 ohms)	33-3393			
25	Mica Condenser (250 Mmf.)	60-1155	62	Electrolytic Condenser (12 mfd.)	30-2474			
26	Resistor (33,000 ohms)	33-333339	63	Power Transformer (110 volts, 60 cycle)	32-8121			
27	Electrolytic Cond. (8-16 mfd., 400 volts)	30-2475	64	A. C. Switch (Part of 11)	42-1626			
28	Resistor (18,000 ohms)	33-318339	65	Condenser (.01-01 mfd)	39030DG			
29	Resistor (2.2 megohm)	33-522339	66	Pilot Lamps (Indicator, Push-button)	34-2064			
30	Resistor (4700 ohms)	33-247339		Pilot Lamp (Dial)	34-2210			
31	Condenser (.05 mfd., 400 volts)	30-4518	67	Resistor (1.8 ohms)	33-918336			
32	1st I. F. Transformer	32-3482	68	Condenser (.003 mfd., 400 volts)	30-4469			
33	Condenser (.05 mfd., 200 volts)	30-4519	69	Range Switch	42-1586			
34	2nd I. F. Transformer	32-3483						
35	Resistor (330 ohms)	33-133336						

MISCELLANEOUS PARTS

Bezel	54-4038
Cabinet (Model 41-250T)	10486A
Cabinet (Model 41-255T)	10493A
Clip (Osc. coil Mtg.)	28-5003
Clip (Aerial coil Mtg.)	27-5655
Dial Scale	27-5655
Dial Background (Paper)	27-9690
Dial Scale Rubber Channel (2 req.)	27-4854
Dial pointer	56-1516
Dial Tuning Shaft Assembly	38-9874
'C' washer (Tuning shaft)	28-2043
Spring washer (Tuning shaft Mtg.)	56-1659
Drive Cord	31-2502
Drum and Hub Assembly (Drive cord)	38-9856
Knob Assembly (Tuning Volume)	27-4987
Knob (Push-buttons)	54-4009
Speaker	27-5629
Spring (Dial background Mtg.)	28-8908
Spring (Drive cord)	28-8913
Socket Assembly (Pilotlight-push-button)	38-9607
Socket Assembly (Band indicator)	76-1079
Socket Assembly (Dial lighting)	76-1080
Socket (84 tube)	27-6035
Socket (41 tubes)	27-6036
Socket (XXL Oscillator)	27-6129
Socket (Lokalt tubes)	27-6131
Socket (Aerial)	27-6145
Tab (Television)	27-5648
Tab (OFF-ON)	27-5647
Tab Cover	27-5629
Tab Kit	40-6595

MOUNTING PARTS

Felt Strip (Push-buttons)	27-9689
Palnut (Range Switch)	W-2157
Rubber Grommet (tuning cond. Mtg.)	27-4596
Rubber Washer (Chassis Mtg.)	27-4571
Rubber Corner (Chassis)	27-4564
Screw (P. B. Switch Mtg.)	W-523
Screw (Chassis Mtg.)	W-1345
Screw (Braz Mtg.)	W-2073, FB28
Sleeve (P. B. Switch Mtg.)	56-1505
Washer (Speaker Mtg.)	27-7487
Washer (Chassis Mtg.)	28-5114

PRODUCTION CHANGES

Speaker Part No. 36-1483 changed to Part No. 36-1510-3 and 36-1510-4. The cone assemblies (59) for the new speakers is as follows:

Speaker	36-4166
36-1510-3	36-4172
36-1510-4	36-4172

Beginning with Run 3 the Push-button Oscillator Transformer (20A) was changed from Part No. 32-3597. The new coils can be identified by a dot of green cement at finish of winding.

Beginning with Run 3 the Oscillator Transformer Assembly (7 coils push-buttons) is changed from Part No. 32-3488 to Part No. 32-3591.

On Run 5 radios the padder strip (push-buttons) is changed from Part No. 31-6366 to Part No. 31-6399.

Correction: The Loop Aerial (1) Part No. 76-1090 should be changed to Part No. 76-1095.

R. F. Transformer (3) Part No. 31-3485 should be Part No. 32-3485.

To improve the sensitivity of the above models resistor (28) 18,000 ohms changed to 15,000 ohms Part No. 33-315339.

Beginning with Run 5 a new band indicator and scale was used on these models, — the Part Numbers are as follows:

Drive Cord (Band Indicator)	31-2550, Spring for Drive Cord	28-8054,
Dial Scale	27-5685, Pilot Lamp Assembly (Band Indicator)	70-1171, Pulley
(Band Indicator)	56-2035, Sleeve (Pulley Mounting)	56-1926, Speed Nut
		W-2210.

Note: Dial Scale 27-5606 is used on this model prior to Run 5.

The band switch (69) on diagram Part No. 42-1586 was also changed to Part No. 42-1646 on Run 5 receivers.

To improve the bass compensation action in the volume control circuit, resistor (41) 33,000 ohms was changed to 100,000 ohms, Part No. 33-410339.

Condenser (.01 mfd., 400 volts) was also changed to .003 mfd., 400 volts, Part No. 30-4469. These changes were incorporated in models marked Run 7.

MODELS 41-250 AND 41-255 (CONTINUED)

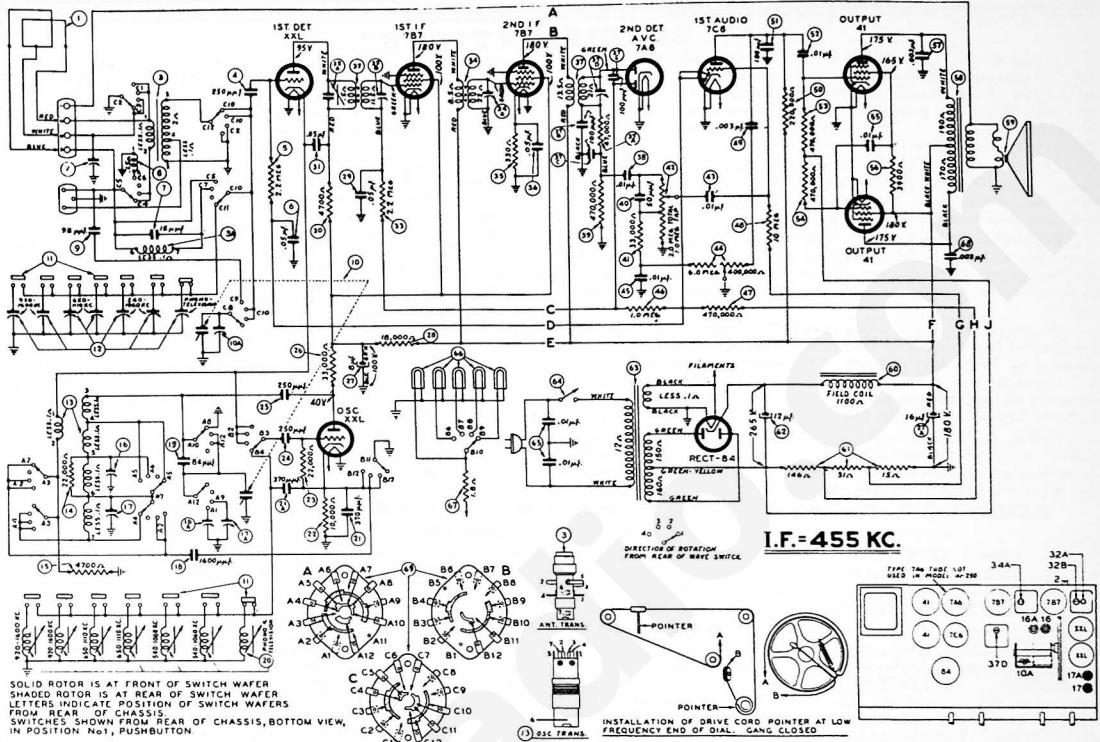


FIG. 1 — SCHEMATIC DIAGRAM — MODELS 41-250, 41-255

The above diagram is the complete electrical circuit for Model 41-255. The same general circuit is also used in Model 41-250 with the exception of the 2nd detector, 1st audio, A. V. C. wiring which is shown in Fig. 4 below.

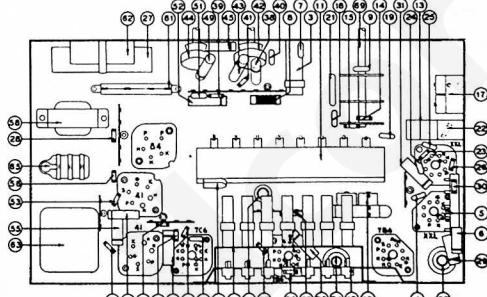


FIG. 2 — LOCATIONS OF PARTS AND TUBES UNDERSIDE OF CHASSIS — MODEL 41-250

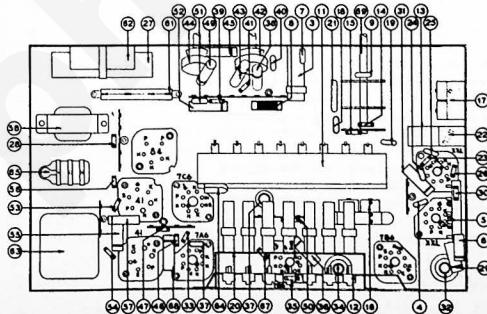


FIG. 3 — LOCATIONS OF PARTS AND TUBES UNDERSIDE OF CHASSIS — MODEL 41-255

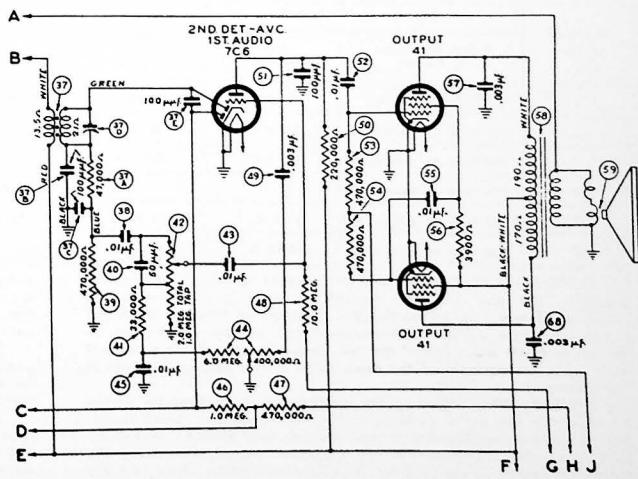


FIG. 4 — 2ND DETECTOR AND AUDIO CIRCUIT MODEL 41-250