ALIGNING PROCEDURE

MODEL S-1726

OPERA- TIONS	SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL	ADJUST
	FREQUENCY	CONNECTION	DOMINI CAPACITI	INSTRUCTIONS	PADDER
	Press the automatic	push button until "DIAL" appear	in the window and statio	ns can be tuned in by manual	tuning
1	455 K. C.	To Antenna Receptacle on Radio	.1 mfd.	Note 1	8 9 0 0 8 9 0 0
2	455 K. C.	To Antenna Receptacle on Radio	.1 mfd.	Note 1	① minimum
3	1400 K, C.	To Antenna Receptacle on Radio	30 mmfd. Note 2	Set tuning control at 1400 K. C.	3
4	580 K. C.	To Antenna Receptacle on Radio	30 mmfd. Note 2	Set tuning control at 580 K. C.	Note 3
5	1400 K. C.	To Antenna Receptacle on Radio	30 mmfd. Note 2	Set tuning control at 1400 K. C.	② Note 4

Make all adjustments for maximum reading on the output meter unless otherwise specified.

NOTE 1 - Turn the tuning control knob clockwise as far as it will go.


NOTE 2 — Connect the Antenna lead, Part No. 95-0120, to the antenna receptacle on the radio. Connect a 30 mmfd. Condenser in series between the signal generator and the antenna lead. Ground the shield pigtail to the signal generator.

NOTE 3 — Rotate the tuning control when adjusting the Low Frequency screw 3. Tune to the signal and adjust the screw for maximum output. Turn the tuning control knob slightly, first one way then the other, for maximum output. Repeat this procedure until no further improvement is noticed.

NOTE 4 — When the Antenna Stage adjustment is made with the Radiio installed in the car, the Radio Antenna lead must be connected to the Cowl Antenna in the usual manner. Connect the signal generator output lead to a wire placed near the car antenna lead but not connected to it and adjust padder 0 for maximum signal at 1400 K. C.


MODEL F-1740

1ST I F TRANS (B) 785 TUBE 727 TUBE 99 HF PADDER (9) (7) (9) (9) (3) (6) PADDER (2) ANTENNA (2) ANTENNA (3) ANTENNA (4) ANTENNA (5) ANTENNA (6) ANTENNA (7) ANTENNA (7) ANTENNA (8) ANTENNA (8) ANTENNA (9) ANTENNA (9) ANTENNA (10) ANTENNA (1

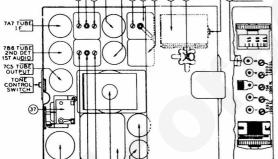

23 SPEAKER TY4 TUBE

MODEL S-1726

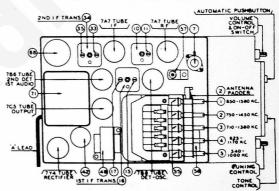

MODEL F-1740

OPERA- TIONS	SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL	ADJUST
	FREQUENCY	CONNECTION	DUMMT CAPACITY	INSTRUCTIONS	PADDER
Pres	s the Automatic Sta	tion Selector button until "DIAL"	appears in the window an	d stations can be tuned in by M	anual Tuning.
1	455 K. C.	To Antenna Receptacle on Radio	,1 mfd.	Note 2	99 99 19 17 99 99 19 17
2	455 K. C.	To Antenna Receptacle on Radio	.1 mfd.	Note 2	(1) Minimum
3	1580 K. C.	To Antenna Receptacle on Radio	See Note 1	Note 2	9
4	1400 K. C.	To Antenna Receptacle on Radio	See Note 1	Set Tuning Condenser at 1400 K. C.	•
5	580 K. C.	To Antenna Receptacle on Radio	See Note 1	Set Tuning Condenser at 580 K. C.	⊗ Note 3
6	1580 K. C.	To Antenna Receptacle on Radio	See Note 1	Note 2	9
7	1400 K. C.	To Antenna Receptacle on Radio	See Note 1	Set Tuning Condenser at 1400 K. C.	③ Note 4