

Philco Radio & Television Corp.

Model: 37-93

Chassis:

Year: Pre October 1937

Power:

Circuit:

IF:

Tubes:

Bands:

Resources

[Riders Volume 8 - PHILCO 8-21](#)

[Riders Volume 8 - PHILCO 8-22](#)

PHILCO RADIO & TELEV. CORP.

MODEL 37-93
Schematic
Parts

Type of Circuit: Superheterodyne, with pentode audio output circuit.
Dial Tuning Mechanism: Vernier, 5 to 1 ratio.
Power Supply: Voltage 115, 115, 110/220; Frequency 50 to 60 cycles, 25 to 60 cycles, 50 to 60 cycles; Consumption 50 watts, 50 watts, 50 watts

Intermediate Frequency: 470 K. C.
Undistorted Output: 3 watts.
Philco Tubes Used: Five; one 6A8G, one 6F6G, one 6K7G, one 5Y4G, one 6R7G.
Tuning Range: 530 to 1720 K. C.
Speaker: SB2.

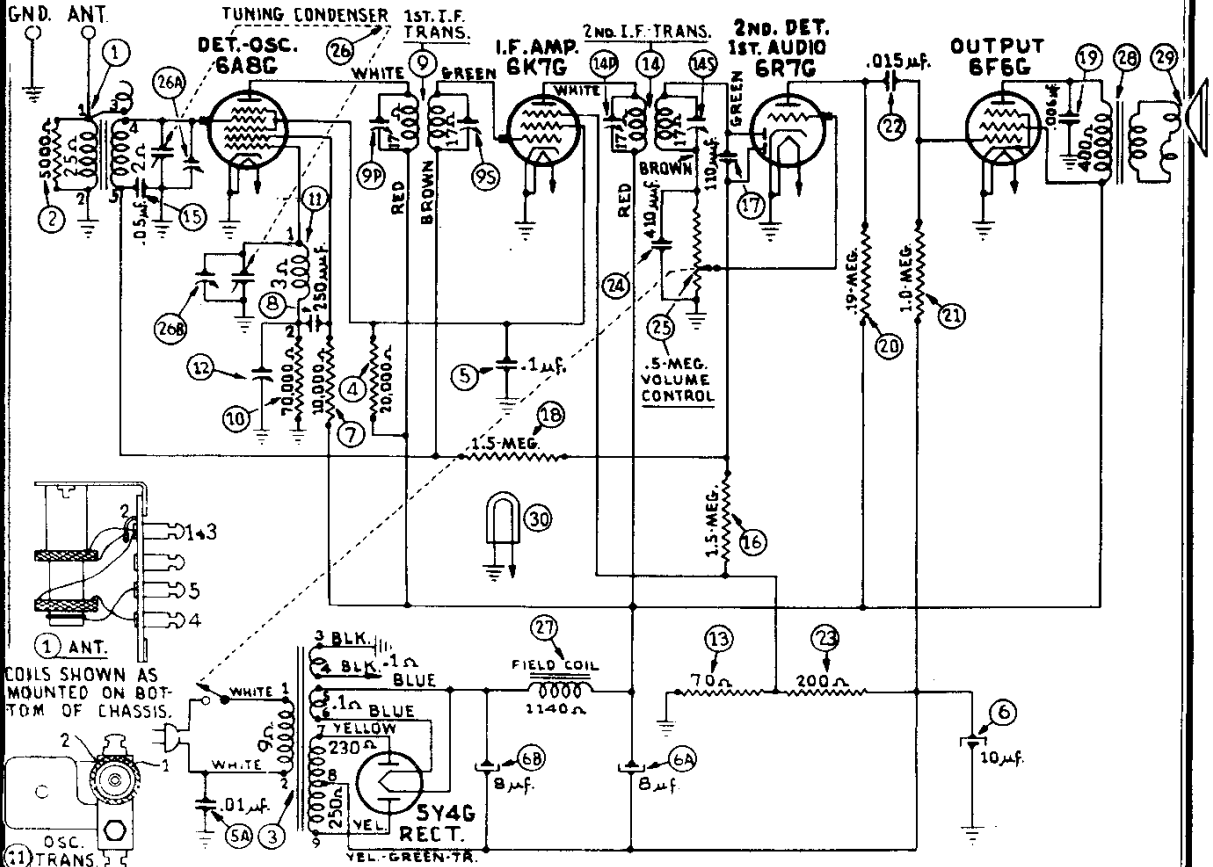


Fig. 4. Schematic Diagram, Model 37-93

I. F. PEAK 470 KC

Replacement Parts — Model 37-93

PRICES SUBJECT TO CHANGE
WITHOUT NOTICE

Schem. No.	Description	Part No.	List Price	Schem. No.	Description	Part No.	List Price
1	Ant. Transformer	32-2329	\$1.00	24	Condenser (410 mmfd. mica)	30-1000	\$0.25
2	Resistor (5000 ohms)	33-250339	.20	25	Volume Control	33-5193	1.45
3	Power Transformer 115 volts 50 to 60 cycles	32-7780	3.60	26	Tuning Condenser	31-1932	2.75
	Power Transformer 110/220 volts 50 to 60 cycles	32-7782	4.00	27	Field Coil Assembly	36-3243	2.40
4	Resistor (20,000 ohms, 1 watt)	33-320439	.20	28	Output Trans.	32-7019	.85
5	Condenser (.01, .1 mfd. Dual Bakelite)	4989FG		29	Cone and Voice Coil Assembly	36-3014	1.00
6	Elect. Cond. (8, 8, 10 mfd.)	30-2073	3.15		Cabinet	10227B	
7	Resistor (10,000 ohms 1/2 watt)	33-310339	.20		Cable A. C.	L-2183	.40
8	Condenser (250 mmfd. mica)	30-1032	.25		Cable (Speaker)	L-2610	.20
9	1st I. F. Transformer Assembly	32-2457			Dial Scale	27-5280	.15
10	Resistor (70,000 ohms, 1/2 watt)	33-370339	.20		Dial Pointer	27-7933	.01
11	Oscillator Trans. Assembly	32-2330	.90		Knob (Tuning and Volume)	27-4282	.10
12	Compensator (osc. series)	Part of (11)			Mtg. Bolt	40-5790	
13	Resistor (70 ohms 1/2 watt)	33-070339	.20		Shield (1st I. F.)	38-7763	.20
14	2nd I. F. Transformer Assembly	32-2459			Shield (2nd I. F.)	38-8146	
15	Condenser (.05 mfd. tubular)	30-4444	.20		Shield (Tube)	28-2726	.10
16	Resistor (1.5 ohms, 1/2 watt)	33-515339	.20		Socket (8 prong)	27-6058	.11
17	Condenser (110 mmfd. mica)	33-1031	.20		Socket (7 prong)	27-6057	.11
18	Resistor (1.5 ohms, 1/2 watt)	33-515339	.20		Speaker SB2	36-1127	5.75
19	Condenser (.006 mfd. tubular)	30-4445	.20		Terminal Panel, (R. F. Trans.)		
20	Resistor (190,000 ohms, 1/2 watt)	33-419339	.20		Vernier Drive Assembly	45-2171	
21	Resistor (1 megohm, 1/2 watt)	33-510339	.20		Washer Flt.	27-7807	.50 C
22	Condenser (.015 mfd. Bakelite)	3793SU	.35				
23	Resistor (200 ohms Bakelite)	33-1210	.20				

CABINET PARTS

Baffle & Silk Assembly..... 40-5988 .30

MODEL 37-93

Alignment, Trimmers
Voltage, Chassis

PHILCO RADIO & TELEV. CORP.

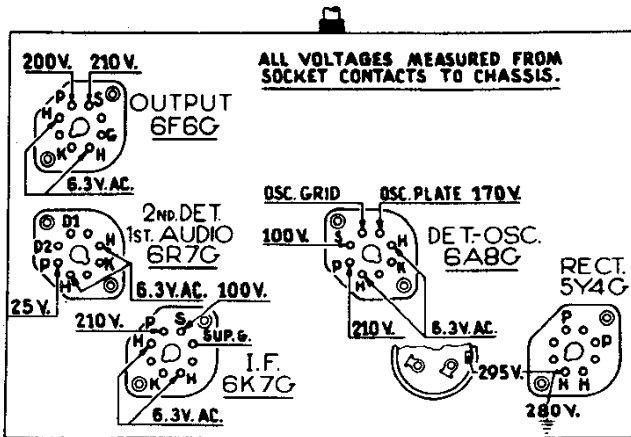


Fig. 1. View of Sockets from Underside Chassis

The voltages indicated by arrows were measured with a Philco #25 Circuit Tester which contains a voltmeter having a resistance of 1000 ohms per volt. Volume Control at minimum, range switch in broadcast position, line voltage 115 A. C.

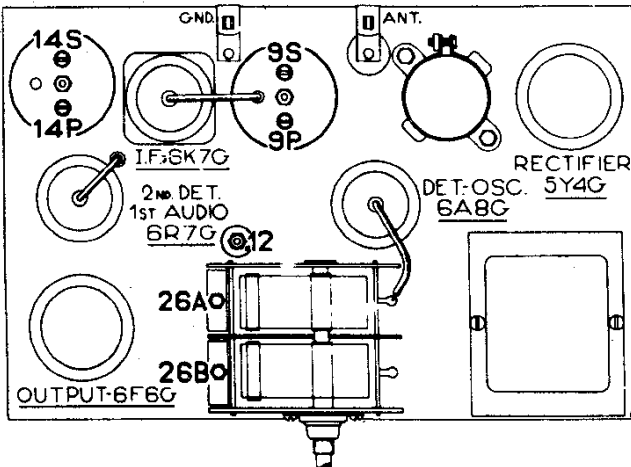


Fig. 2. Locations of R. F. and I. F. Compensators

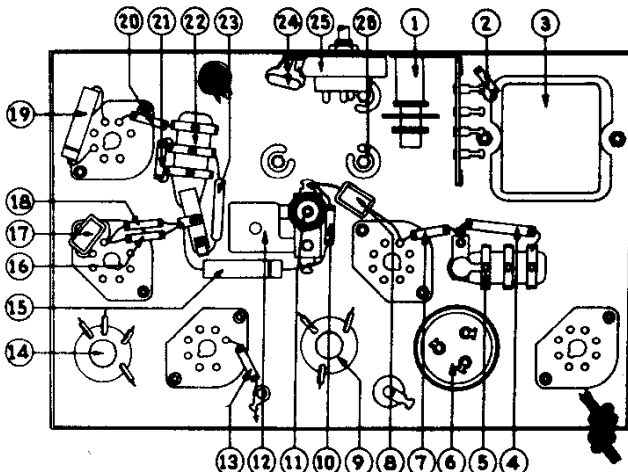


Fig. 3. Part Locations, underside of Chassis

RADIO FREQUENCY CIRCUIT

Tuning Range: 520 to 1720 K. C.

1. Connect the signal generator output lead through a 200 mfd. condenser to the Ant. terminal of the receiver and the generator ground to the chassis.
2. Adjust compensators as follows for maximum output.

Signal Generator	Compensators In Order
1710 K. C., Note B	(26B), (26A)
580 K. C.	(12), Note A
1300 K. C.	(26A)

NOTE A—First tune compensator (12) for maximum output, then vary the tuning condenser of the receiver for maximum output, about the 580 K. C. dial mark. Now turn compensator (26) slightly to the right or left and vary the receiver tuning condenser for maximum output. If the output decreases, set the compensator in the opposite direction. This procedure should be repeated until the output is at a maximum and then varying the tuning condenser is continued until there is no further gain in output reading.

NOTE B—Turn the tuning condenser to the minimum capacity position (extreme clockwise). Insert a .005" (six-thousandth inch) gauge between the stator and rotor plates (left side of condenser facing front). Then turn the condenser counter-clockwise until stator and rotor plate touch gauge. Remove gauge without disturbing setting of condenser and adjust compensators (26B), (26A) for maximum output on a 1710 K. C. signal.

SETTING DIAL POINTER

After compensators are adjusted. Set signal generator for 1000 K. C. and tune receiver for maximum output. Place pointer on tuning condenser shaft at the 1000 K. C. dial mark.

Alignment of Compensators

EQUIPMENT REQUIRED: (1) Signal generator, Philco Model 088 (fundamental frequency 110 to 20,000 K. C.) is the correct instrument for this purpose; (2) output meter, PHILCO MODEL (025) CIRCUIT TESTER incorporates a Sensitive output meter and is recommended; (3) Fibre handle screwdriver (Philco Part No. 27-7059); (4) Fibre wrench Part No. 3164.

OUTPUT METER: The 025 Output Meter is connected to the plate and cathode terminals of the (6F6G) tube. Adjust the meter to use the (0-30) Volt Scale.

INTERMEDIATE FREQUENCY CIRCUIT

1. Set controls as follows:
 - a. Volume control maximum
 - b. Receiver Dial 580 K. C.
 - c. Signal generator 470 K. C.
2. Connect the signal generator output lead through a .1 mfd. condenser to the 6A8G Grid and adjust the Compensators as follows for maximum output (14S), (14P), (9S), and (9P).